

# AIRSTAGE

AIR CONDITIONER

Wall-mounted type

FUJITSU

REFRIGERANT **R32**  
INVERTER

## DESIGN & TECHNICAL MANUAL

*For Cold Climate Region*

INDOOR



ASUH09KTAS  
ASUH12KTAS  
ASUH15KTAS

ASUH09KTAB  
ASUH12KTAB  
ASUH15KTAB

OUTDOOR



AOUH09KTAP1

AOUH12KTAP1  
AOUH15KTAP1

FUJITSU GENERAL LIMITED

**Notices:**

- Product specifications and design are subject to change without notice for future improvement.
- For further details, please check with our authorized dealer.

**Trademarks**

“AIRSTAGE Mobile” is a trademark of FUJITSU GENERAL LIMITED.

Android and Google Play are trademarks of Google LLC.

App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

# CONTENTS

---

<b>Part 1. INDOOR UNIT</b> .....	<b>1</b>
<b>1. Specifications</b> .....	<b>2</b>
<b>2. Wireless LAN control</b> .....	<b>4</b>
2-1. System requirement .....	4
<b>3. Dimensions</b> .....	<b>5</b>
3-1. Models: ASUH09KTAS, ASUH12KTAS, ASUH15KTAS, ASUH09KTAB, ASUH12KTAB, and ASUH15KTAB.....	5
3-2. Pipe exit length from the rear.....	7
<b>4. Wiring diagrams</b> .....	<b>8</b>
4-1. Models: ASUH09KTAS, ASUH12KTAS, ASUH15KTAS, ASUH09KTAB, ASUH12KTAB, and ASUH15KTAB.....	8
<b>5. Capacity table</b> .....	<b>9</b>
5-1. Cooling capacity .....	9
5-2. Heating capacity .....	12
<b>6. Fan performance</b> .....	<b>15</b>
6-1. Air velocity distributions .....	15
6-2. Airflow.....	18
<b>7. Operation noise (sound pressure)</b> .....	<b>21</b>
7-1. Noise level curve .....	21
7-2. Sound level check point.....	22
<b>8. Safety devices</b> .....	<b>23</b>
<b>9. External input and output</b> .....	<b>24</b>
9-1. External input.....	25
9-2. External output .....	28
9-3. Setting of external input and output .....	30
9-4. Details of control input function.....	32
9-5. Details of control output function .....	36
<b>10. Group connection</b> .....	<b>57</b>
<b>11. Remote controller</b> .....	<b>58</b>
11-1. Wireless remote controller .....	58
<b>12. Function settings</b> .....	<b>60</b>
12-1. Function settings by using remote controller .....	60
12-2. Custom code setting for wireless remote controller .....	68
<b>13. Accessories</b> .....	<b>69</b>
13-1. Models: ASUH09KTAS, ASUH12KTAS, ASUH15KTAS, ASUH09KTAB, ASUH12KTAB, and ASUH15KTAB.....	69
<b>14. Optional parts</b> .....	<b>70</b>
14-1. Controllers .....	70
14-2. Others.....	72

## CONTENTS (continued)

---

<b>Part 2. OUTDOOR UNIT</b> .....	<b>73</b>
<b>1. Specifications</b> .....	<b>74</b>
<b>2. Dimensions</b> .....	<b>75</b>
2-1. Model: AOUH09KTAP1 .....	75
2-2. Models: AOUH12KTAP1 and AOUH15KTAP1 .....	76
<b>3. Installation space</b> .....	<b>77</b>
3-1. Models: AOUH09KTAP1, AOUH12KTAP1, and AOUH15KTAP1 .....	77
<b>4. Refrigerant circuit</b> .....	<b>80</b>
4-1. Models: AOUH09KTAP1 and AOUH12KTAP1 .....	80
4-2. Model: AOUH15KTAP1 .....	81
<b>5. Wiring diagrams</b> .....	<b>82</b>
5-1. Models: AOUH09KTAP1, AOUH12KTAP1, and AOUH15KTAP1 .....	82
<b>6. Capacity compensation rate for pipe length and height difference</b> .....	<b>83</b>
6-1. Models: AOUH09KTAP1, AOUH12KTAP1, and AOUH15KTAP1 .....	83
<b>7. Additional charge calculation</b> .....	<b>84</b>
7-1. Model: AOUH09KTAP1 .....	84
7-2. Model: AOUH12KTAP1 .....	84
7-3. Model: AOUH15KTAP1 .....	84
<b>8. Airflow</b> .....	<b>85</b>
8-1. Model: AOUH09KTAP1 .....	85
8-2. Model: AOUH12KTAP1 .....	85
8-3. Model: AOUH15KTAP1 .....	85
<b>9. Operation noise (sound pressure)</b> .....	<b>86</b>
9-1. Noise level curve .....	86
9-2. Sound level check point.....	87
<b>10. Electrical characteristics</b> .....	<b>88</b>
<b>11. Safety devices</b> .....	<b>89</b>
<b>12. Accessories</b> .....	<b>90</b>
12-1.Models: AOUH09KTAP1, AOUH12KTAP1, and AOUH15KTAP1 .....	90

# **Part 1. INDOOR UNIT**

---

## **WALL-MOUNTED TYPE:**

**ASUH09KTAS**

**ASUH12KTAS**

**ASUH15KTAS**

**ASUH09KTAB**

**ASUH12KTAB**

**ASUH15KTAB**

# 1. Specifications

Type				Wall mounted				
				Inverter, Heat pump				
Model name				ASUH09KTAS ASUH09KTAB	ASUH12KTAS ASUH12KTAB	ASUH15KTAS ASUH15KTAB		
Power supply intake				Outdoor unit				
System power supply		Voltage		208/230				
		Frequency		60				
		Available voltage range		187—253				
Indoor unit power supply (from outdoor unit)				208/230				
Capacity	Cooling	Rated	kW	2.64	3.52	4.25		
			Btu/h	9,000	12,000	14,500		
		Min.—Max.	kW	0.92—4.45	0.92—5.07	1.14—5.69		
			Btu/h	3,100—15,200	3,100—17,300	3,900—19,400		
		Heating	47°FDB (Outdoor temp.)	Rated	kW	3.52	4.48	5.10
				Btu/h	12,000	15,300	17,400	
	Min.—Max.		kW	0.97—7.03	1.32—8.00	1.32—8.21		
			Btu/h	3,300—24,000	4,500—27,300	4,500—28,000		
	17°FDB (Outdoor temp.)*1		Rated	kW	2.17	2.81	3.17	
			Btu/h	7,400	9,600	10,800		
		Max.	kW	5.71	6.68	7.12		
			Btu/h	19,500	22,800	24,300		
5°FDB (Outdoor temp.)*2	Rated	kW	4.98	4.75	5.39			
	Btu/h	17,000	16,200	18,400				
	Max.	kW	4.980	6.005	6.890			
		Btu/h	17,000	20,500	23,500			
Input power	Cooling	Rated	kW	0.47	0.72	0.94		
				0.12—1.10	0.12—1.32	0.16—1.63		
		Heating	47°FDB (Outdoor temp.)	Rated	0.65	0.92	1.08	
					0.16—2.29	0.21—2.23	0.21—2.30	
			17°FDB (Outdoor temp.)*1	Rated	0.585	0.810	0.920	
				Max.	2.19	2.58	3.11	
	5°FDB (Outdoor temp.)*2		Rated	2.01	1.81	2.12		
			Max.	2.30	2.75	3.45		
	Fan	HIGH MED-HIGH MED MED-LOW LOW QUIET	W	26.3	31.0	36.2		
				20.9	23.5	28.6		
				17.5		24.2		
				14.4		19.1		
				11.8		13.5		
				3.9		6.2		
				3.9		6.2		
Current	Cooling	Rated	A	2.2	3.3	4.3		
	Heating		3.0	4.2	4.9			
EER2	Cooling	Btu/hW	19.1	16.7	15.4			
COP2	Heating	kW/kW	5.42	4.88	4.72			
SEER2	Cooling	Btu/hW	33.5	31.5	28.7			
HSPF2	Heating	Btu/hW	14.0	13.7	13.0			
Power factor	Cooling	%	92.9	94.9	95.0			
	Heating		94.2	95.2	95.8			
Moisture removal			pints/h (L/h)	3.6 (1.7)	3.8 (1.8)	5.1 (2.4)		
Maximum operating current*3		Cooling	A	6.4	7.4	8.9		
		Heating		10.9	12.9	15.9		
Fan	Airflow rate	Cooling	CFM (m <sup>3</sup> /h)	HIGH	483 (820)	512 (870)	547 (930)	
				MED-HIGH	441 (750)	465 (790)	500 (850)	
				MED	412 (700)		465 (790)	
				MED-LOW	377 (640)		424 (720)	
				LOW	347 (590)		371 (630)	
				QUIET	206 (350)		259 (440)	
		Heating	HIGH	547 (930)	565 (960)			
			MED-HIGH	471 (800)	512 (870)			
			MED	412 (700)	465 (790)			
			MED-LOW	371 (630)	412 (700)			
			LOW	336 (570)	371 (630)			
			QUIET	212 (360)	230 (390)			
			Type × Qty		Crossflow fan × 1			
			Motor output		W	61		
Sound pressure level*4	Cooling	dB (A)	HIGH	43	44	45		
			MED-HIGH	42	43	44		
			MED	39		43		
			MED-LOW	37		40		
			LOW	35		37		
			QUIET	23		26		
	Heating	HIGH	45	46				
		MED-HIGH	42	45				
		MED	38	42				
		MED-LOW	36	38				
		LOW	34	36				
		QUIET	23		26			
		Dimensions (H × W × D)		in (mm)	Main: 15-1/8 × 28-1/4 × 1-3/16 (384 × 718 × 30)			
					Sub 1: 3-5/16 × 28-1/4 × 1/2 (84 × 718 × 13.3)			
Fin pitch		FPI	Main: 21					
			Sub 1: 18					
Rows × Stages			Main: 3 × 24					
			Sub 1: 1 × 4					
Pipe type			Sub 2: 1 × 6					
			Copper tube					
Fin type			Aluminum					

Type			Wall mounted		
			Inverter, Heat pump		
Model name			ASUH09KTAS ASUH09KTAB	ASUH12KTAS ASUH12KTAB	ASUH15KTAS ASUH15KTAB
Enclosure	Material	Polystyrene			
	Color	KTAS: White Approximate color of Munsell 9PB 9.1/0.2 KTAB: Soft black Approximate color of Munsell N3/			
Dimensions (H × W × D)	Net	in (mm)	11-5/8 × 35-3/16 × 11 (295 × 894 × 280)		
	Gross		14-3/16 × 39 × 14-9/16 (360 × 990 × 370)		
Weight	Net	lb (kg)	31 (14)		
	Gross		40 (18)		
Connection pipe	Size	Liquid	Ø1/4 (Ø6.35)		
		Gas	Ø3/8 (Ø9.52)		
	Method	Flare			
Drain hose	Material	Polypropylene + Linear low-density polyethylene			
	Tip diameter	in (mm)	Ø17/32 (Ø13.8) (I.D.), Ø5/8 to 21/32 (Ø15.8 to 16.7) (O.D.)		
Operation range	Cooling	°F (°C)	64 to 90 (18 to 32)		
		%RH	80 or less		
	Heating	°F (°C)	60 to 86 (16 to 30)		
Remote controller			Wireless (Option: Wired, Mobile app <sup>*5</sup> [AIRSTAGE Mobile])		
<b>NOTES:</b>					
<ul style="list-style-type: none"> <li>• Specifications are based on the following conditions: <ul style="list-style-type: none"> <li>– Cooling: Indoor temperature of 80°FDB/67°FWB (26.67°CDB/19.44°CWB), and outdoor temperature of 95°FDB/75°FWB (35°CDB/23.9°CWB).</li> <li>– Heating: Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 47°FDB/43°FWB (8.33°CDB/6.11°CWB).</li> <li>– *1: Heating (17°F): Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 17°FDB/15°FWB (-8.33°CDB/-9.44°CWB).</li> <li>– *2: Heating (5°F): Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 5°FDB/4°FWB (-15.0°CDB/-15.56°CWB).</li> <li>– Test conditions are based on AHRI 210/240 2023.</li> <li>– Pipe length: 25 ft (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)</li> </ul> </li> <li>• Protective function might work when using it outside the operation range.</li> <li>• *3: Maximum current: <ul style="list-style-type: none"> <li>– The maximum value when operated within the operation range.</li> <li>– The total current of indoor unit and outdoor unit.</li> </ul> </li> <li>• *4: Sound pressure level: <ul style="list-style-type: none"> <li>– Measured values in manufacturer's anechoic chamber.</li> <li>– Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.</li> </ul> </li> <li>• *5: Available on Google Play™ store or on App Store®.</li> </ul>					

## 2. Wireless LAN control

By installing mobile app on a smart device, several functions can be controlled from outside the house.

### 2-1. System requirement

Before using this function, prepare the following items:

- **Wireless router:**

Wireless LAN standard	IEEE802.11b/g/n
Frequency bands*	<ul style="list-style-type: none"> <li>• U.S.A., Canada: 2.4 GHz (1ch—11ch)</li> <li>• Other countries: 2.4 GHz (1ch—13ch)</li> </ul>
Network security standard	<ul style="list-style-type: none"> <li>• Open</li> <li>• WEP</li> <li>• WPA (PSK)</li> <li>• WPA2 Personal (PSK)</li> <li>• WPS for same-LAN registration</li> </ul>

\*: Usable only in the country or region where you purchased the product.

To check whether your wireless router complies with the network security standards listed above, refer to the operation manual.

- **Smartphone:**

App-compliant operating system	iOS	Check the latest version of supported OS at Google Play store or App Store.
	Android™	

- **AIRSTAGE Mobile (mobile application):**

Mobile app is available on Google Play store or on App Store.

After installation of mobile app, user registration is required. For user registration and setup information, refer to Setting Manual attached with the product.


For the latest version of the wireless LAN control manuals, refer to the following web site.

<https://www.fujitsu-general.com/global/support/>

### 3. Dimensions

#### 3-1. Models: ASUH09KTAS, ASUH12KTAS, ASUH15KTAS, ASUH09KTAB, ASUH12KTAB, and ASUH15KTAB



Unit: in (mm)

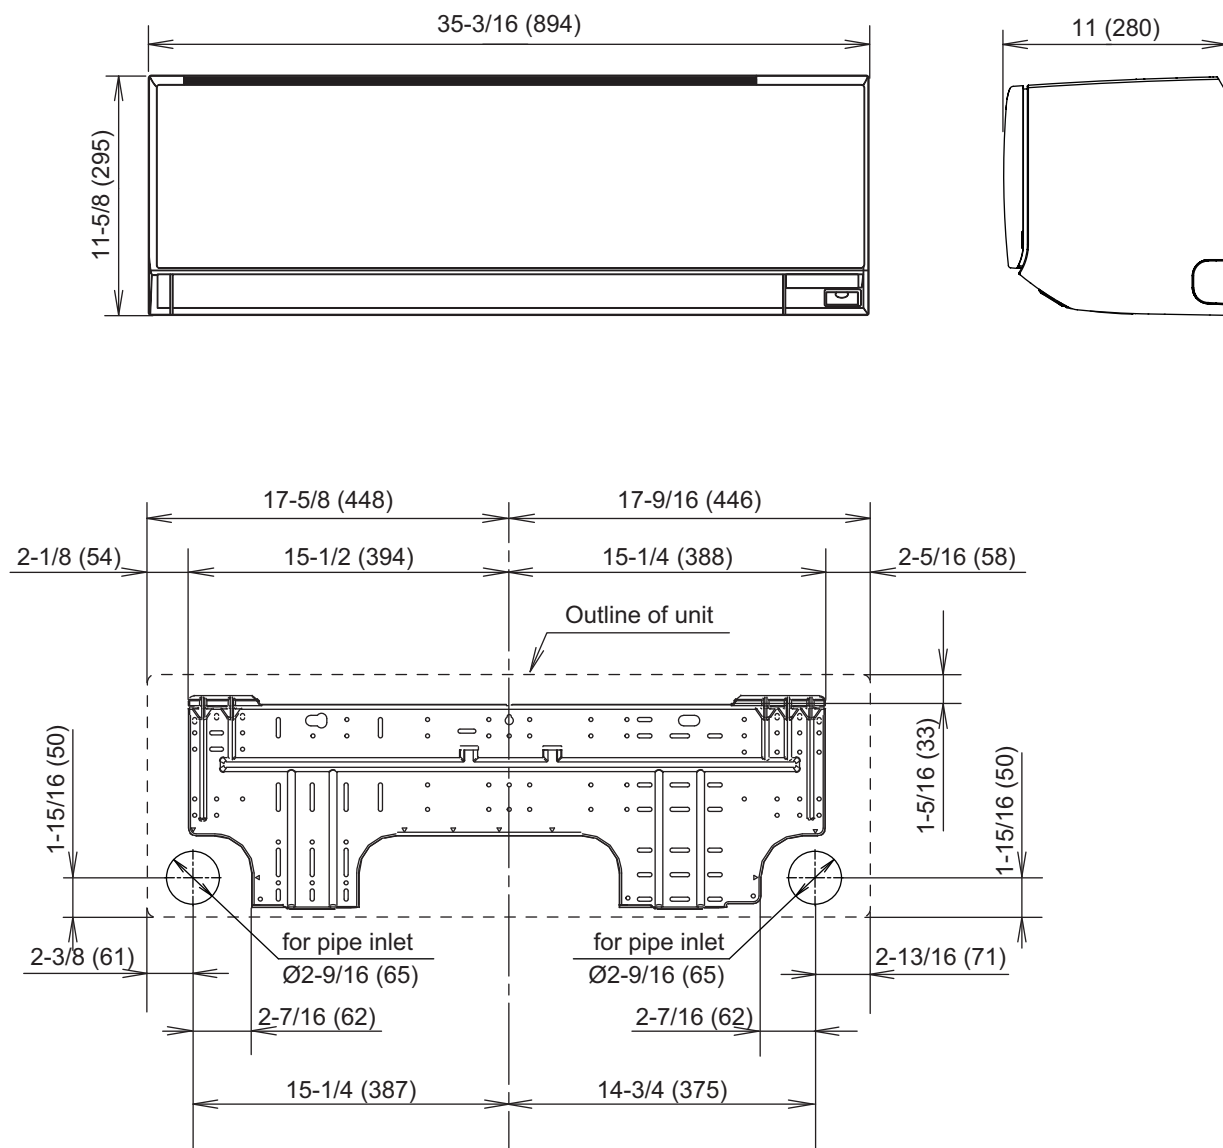

## Installation space requirement

Provide sufficient installation space for product safety.

Unit: in (mm)

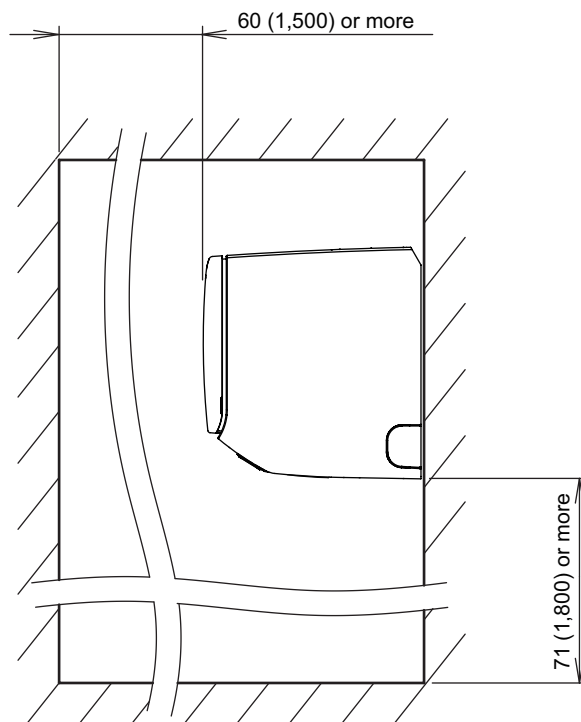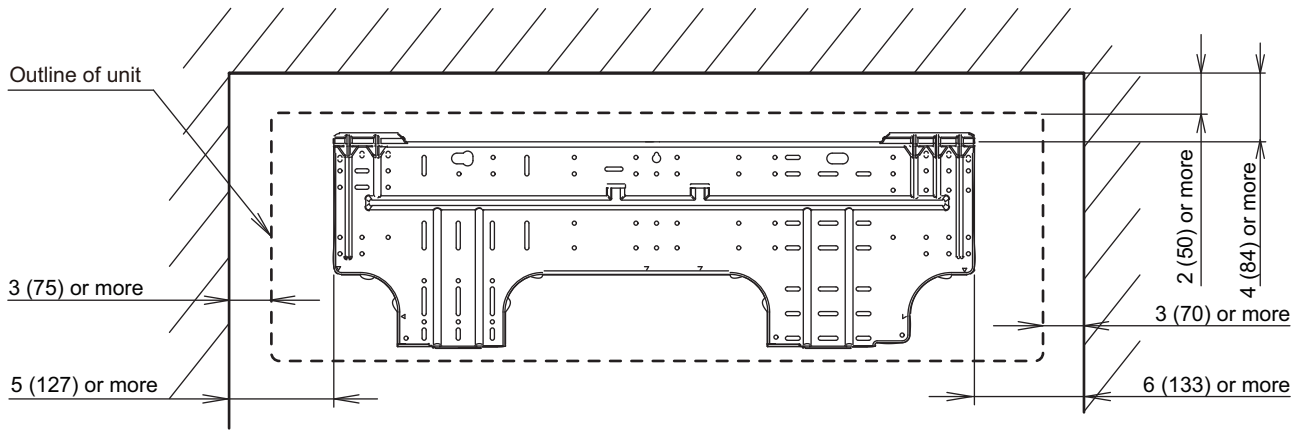


## 3-2. Pipe exit length from the rear

Design the system considering the length of the pipes or hose exiting from the rear of the indoor unit.

**NOTE:** Detailed shapes of the indoor unit and the tip of each pipe or hose may vary depending on the model.

Unit: in (mm)

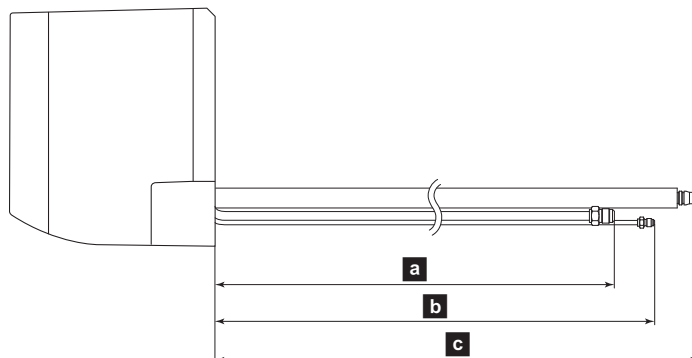

Model name	Approximate length		
	<b>a</b> Gas pipe	<b>b</b> Liquid pipe	<b>c</b> Drain hose
ASUH09-15KTAS ASUH09-15KTAB	24-3/16 (615)	26 (660)	16-9/16 (420)



## 5. Capacity table

Capacity tables show each of following values calculated based on the outdoor temperature and the indoor temperature, under given Airflow Rate (AFR):

**For cooling capacity:** Total Capacity (TC), Sensible Heat Capacity (SHC), and Input Power (IP)

**For heating capacity:** Total Capacity (TC) and Input Power (IP)

### 5-1. Cooling capacity

#### ■ Models: ASUH09KTAS and ASUH09KTAB

AFR		CFM												483						
		Indoor temperature																		
		64			70			75			80			85			90			
		54			60			63			67			71			73			
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	
	°FWB	kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW	
14	9.10	8.30	0.50	9.90	9.00	0.51	10.20	9.30	0.52	11.20	10.20	0.53	12.00	10.90	0.53	12.70	11.60	0.54		
23	9.60	8.40	0.42	10.50	9.20	0.43	10.80	9.50	0.43	11.80	10.40	0.44	12.60	11.10	0.45	13.40	11.80	0.45		
32	9.80	8.40	0.34	10.70	9.20	0.35	11.00	9.40	0.35	12.10	10.30	0.36	12.90	11.00	0.36	13.80	11.70	0.37		
41	10.20	8.60	0.28	11.20	9.40	0.29	11.50	9.70	0.29	12.60	10.70	0.30	13.50	11.40	0.30	14.30	12.10	0.30		
50	10.60	8.90	0.23	11.60	9.70	0.23	12.00	10.00	0.23	13.20	11.00	0.24	14.00	11.70	0.24	14.90	12.50	0.24		
59	9.70	8.10	0.28	10.60	8.80	0.28	10.90	9.10	0.29	12.00	10.00	0.29	12.80	10.60	0.29	13.60	11.30	0.30		
67	8.70	7.20	0.33	9.60	7.90	0.34	9.90	8.20	0.34	10.80	8.90	0.35	11.50	9.50	0.35	12.30	10.20	0.35		
77	8.30	7.20	0.37	9.00	7.90	0.38	9.30	8.20	0.38	10.20	9.00	0.39	10.90	9.50	0.39	11.60	10.20	0.40		
87	7.80	7.30	0.41	8.50	8.00	0.42	8.80	8.20	0.42	9.60	9.00	0.43	10.20	9.60	0.43	10.90	10.20	0.44		
95	7.30	7.30	0.45	8.00	8.00	0.46	8.20	8.20	0.46	9.00	9.00	0.47	9.60	9.60	0.47	10.20	10.20	0.48		
104	7.10	7.10	0.61	7.80	7.80	0.62	8.10	8.10	0.63	8.80	8.80	0.64	9.40	9.40	0.64	10.00	10.00	0.65		
115	6.80	6.80	0.69	7.40	7.40	0.69	7.70	7.70	0.70	8.40	8.40	0.72	8.90	8.90	0.72	9.50	9.50	0.73		
122	6.20	6.10	0.78	6.80	6.60	0.79	7.00	6.80	0.80	7.60	7.50	0.82	8.10	8.00	0.83	8.70	8.50	0.83		

AFR		m <sup>3</sup> /h												820						
		Indoor temperature																		
		17.8			21.1			23.9			26.7			29.4			32.2			
		12.2			15.6			17.2			19.4			21.7			22.8			
Outdoor temperature	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	
	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
-10.0	2.66	2.42	0.50	2.91	2.65	0.51	3.00	2.73	0.52	3.29	2.99	0.53	3.50	3.19	0.53	3.74	3.40	0.54		
-5.0	2.81	2.47	0.42	3.07	2.71	0.43	3.16	2.79	0.43	3.47	3.06	0.44	3.70	3.26	0.45	3.94	3.47	0.45		
0.0	2.87	2.45	0.34	3.14	2.68	0.35	3.24	2.76	0.35	3.55	3.03	0.36	3.78	3.23	0.36	4.03	3.44	0.37		
5.0	2.99	2.53	0.28	3.28	2.77	0.29	3.38	2.85	0.29	3.70	3.13	0.30	3.94	3.33	0.30	4.20	3.55	0.30		
10.0	3.12	2.61	0.23	3.41	2.85	0.23	3.52	2.94	0.23	3.85	3.22	0.24	4.11	3.43	0.24	4.38	3.66	0.24		
15.0	2.84	2.36	0.28	3.11	2.58	0.28	3.20	2.66	0.29	3.51	2.92	0.29	3.74	3.11	0.29	3.99	3.32	0.30		
19.4	2.56	2.12	0.33	2.80	2.32	0.34	2.89	2.39	0.34	3.17	2.62	0.35	3.38	2.79	0.35	3.60	2.98	0.35		
25.0	2.42	2.12	0.37	2.65	2.32	0.38	2.73	2.40	0.38	2.99	2.63	0.39	3.19	2.80	0.39	3.40	2.98	0.40		
30.6	2.28	2.13	0.41	2.49	2.33	0.42	2.57	2.40	0.42	2.82	2.63	0.43	3.00	2.81	0.43	3.20	2.99	0.44		
35.0	2.14	2.14	0.45	2.34	2.34	0.46	2.41	2.41	0.46	2.64	2.64	0.47	2.81	2.81	0.47	3.00	3.00	0.48		
40.0	2.09	2.09	0.61	2.29	2.29	0.62	2.36	2.36	0.63	2.59	2.59	0.64	2.76	2.76	0.64	2.94	2.94	0.65		
46.1	1.99	1.99	0.69	2.18	2.18	0.69	2.24	2.24	0.70	2.46	2.46	0.72	2.62	2.62	0.72	2.80	2.80	0.73		
50.0	1.81	1.78	0.78	1.98	1.95	0.79	2.04	2.01	0.80	2.24	2.20	0.82	2.39	2.35	0.83	2.54	2.50	0.83		

# Models: ASUH12KTAS and ASUH12KTAB

AFR	CFM	512
-----	-----	-----

		Indoor temperature																	
		64			70			75			80			85			90		
		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	°FWB	kBTu			kBTu			kBTu			kBTu			kBTu			kBTu		
	14	9.20	8.00	0.34	10.10	8.70	0.34	10.40	9.00	0.34	11.40	9.90	0.35	12.10	10.50	0.35	12.90	11.20	0.36
	23	9.30	8.10	0.32	10.20	8.80	0.32	10.50	9.10	0.33	11.50	10.00	0.33	12.20	10.60	0.34	13.10	11.30	0.34
	32	9.40	8.10	0.30	10.30	8.90	0.31	10.60	9.10	0.31	11.60	10.00	0.32	12.40	10.70	0.32	13.20	11.40	0.32
	41	9.80	8.40	0.29	10.80	9.20	0.30	11.10	9.50	0.30	12.10	10.40	0.31	12.90	11.10	0.31	13.80	11.80	0.31
	50	10.20	8.70	0.28	11.20	9.50	0.29	11.60	9.80	0.29	12.70	10.80	0.30	13.50	11.50	0.30	14.40	12.20	0.30
	59	10.30	8.60	0.35	11.30	9.40	0.35	11.60	9.70	0.36	12.70	10.70	0.37	13.50	11.40	0.37	14.40	12.10	0.37
	67	10.30	8.50	0.42	11.30	9.30	0.42	11.60	9.60	0.43	12.80	10.50	0.43	13.60	11.20	0.44	14.50	12.00	0.44
	77	10.10	8.70	0.51	11.10	9.50	0.51	11.40	9.80	0.52	12.50	10.70	0.53	13.30	11.40	0.53	14.20	12.20	0.54
	87	9.90	8.80	0.60	10.90	9.60	0.61	11.20	9.90	0.61	12.30	10.90	0.62	13.10	11.60	0.63	13.90	12.40	0.64
	95	9.70	9.00	0.69	10.60	9.80	0.70	11.00	10.10	0.71	12.00	11.10	0.72	12.80	11.80	0.73	13.60	12.60	0.73
	104	9.20	8.50	0.81	10.10	9.30	0.82	10.40	9.50	0.83	11.40	10.50	0.84	12.10	11.10	0.85	12.90	11.90	0.86
	115	8.60	8.10	0.92	9.40	8.90	0.93	9.60	9.10	0.94	10.60	10.00	0.96	11.30	10.70	0.97	12.00	11.40	0.98
	122	7.90	7.90	0.97	8.70	8.60	0.98	8.90	8.90	0.99	9.80	9.70	1.01	10.40	10.40	1.02	11.10	11.00	1.03

AFR	m <sup>3</sup> /h	870
-----	-------------------	-----

		Indoor temperature																	
		17.8			21.1			23.9			26.7			29.4			32.2		
		12.2			15.6			17.2			19.4			21.7			22.8		
Outdoor temperature	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	°CWB	kW			kW			kW			kW			kW			kW		
	-10.0	2.69	2.34	0.34	2.95	2.56	0.34	3.04	2.64	0.34	3.33	2.90	0.35	3.55	3.09	0.35	3.78	3.29	0.36
	-5.0	2.73	2.36	0.32	2.98	2.58	0.32	3.07	2.66	0.33	3.37	2.92	0.33	3.59	3.11	0.34	3.83	3.31	0.34
	0.0	2.76	2.38	0.30	3.02	2.60	0.31	3.11	2.68	0.31	3.41	2.94	0.32	3.63	3.13	0.32	3.87	3.34	0.32
	5.0	2.88	2.47	0.29	3.15	2.70	0.30	3.25	2.78	0.30	3.56	3.05	0.31	3.79	3.25	0.31	4.04	3.46	0.31
	10.0	3.00	2.55	0.28	3.29	2.80	0.29	3.39	2.88	0.29	3.71	3.16	0.30	3.95	3.37	0.30	4.22	3.59	0.30
	15.0	3.01	2.53	0.35	3.30	2.76	0.35	3.40	2.85	0.36	3.73	3.12	0.37	3.97	3.33	0.37	4.23	3.55	0.37
	19.4	3.03	2.50	0.42	3.31	2.73	0.42	3.41	2.82	0.43	3.74	3.09	0.43	3.99	3.29	0.44	4.25	3.51	0.44
	25.0	2.97	2.54	0.51	3.25	2.78	0.51	3.35	2.87	0.52	3.67	3.14	0.53	3.91	3.35	0.53	4.17	3.57	0.54
	30.6	2.91	2.58	0.60	3.18	2.83	0.61	3.28	2.91	0.61	3.59	3.19	0.62	3.83	3.40	0.63	4.08	3.63	0.64
	35.0	2.85	2.63	0.69	3.12	2.88	0.70	3.21	2.96	0.71	3.52	3.25	0.72	3.75	3.46	0.73	4.00	3.69	0.73
	40.0	2.69	2.48	0.81	2.95	2.71	0.82	3.04	2.80	0.83	3.33	3.06	0.84	3.55	3.27	0.85	3.78	3.48	0.86
	46.1	2.51	2.37	0.92	2.74	2.60	0.93	2.83	2.68	0.94	3.10	2.93	0.96	3.30	3.13	0.97	3.52	3.33	0.98
	50.0	2.32	2.30	0.97	2.54	2.52	0.98	2.62	2.60	0.99	2.87	2.85	1.01	3.06	3.04	1.02	3.26	3.24	1.03

# Models: ASUH15KTAS and ASUH15KTAB

WALL MOUNTED  
ASUH09-15KTA\*

WALL MOUNTED  
ASUH09-15KTA\*

AFR	CFM	547
-----	-----	-----

		Indoor temperature																	
		64			70			75			80			85			90		
		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	°FWB	kBTu			kBTu			kBTu			kBTu			kBTu			kBTu		
	14	9.40	9.10	0.66	10.30	10.00	0.67	10.60	10.30	0.68	11.60	11.20	0.69	12.40	12.00	0.70	13.20	12.80	0.70
	23	9.50	9.00	0.65	10.40	9.80	0.65	10.70	10.10	0.66	11.70	11.10	0.67	12.50	11.80	0.68	13.30	12.60	0.69
	32	9.50	8.80	0.63	10.40	9.70	0.64	10.70	10.00	0.65	11.70	10.90	0.66	12.50	11.60	0.67	13.30	12.40	0.67
	41	10.20	8.90	0.51	11.20	9.80	0.52	11.50	10.10	0.52	12.70	11.00	0.53	13.50	11.70	0.54	14.40	12.50	0.54
	50	11.00	9.00	0.39	12.00	9.90	0.40	12.40	10.20	0.40	13.60	11.10	0.41	14.50	11.90	0.41	15.40	12.70	0.42
	59	11.00	9.00	0.40	12.00	9.90	0.40	12.40	10.20	0.41	13.50	11.10	0.41	14.40	11.90	0.42	15.40	12.70	0.42
	67	10.90	9.00	0.41	12.00	9.90	0.41	12.30	10.20	0.41	13.50	11.10	0.42	14.40	11.90	0.43	15.40	12.70	0.43
	77	11.20	9.50	0.57	12.30	10.30	0.58	12.60	10.70	0.58	13.80	11.70	0.59	14.80	12.50	0.60	15.70	13.30	0.61
	87	11.50	9.90	0.74	12.50	10.80	0.74	12.90	11.20	0.75	14.20	12.20	0.77	15.10	13.00	0.77	16.10	13.90	0.78
	95	11.70	10.30	0.90	12.80	11.30	0.91	13.20	11.70	0.92	14.50	12.80	0.94	15.50	13.60	0.95	16.50	14.50	0.96
	104	11.30	9.20	1.08	12.40	10.10	1.09	12.70	10.40	1.11	14.00	11.40	1.13	14.90	12.20	1.14	15.90	13.00	1.15
	115	10.30	8.90	1.23	11.30	9.80	1.24	11.60	10.10	1.25	12.70	11.10	1.28	13.60	11.80	1.29	14.50	12.60	1.30
	122	9.60	8.70	1.33	10.50	9.50	1.34	10.80	9.80	1.35	11.80	10.80	1.38	12.60	11.50	1.40	13.40	12.20	1.41

AFR	m <sup>3</sup> /h	930
-----	-------------------	-----

		Indoor temperature																	
		17.8			21.1			23.9			26.7			29.4			32.2		
		12.2			15.6			17.2			19.4			21.7			22.8		
Outdoor temperature	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	°CWB	kW			kW			kW			kW			kW			kW		
	-10.0	2.76	2.67	0.66	3.02	2.92	0.67	3.11	3.01	0.68	3.41	3.29	0.69	3.64	3.51	0.70	3.88	3.74	0.70
	-5.0	2.77	2.63	0.65	3.03	2.87	0.65	3.13	2.96	0.66	3.43	3.25	0.67	3.65	3.46	0.68	3.89	3.69	0.69
	0.0	2.78	2.59	0.63	3.05	2.83	0.64	3.14	2.92	0.65	3.44	3.20	0.66	3.67	3.41	0.67	3.91	3.63	0.67
	5.0	3.00	2.61	0.51	3.28	2.86	0.52	3.38	2.95	0.52	3.71	3.23	0.53	3.95	3.44	0.54	4.21	3.67	0.54
	10.0	3.22	2.64	0.39	3.52	2.89	0.40	3.63	2.98	0.40	3.98	3.26	0.41	4.24	3.48	0.41	4.52	3.71	0.42
	15.0	3.21	2.64	0.40	3.51	2.89	0.40	3.62	2.98	0.41	3.97	3.27	0.41	4.23	3.48	0.42	4.51	3.71	0.42
	19.4	3.21	2.64	0.41	3.51	2.89	0.41	3.62	2.98	0.41	3.96	3.27	0.42	4.22	3.48	0.43	4.50	3.71	0.43
	25.0	3.28	2.77	0.57	3.59	3.03	0.58	3.70	3.13	0.58	4.06	3.43	0.59	4.33	3.65	0.60	4.61	3.89	0.61
	30.6	3.36	2.90	0.74	3.68	3.17	0.74	3.79	3.27	0.75	4.15	3.59	0.77	4.43	3.82	0.77	4.72	4.07	0.78
	35.0	3.44	3.03	0.90	3.76	3.31	0.91	3.88	3.42	0.92	4.25	3.74	0.94	4.53	3.99	0.95	4.83	4.25	0.96
	40.0	3.31	2.71	1.08	3.63	2.96	1.09	3.74	3.05	1.11	4.10	3.35	1.13	4.36	3.57	1.14	4.65	3.80	1.15
	46.1	3.02	2.62	1.23	3.30	2.87	1.24	3.40	2.96	1.25	3.73	3.24	1.28	3.97	3.45	1.29	4.24	3.68	1.30
	50.0	2.80	2.56	1.33	3.06	2.80	1.34	3.16	2.88	1.35	3.46	3.16	1.38	3.69	3.37	1.40	3.93	3.59	1.41

## 5-2. Heating capacity

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

### ■ Models: ASUH09KTAS and ASUH09KTAB

AFR	CFM	547
-----	-----	-----

		Indoor temperature											
		°FDB	°FWB	60		65		70		72		75	
				TC kBtu	IP kW	TC kBtu	IP kW	TC kBtu	IP kW	TC kBtu	IP kW	TC kBtu	IP kW
Outdoor temperature	-22	-	10.70	1.84	10.50	1.87	10.20	1.91	9.90	1.95	9.50	1.96	
	-15	-17	13.90	2.10	13.60	2.14	13.20	2.18	12.80	2.22	12.30	2.23	
	-4	-7	17.00	2.27	16.50	2.32	16.10	2.36	15.60	2.40	15.00	2.42	
	5	3	17.91	1.92	17.51	1.97	17.00	2.01	16.19	2.01	15.48	2.01	
	14	12	17.90	2.11	17.50	2.15	17.00	2.19	16.50	2.24	16.00	2.28	
	23	19	19.80	2.08	19.30	2.12	18.80	2.16	18.30	2.20	17.80	2.25	
	32	28	21.90	2.14	21.30	2.18	20.70	2.23	20.20	2.27	19.40	2.29	
	41	37	23.90	2.19	23.30	2.24	22.70	2.29	21.70	2.29	20.70	2.29	
	47	43	25.30	2.19	24.60	2.24	24.00	2.29	22.90	2.29	21.80	2.29	
	50	47	25.80	2.19	25.10	2.24	24.50	2.29	23.30	2.29	22.30	2.29	
	59	50	26.80	2.17	26.00	2.23	25.40	2.27	24.40	2.29	23.30	2.29	
	68	59	25.10	1.73	24.50	1.76	23.80	1.80	23.20	1.83	22.50	1.86	
75	64	26.10	1.73	25.40	1.76	24.70	1.80	24.00	1.83	23.30	1.86		

AFR	m <sup>3</sup> /h	930
-----	-------------------	-----

		Indoor temperature											
		°CDB	°CWB	15.6		18.3		21.1		22.0		23.9	
				TC kW	IP	TC kW	IP	TC kW	IP	TC kW	IP	TC kW	IP
Outdoor temperature	-30.0	-	3.14	1.84	3.08	1.87	2.99	1.91	2.90	1.95	2.78	1.96	
	-26.0	-27.1	4.07	2.10	3.99	2.14	3.87	2.18	3.75	2.22	3.60	2.23	
	-20.0	-21.1	4.98	2.27	4.84	2.32	4.72	2.36	4.57	2.40	4.40	2.42	
	-15.0	-16.1	5.25	1.92	5.13	1.97	4.98	2.01	4.74	2.01	4.54	2.01	
	-10.0	-11.1	5.25	2.11	5.13	2.15	4.98	2.19	4.84	2.24	4.69	2.28	
	-5.0	-7.2	5.80	2.08	5.66	2.12	5.51	2.16	5.36	2.20	5.22	2.25	
	0.0	-2.2	6.42	2.14	6.24	2.18	6.07	2.23	5.92	2.27	5.69	2.29	
	5.0	2.8	7.00	2.19	6.83	2.24	6.65	2.29	6.36	2.29	6.07	2.29	
	8.3	6.1	7.41	2.19	7.21	2.24	7.03	2.29	6.71	2.29	6.39	2.29	
	10.0	8.3	7.56	2.19	7.36	2.24	7.18	2.29	6.83	2.29	6.54	2.29	
	15.0	10.0	7.85	2.17	7.62	2.23	7.44	2.27	7.15	2.29	6.83	2.29	
	20.0	15.0	7.36	1.73	7.18	1.76	6.98	1.80	6.80	1.83	6.59	1.86	
24.0	18.0	7.65	1.73	7.44	1.76	7.24	1.80	7.03	1.83	6.83	1.86		

# Models: ASUH12KTAS and ASUH12KTAB

WALL MOUNTED  
ASUH09-15KTA\*

WALL MOUNTED  
ASUH09-15KTA\*

AFR	CFM	547
-----	-----	-----

		Indoor temperature										
		°FDB	60		65		70		72		75	
Outdoor temperature	°FDB	°FWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW
	-22	-	13.00	2.36	12.70	2.41	12.30	2.46	12.00	2.51	11.60	2.56
	-15	-17	16.10	2.44	15.70	2.49	15.30	2.55	14.90	2.60	14.50	2.65
	-4	-7	19.70	2.56	19.20	2.60	18.70	2.66	18.00	2.69	17.10	2.69
	5	3	21.60	2.64	21.10	2.69	20.50	2.75	19.80	2.78	18.80	2.78
	14	12	23.40	2.49	22.70	2.54	22.10	2.59	21.40	2.63	20.50	2.63
	23	19	25.50	2.43	24.80	2.47	24.20	2.53	23.50	2.57	22.80	2.62
	32	28	27.20	2.29	26.50	2.32	25.80	2.38	25.10	2.43	24.30	2.47
	41	37	28.90	2.14	28.10	2.18	27.40	2.23	26.60	2.28	25.80	2.31
	47	43	28.80	2.14	28.00	2.18	27.30	2.23	26.50	2.28	25.80	2.31
	50	47	29.10	2.10	28.30	2.14	27.60	2.18	26.10	2.22	26.00	2.27
	59	50	28.60	1.88	27.80	1.91	27.10	1.95	26.10	1.99	25.60	2.03
	68	59	26.70	1.45	26.00	1.49	25.30	1.51	24.60	1.54	23.90	1.57
	75	64	27.50	1.46	26.80	1.50	26.10	1.52	25.40	1.55	24.70	1.58

AFR	m <sup>3</sup> /h	930
-----	-------------------	-----

		Indoor temperature										
		°CDB	15.6		18.3		21.1		22.0		23.9	
Outdoor temperature	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW		kW	
	-30.0	-	3.81	2.36	3.71	2.41	3.61	2.46	3.51	2.51	3.41	2.56
	-26.0	-27.1	4.72	2.44	4.61	2.49	4.48	2.55	4.35	2.60	4.24	2.65
	-20.0	-21.1	5.77	2.56	5.62	2.60	5.47	2.66	5.28	2.69	5.03	2.69
	-15.0	-16.1	6.34	2.64	6.18	2.69	6.01	2.75	5.80	2.78	5.52	2.78
	-10.0	-11.1	6.85	2.49	6.67	2.54	6.49	2.59	6.28	2.63	6.01	2.63
	-5.0	-7.2	7.48	2.43	7.28	2.47	7.09	2.53	6.89	2.57	6.70	2.62
	0.0	-2.2	7.97	2.29	7.76	2.32	7.55	2.38	7.34	2.43	7.13	2.47
	5.0	2.8	8.47	2.14	8.24	2.18	8.02	2.23	7.80	2.28	7.57	2.31
	8.3	6.1	8.44	2.14	8.22	2.18	8.00	2.23	7.78	2.28	7.56	2.31
	10.0	8.3	8.52	2.10	8.30	2.14	8.08	2.18	7.65	2.22	7.63	2.27
	15.0	10.0	8.38	1.88	8.16	1.91	7.94	1.95	7.65	1.99	7.50	2.03
	20.0	15.0	7.83	1.45	7.63	1.49	7.42	1.51	7.21	1.54	7.01	1.57
	24.0	18.0	8.07	1.46	7.86	1.50	7.65	1.52	7.44	1.55	7.23	1.58

# Models: ASUH15KTAS and ASUH15KTAB

WALL MOUNTED  
ASUH09-15KTA\*

WALL MOUNTED  
ASUH09-15KTA\*

AFR	CFM	565
-----	-----	-----

		Indoor temperature										
		°FDB	60		65		70		72		75	
Outdoor temperature	°FDB	°FWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW	kBtu	kW
	-22	-	16.00	2.72	15.60	2.77	15.10	2.83	14.70	2.88	14.30	2.94
	-15	-17	18.40	2.84	17.90	2.90	17.40	2.96	16.90	3.02	16.40	3.07
	-4	-7	21.90	3.07	21.30	3.13	20.70	3.20	20.20	3.26	19.60	3.32
	5	3	24.80	3.31	24.20	3.38	23.50	3.45	22.50	3.46	21.50	3.46
	14	12	25.50	3.04	24.80	3.10	23.80	3.13	22.80	3.13	21.70	3.13
	23	19	26.90	2.93	26.20	3.00	25.50	3.06	24.80	3.11	23.70	3.13
	32	28	27.20	2.59	26.50	2.64	25.80	2.69	25.10	2.75	24.40	2.80
	41	37	27.50	2.24	26.80	2.28	26.10	2.34	25.40	2.38	24.70	2.42
	47	43	29.60	2.21	28.80	2.26	28.00	2.30	27.20	2.34	26.50	2.39
	50	47	28.40	2.02	27.60	2.07	26.90	2.11	25.90	2.16	25.40	2.19
	59	50	27.90	1.78	27.20	1.82	26.50	1.85	25.70	1.89	25.00	1.93
68	59	27.50	1.55	26.80	1.58	26.10	1.61	25.40	1.64	24.70	1.68	
75	64	27.30	1.40	26.60	1.44	25.90	1.46	25.20	1.49	24.50	1.52	

AFR	m <sup>3</sup> /h	960
-----	-------------------	-----





		Indoor temperature										
		°CDB	15.6		18.3		21.1		22.0		23.9	
Outdoor temperature	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW		kW	
	-30.0	-	4.68	2.72	4.56	2.77	4.44	2.83	4.32	2.88	4.20	2.94
	-26.0	-27.1	5.38	2.84	5.24	2.90	5.10	2.96	4.96	3.02	4.82	3.07
	-20.0	-21.1	6.41	3.07	6.25	3.13	6.08	3.20	5.91	3.26	5.75	3.32
	-15.0	-16.1	7.27	3.31	7.08	3.38	6.89	3.45	6.58	3.46	6.30	3.46
	-10.0	-11.1	7.46	3.04	7.26	3.10	6.97	3.13	6.67	3.13	6.35	3.13
	-5.0	-7.2	7.87	2.93	7.67	3.00	7.46	3.06	7.26	3.11	6.95	3.13
	0.0	-2.2	7.97	2.59	7.76	2.64	7.56	2.69	7.35	2.75	7.14	2.80
	5.0	2.8	8.07	2.24	7.86	2.28	7.65	2.34	7.44	2.38	7.23	2.42
	8.3	6.1	8.67	2.21	8.44	2.26	8.21	2.30	7.98	2.34	7.75	2.39
	10.0	8.3	8.31	2.02	8.09	2.07	7.87	2.11	7.59	2.16	7.43	2.19
	15.0	10.0	8.18	1.78	7.96	1.82	7.75	1.85	7.54	1.89	7.33	1.93
20.0	15.0	8.07	1.55	7.86	1.58	7.65	1.61	7.44	1.64	7.23	1.68	
24.0	18.0	8.01	1.40	7.80	1.44	7.59	1.46	7.38	1.49	7.17	1.52	

# 6. Fan performance

## 6-1. Air velocity distributions

### ■ Models: ASUH09KTAS and ASUH09KTAB

Measuring conditions	Fan speed	Operation mode
	HIGH	FAN

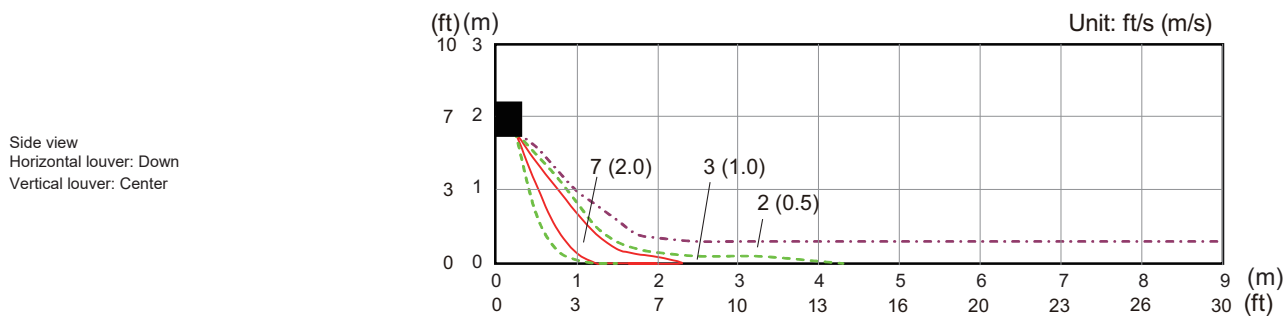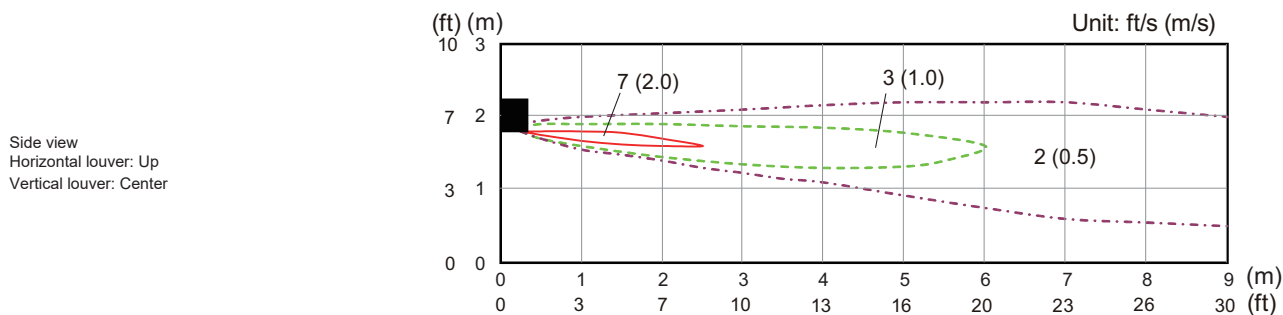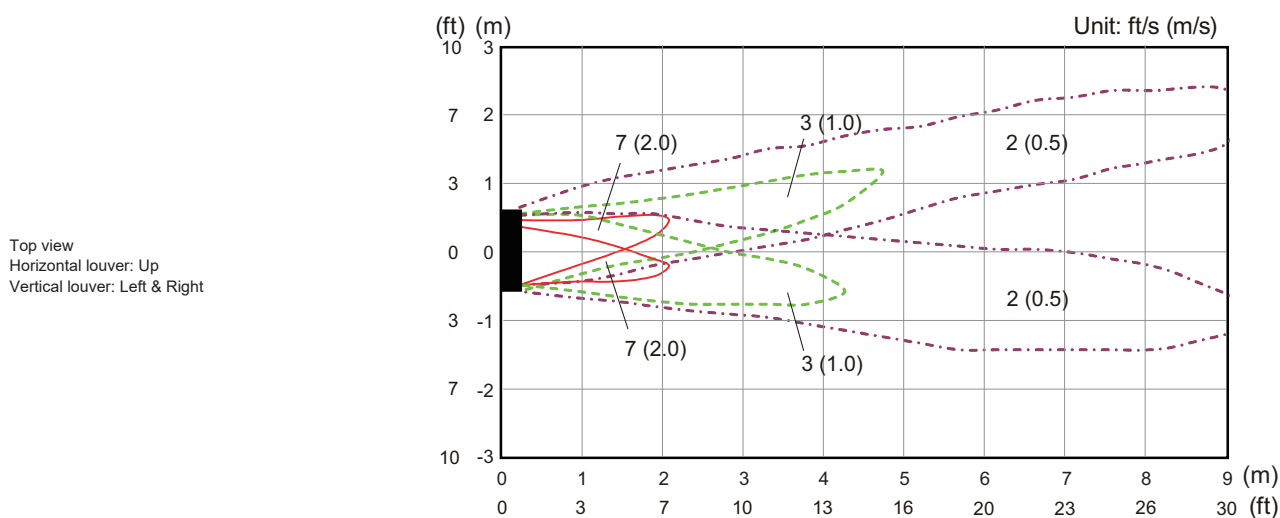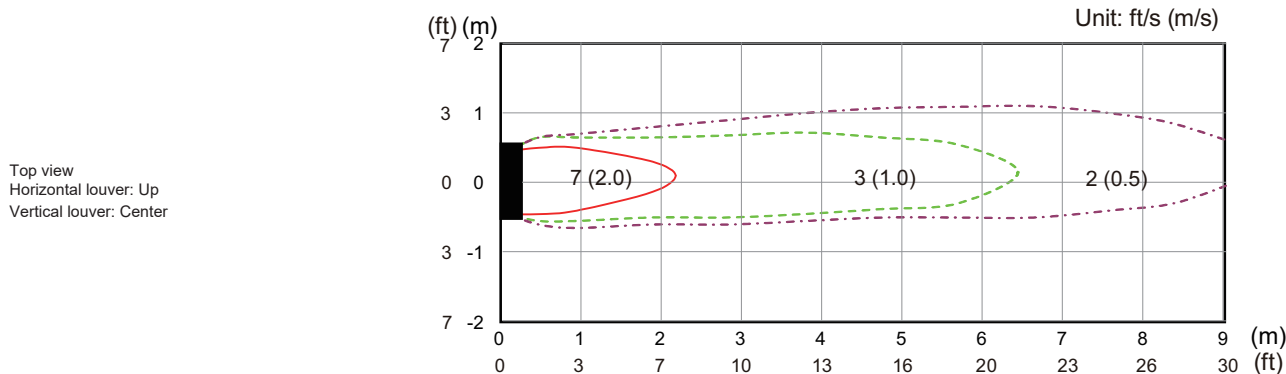


# Models: ASUH12KTAS and ASUH12KTAB

WALL MOUNTED ASUH09-15KTA\*


WALL MOUNTED ASUH09-15KTA\*

Measuring conditions	Fan speed	Operation mode
	HIGH	FAN


Top view  
Horizontal louver: Up  
Vertical louver: Center

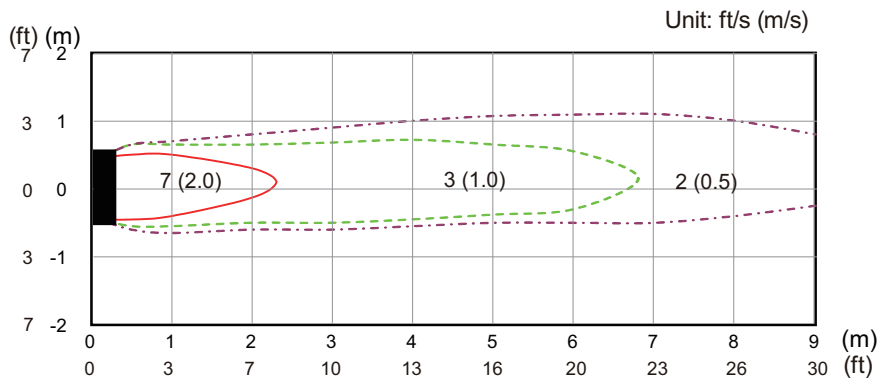


Top view  
Horizontal louver: Up  
Vertical louver: Left & Right

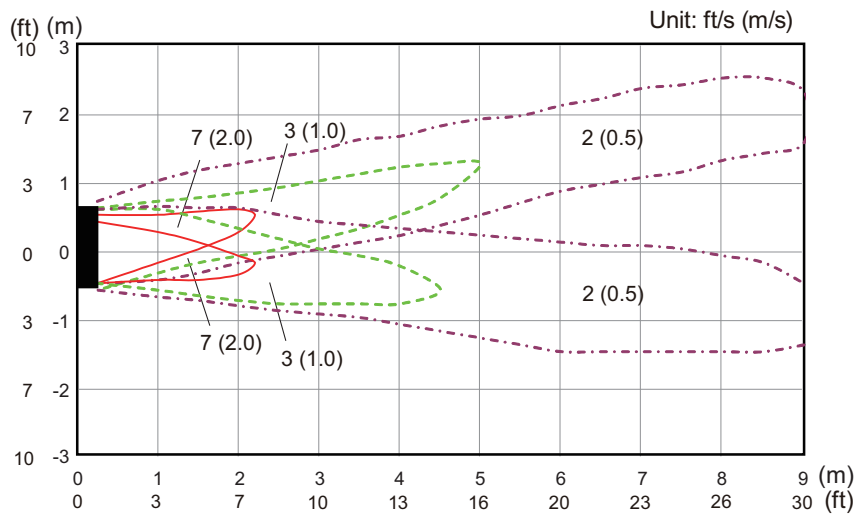

Side view  
Horizontal louver: Up  
Vertical louver: Center

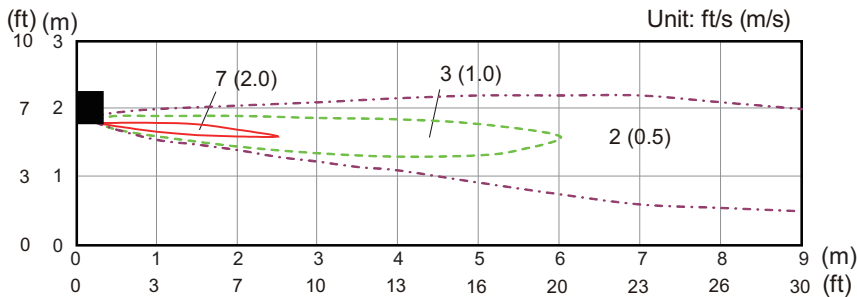

Side view  
Horizontal louver: Down  
Vertical louver: Center

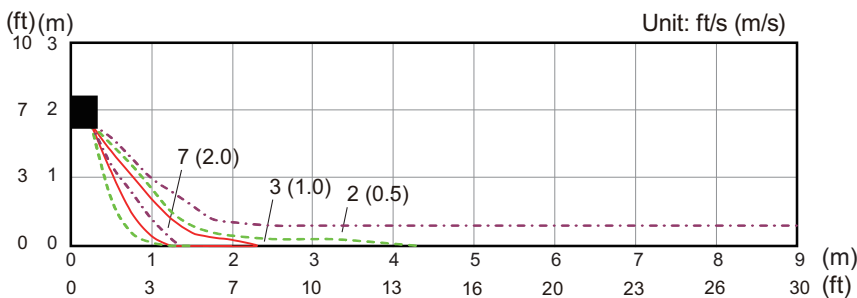


# Models: ASUH15KTAS and ASUH15KTAB

WALL MOUNTED ASUH09-15KTA\*


WALL MOUNTED ASUH09-15KTA\*

Measuring conditions	Fan speed	Operation mode
	HIGH	FAN


Top view  
Horizontal louver: Up  
Vertical louver: Center

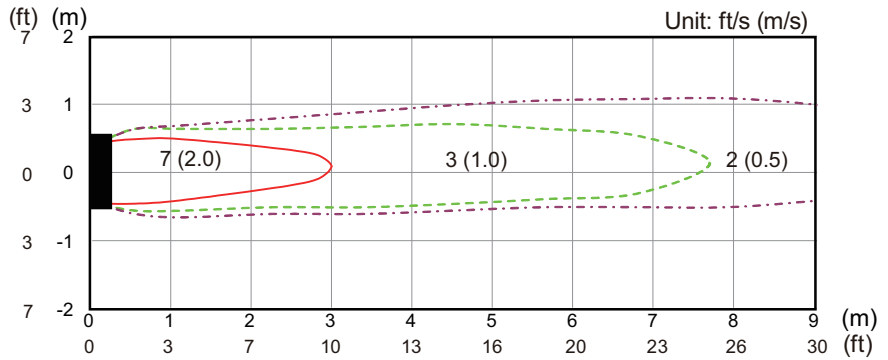


Top view  
Horizontal louver: Up  
Vertical louver: Left & Right

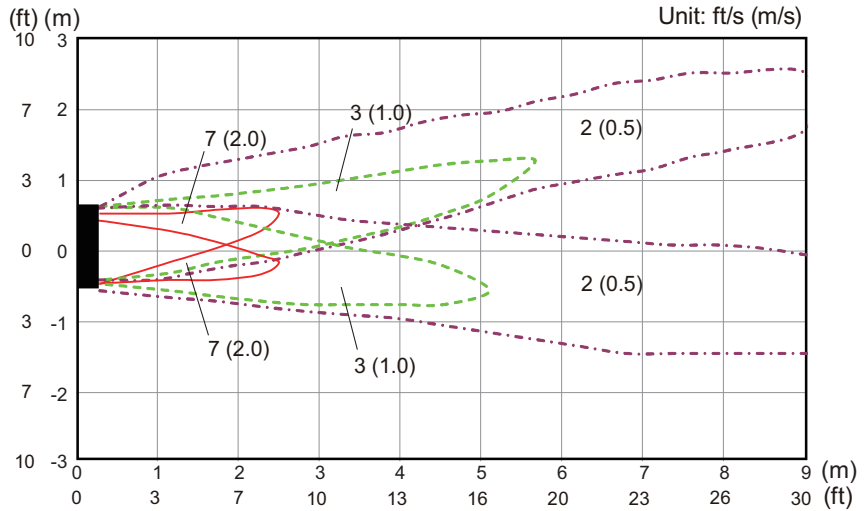

Side view  
Horizontal louver: Up  
Vertical louver: Center

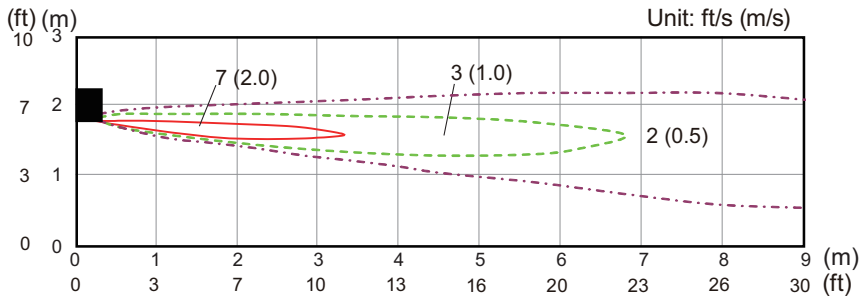

Side view  
Horizontal louver: Down  
Vertical louver: Center

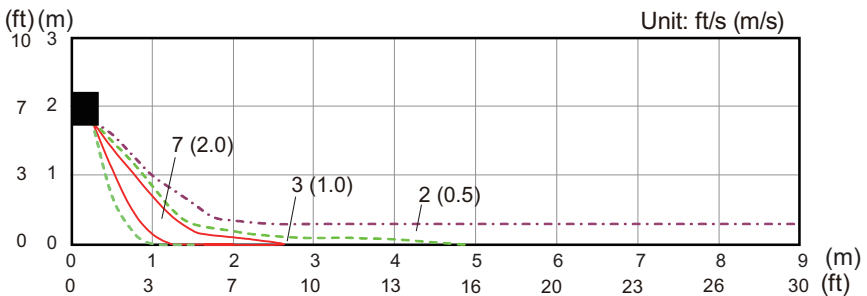

## 6-2. Airflow

### ■ Models: ASUH09KTAS and ASUH09KTAB

#### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	820
	l/s	228
	CFM	483
MED-HIGH	m <sup>3</sup> /h	750
	l/s	208
	CFM	441
MED	m <sup>3</sup> /h	700
	l/s	194
	CFM	412
MED-LOW	m <sup>3</sup> /h	640
	l/s	178
	CFM	377
LOW	m <sup>3</sup> /h	590
	l/s	164
	CFM	347
QUIET	m <sup>3</sup> /h	350
	l/s	97
	CFM	206

#### ● Heating

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	930
	l/s	258
	CFM	547
MED-HIGH	m <sup>3</sup> /h	800
	l/s	222
	CFM	471
MED	m <sup>3</sup> /h	700
	l/s	194
	CFM	412
MED-LOW	m <sup>3</sup> /h	630
	l/s	175
	CFM	371
LOW	m <sup>3</sup> /h	570
	l/s	158
	CFM	336
QUIET	m <sup>3</sup> /h	360
	l/s	100
	CFM	212

## ■ Models: ASUH12KTAS and ASUH12KTAB

### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	870
	l/s	242
	CFM	512
MED-HIGH	m <sup>3</sup> /h	790
	l/s	219
	CFM	465
MED	m <sup>3</sup> /h	700
	l/s	194
	CFM	412
MED-LOW	m <sup>3</sup> /h	640
	l/s	178
	CFM	377
LOW	m <sup>3</sup> /h	590
	l/s	164
	CFM	347
QUIET	m <sup>3</sup> /h	350
	l/s	97
	CFM	206

### ● Heating

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	930
	l/s	258
	CFM	547
MED-HIGH	m <sup>3</sup> /h	800
	l/s	222
	CFM	471
MED	m <sup>3</sup> /h	700
	l/s	194
	CFM	412
MED-LOW	m <sup>3</sup> /h	630
	l/s	175
	CFM	371
LOW	m <sup>3</sup> /h	570
	l/s	158
	CFM	336
QUIET	m <sup>3</sup> /h	360
	l/s	100
	CFM	212

## ■ Models: ASUH15KTAS and ASUH15KTAB

### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	930
	l/s	258
	CFM	547
MED-HIGH	m <sup>3</sup> /h	850
	l/s	236
	CFM	500
MED	m <sup>3</sup> /h	790
	l/s	219
	CFM	465
MED-LOW	m <sup>3</sup> /h	720
	l/s	200
	CFM	424
LOW	m <sup>3</sup> /h	630
	l/s	175
	CFM	371
QUIET	m <sup>3</sup> /h	440
	l/s	122
	CFM	259

### ● Heating


Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	960
	l/s	267
	CFM	565
MED-HIGH	m <sup>3</sup> /h	870
	l/s	242
	CFM	512
MED	m <sup>3</sup> /h	790
	l/s	219
	CFM	465
MED-LOW	m <sup>3</sup> /h	700
	l/s	194
	CFM	412
LOW	m <sup>3</sup> /h	630
	l/s	175
	CFM	371
QUIET	m <sup>3</sup> /h	390
	l/s	108
	CFM	230

# 7. Operation noise (sound pressure)


## 7-1. Noise level curve

### Models: ASUH09KTAS and ASUH09KTAB

#### Cooling

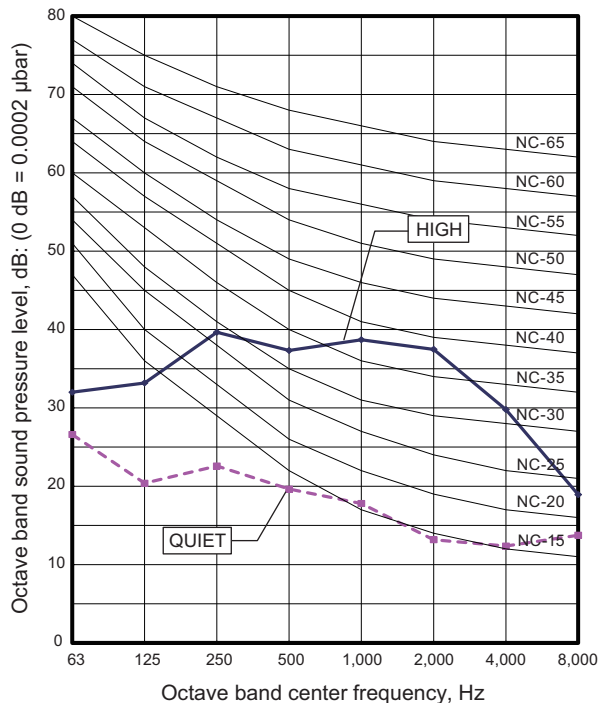


#### Heating

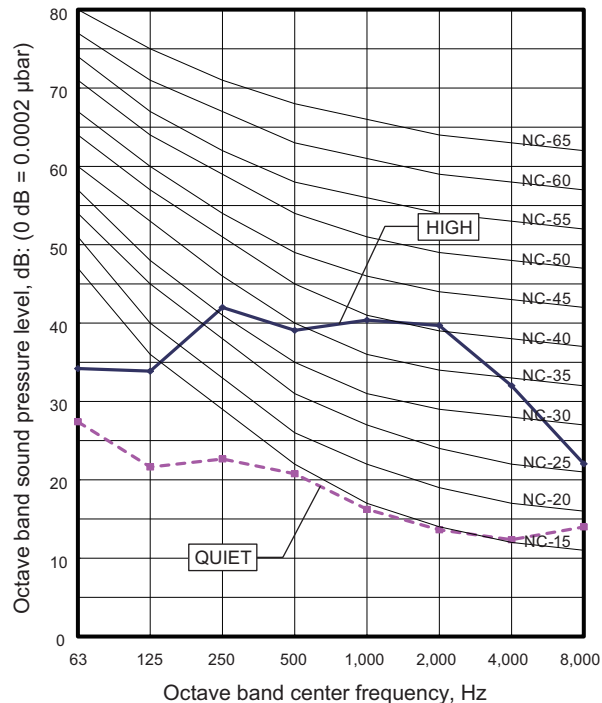


### Models: ASUH12KTAS and ASUH12KTAB

#### Cooling

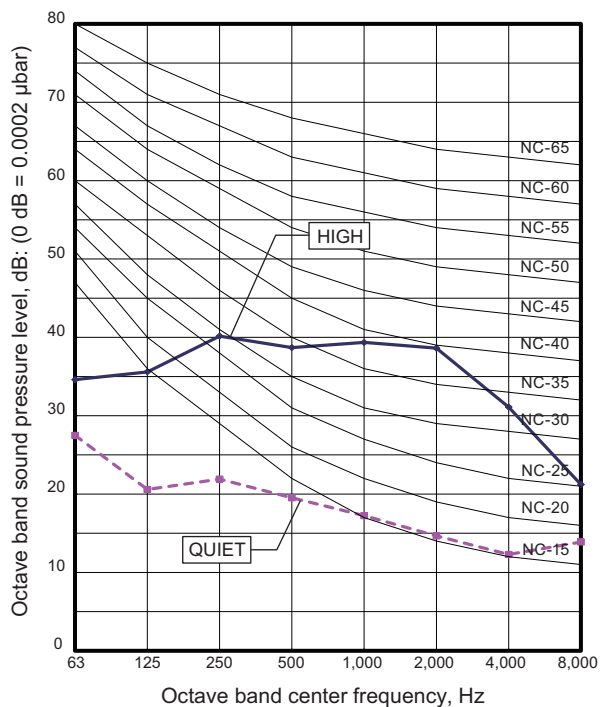


#### Heating

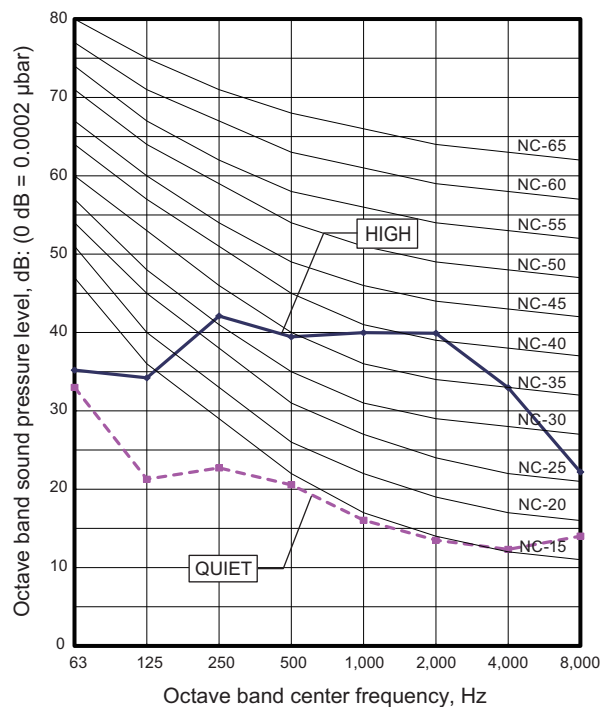


# Models: ASUH15KTAS and ASUH15KTAB


## Cooling

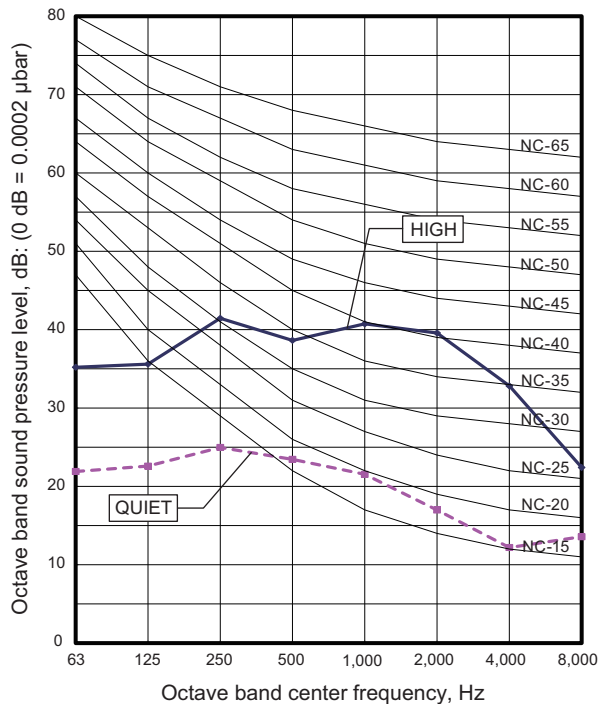

## Heating

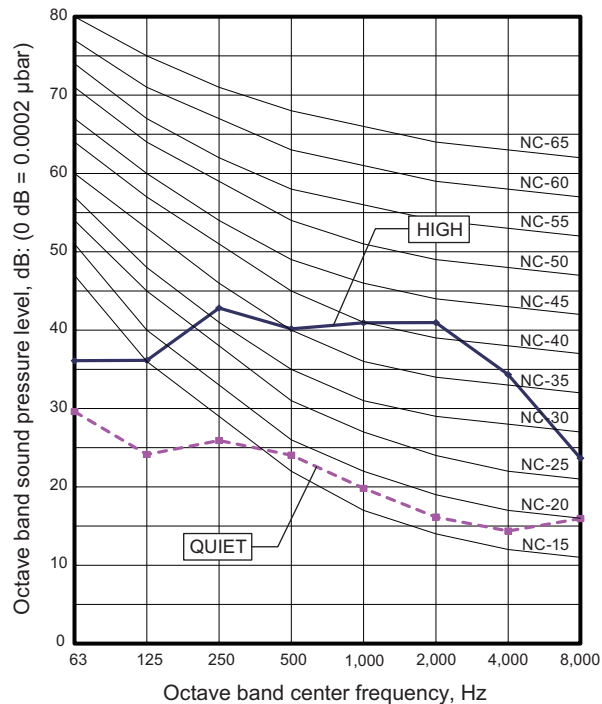

## 7-2. Sound level check point

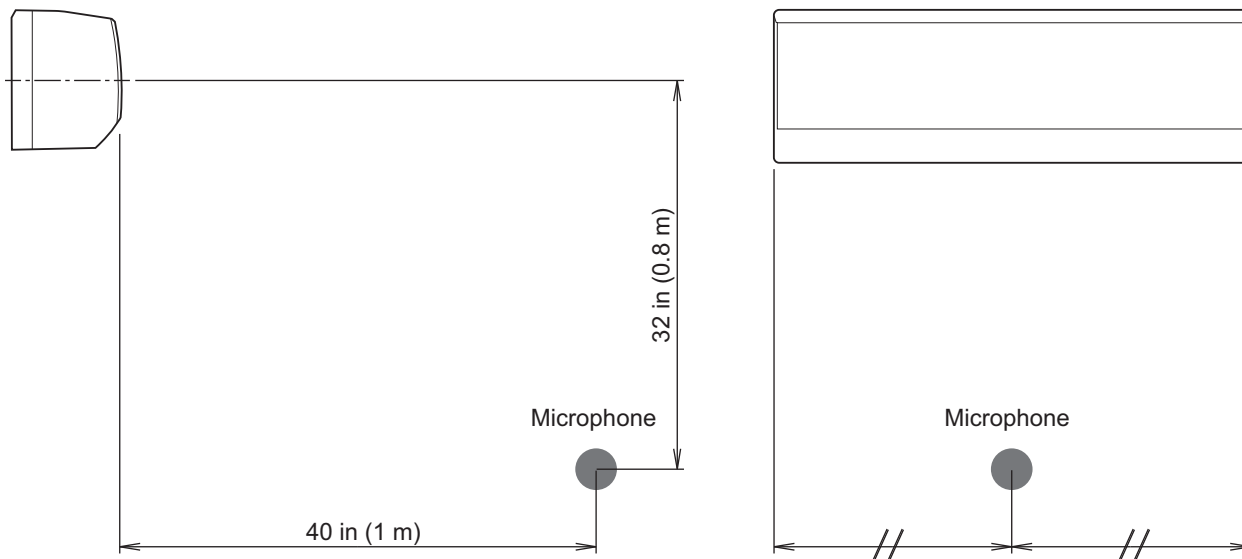


**NOTE:** Detailed shape of the actual indoor unit might be slightly different from the one illustrated above.

## 8. Safety devices

Type of protection	Protection form	Model	
		ASUH09KTAS ASUH12KTAS ASUH15KTAS	ASUH09KTAB ASUH12KTAB ASUH15KTAB
Circuit protection	Current fuse (PCB*)	250 V, 3.15 A	
Fan motor protection	Thermal protector program	Activate	302 ±27°F (150 ±15°C) Fan motor stop
		Reset	248 ±27°F (120 ±15°C) Fan motor restart

\*PCB: Printed Circuit Board

## 9. External input and output

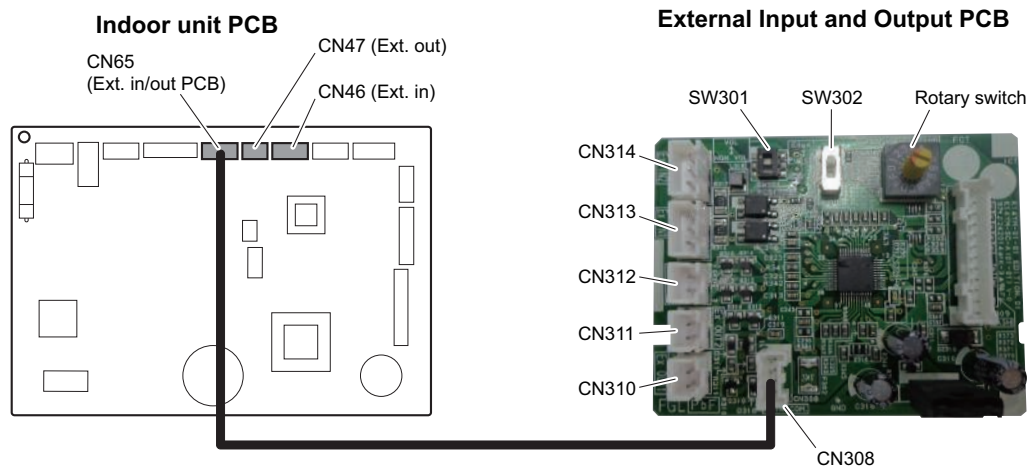

Connecting point		Input/Output	Function	Input select	Input signal
Indoor unit	CN46	Input	Operation/Stop	Dry contact	Edge
			Forced stop		
	CN47	Output	Operation/Stop	—	—
			Error status		
			Indoor unit fan operation status		
			Cooling thermostat On		
			Heating thermostat On		
External heater output					
External Input and Output PCB (UTY-XCSXZ3)	CN313/CN314	Input	Operation/Stop	Dry contact/Apply voltage	Edge/Pulse
			Forced stop		
	Forced thermostat off		Edge		
	CN310 CN311 CN312	Output	Operation status	—	—
			Error status		
			Indoor unit fan operation status		
			External heater output		
			Remote controller output		
	Cooling high/low output				
	Heating thermostat On				

**NOTE:** For details of the switching function, refer to "[Setting of external input and output](#)" on page 30.


## 9-1. External input

With using external input function, some functions on this product can be controlled from an external device.

- "Operation/Stop" mode or "Forced stop" mode can be selected with function setting of indoor unit.
- A twisted pair cable (22 AWG) should be used. Maximum length of cable is 492 ft (150 m).
- Use an external input and output cable with appropriate external dimension, depending on the number of cables to be installed.
- The wire connection should be separate from the power cable line.

### ■ Indoor unit

Indoor unit functions such as Operation/Stop can be done by using indoor unit connectors.

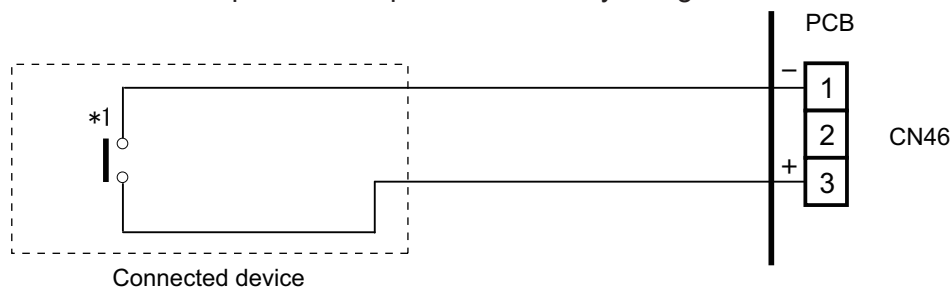

\*1: The switch can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

## External Input and Output PCB


The indoor unit Operation/Stop can be set by using the input connector on the PCB.

### Input select

Use either one of these types of connectors according to the application. (Both types of connectors cannot be used simultaneously.)

#### – Dry contact


In case of internal power supply, set the slide switch of SW301 to "NON VOL" side.

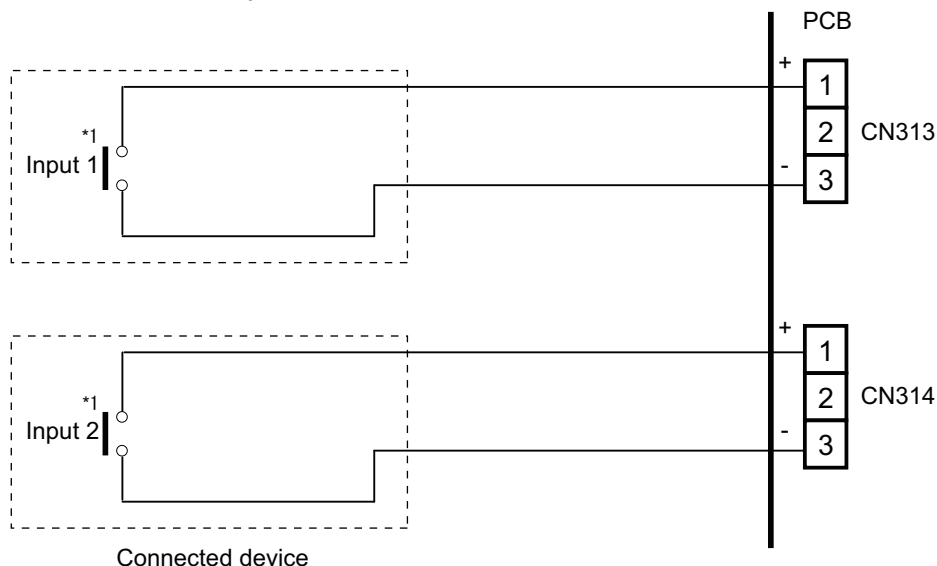

\*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

#### – Apply voltage

In case of external power supply, set the slide switch of SW301 to "VOL" side.

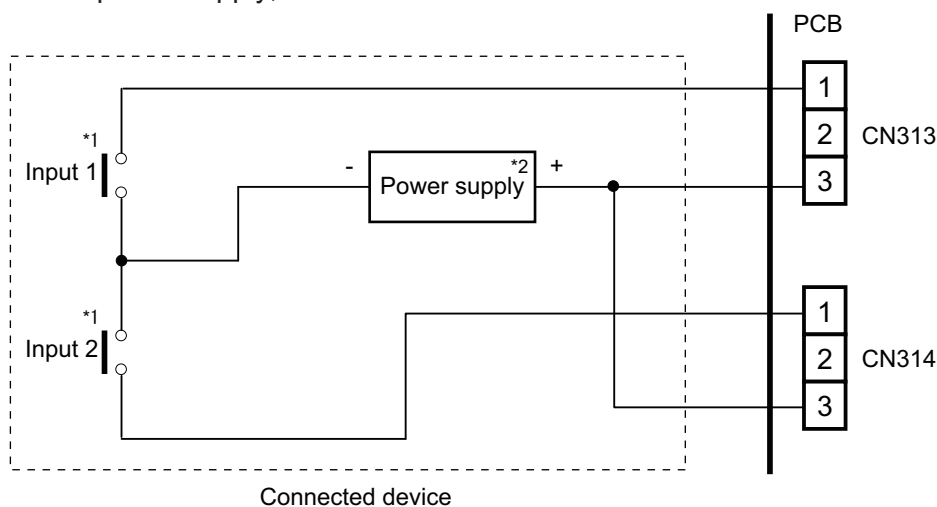


\*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

\*2: Make the power supply DC 12 V to 24 V, 10 mA or more.

## Input signal type

- **Indoor unit**


Input signal type is only "Edge".



- **External Input and Output PCB**

The input signal type can be selected.

Signal type (edge or pulse) can be switched by the DIP switch 2 (SW302) on the External Input and Output PCB.

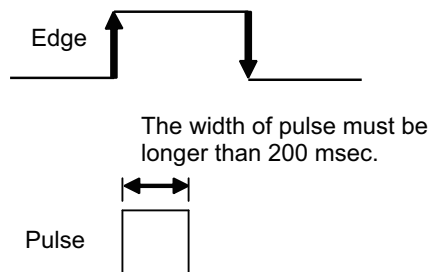

**NOTE:** The input signal supports the following switch type:

- Edge: Alternate type switch
- Pulse: Momentary type switch

## 9-2. External output


Use an external output cable with appropriate external dimension, depending on the number of cables to be installed.

### Indoor unit

- A twisted pair cable (22 AWG) should be used. Maximum length of cable is 82 ft (25 m).
- Output voltage: High DC 12 V  $\pm$ 2 V, Low 0 V.
- Permissible current: 50 mA
- For details, refer to ["Setting of external input and output"](#) on page 30.


- **When indicator, etc. are connected directly**

**Example:** Function setting number 60 is set to "00"

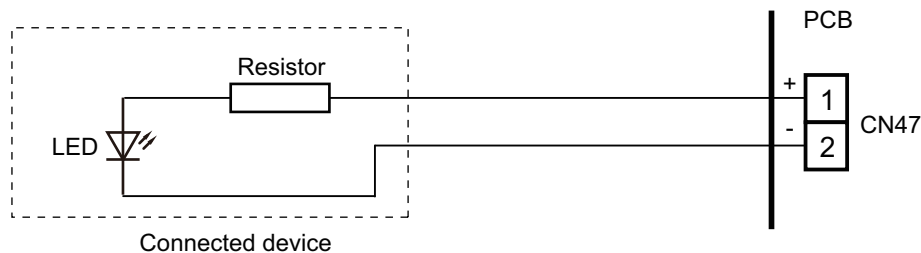


- **When connecting with a device equipped with a power supply**

**Example:** Function setting number 60 is set to "00"

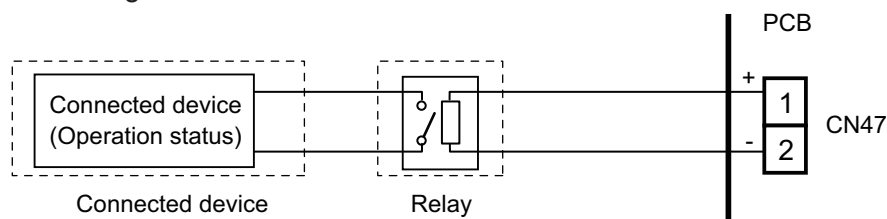


## External Input and Output PCB

- A twisted pair cable (22 AWG) should be used. Maximum length of cable is 82 ft (25 m).
  - Output voltage: High DC 12 V  $\pm$ 2 V, Low 0 V.
  - Permissible current: 50 mA
  - For details, refer to "[Setting of external input and output](#)" on page 30.
- **When indicator or other components are connected directly:**  
**Example:** Rotary SW on External Input and Output PCB is set to "1".

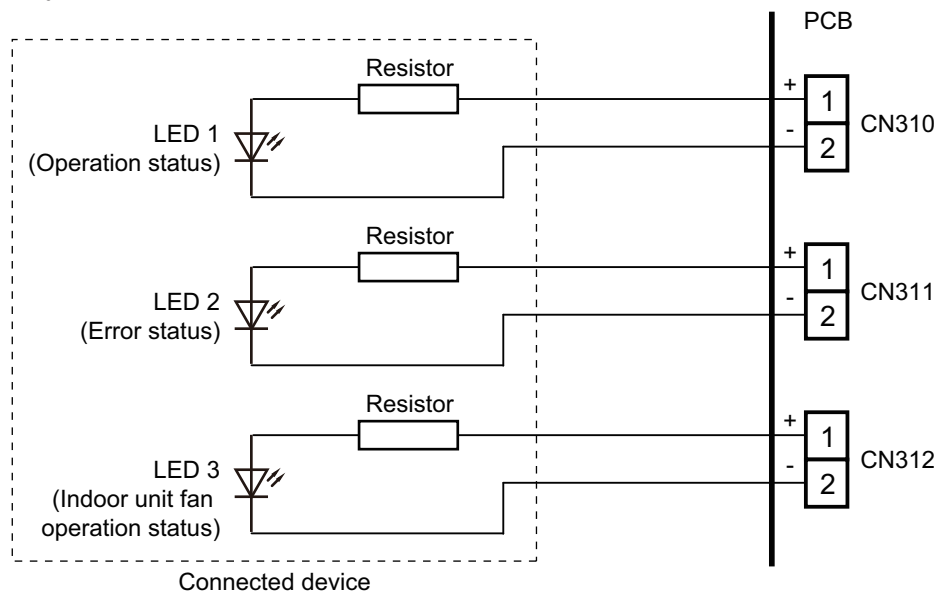

- **When connecting with a device equipped with a power supply:**  
**Example:** Rotary SW on External Input and Output PCB is set to "1".

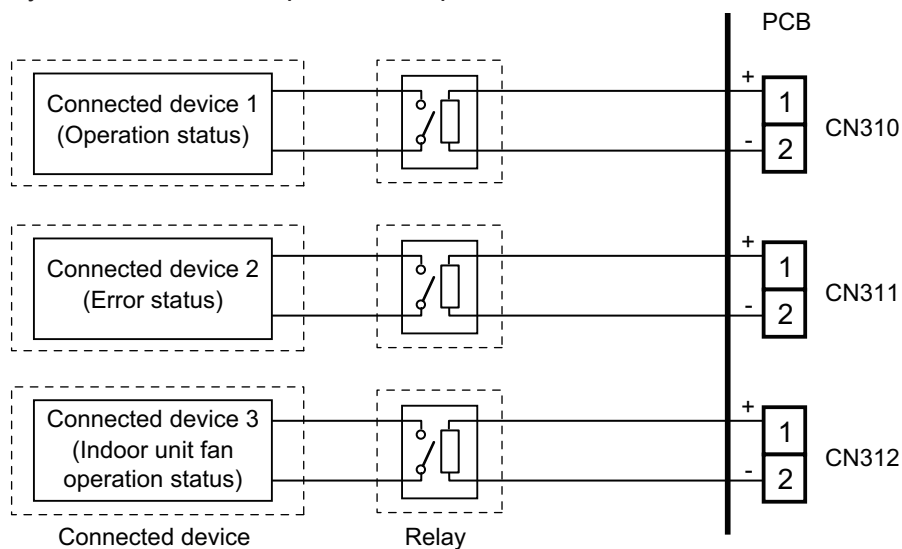

## 9-3. Setting of external input and output

- Indoor unit

Input		
Connection point	Function setting number 46	Function
CN46	00	Operation/Stop mode 1 (R.C. enabled)
	01	(Setting prohibited)
	02	Forced stop mode
	03	Operation/Stop mode 2 (R.C. disabled)

Output		
Connection point	Function setting number 60	Function
CN47	00	Operation/Stop
	01 to 04	Cooling thermostat On
	05	Heating thermostat On
	06	Operation/Stop
	07 to 08	Cooling thermostat On
	09	Error status
	10	Indoor unit fan operation status
	11	External heater output

- External Input and Output PCB

Switch setting		Ex IN		Ex OUT		
Rotary switch	SW302	CN313	CN314	CN310	CN311	CN312
1	Edge	Operation/Stop	Not available	Operation/Stop	Error status	Indoor unit fan operation status
	Pulse	Operation	Stop			
2	Edge*1	Forced thermostat off	Not available	Error status	Indoor unit fan operation status	External heater output
3		Mechanical cooling off	Not available	Error status	Indoor unit fan operation status	External heater output
4		Forced thermostat off	Not available	Error status	Remote controller output	External heater output
5		Mechanical cooling on*2	Not available	Cooling high/low output	Remote controller output	External heater output
6		Mechanical cooling on*2	Not available	Error status	Remote controller output	Cooling high/low output
7		Forced thermostat off	Not available	Error status	Indoor unit fan operation status	External heater output
8		Forced thermostat off	Not available	Error status	Indoor unit fan operation status	Heating thermostat on
9		Mechanical cooling off	Not available	Error status	Heating thermostat on	External heater output
A		Forced thermostat off	Not available	Heating thermostat on	Remote controller output	External heater output
B		Forced thermostat off	Not available	Operation/Stop	Indoor unit fan operation status	External heater output
C		Forced thermostat off	Not available	Operation/Stop	Error status	External heater output
D		Forced thermostat off	Not available	Operation/Stop	Indoor unit fan operation status	Error status

**NOTES:**


- When the rotary switch is selected to "1", the operation of the connector input of the indoor unit and the External Input and Output PCB input are the same. The operation content depends on the setting of function setting number 46.
- \*1: The external input other than "Operation/Stop" is available only when the SW302 is set to "Edge".
- \*2: The external input of "Mechanical cooling on" is available only when the function setting number 60 is set to "03" or "04".

## 9-4. Details of control input function

### ■ Operation/Stop mode 1


- In the case of "Edge" input

Function setting	External Input and Output PCB		External input	Input signal	Command	
	Rotary switch	SW302				
46-00	—		Input of indoor unit	CN46	Off → On	Operation
	—		Input of indoor unit	CN46	On → Off	Stop
	1	Edge	External Input and Output PCB	CN313	Off → On	Operation
					On → Off	Stop

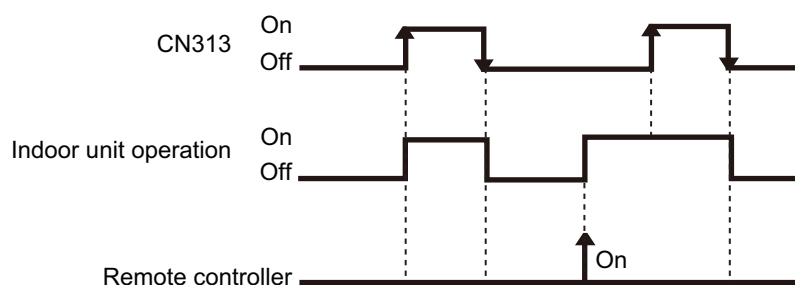

- In the case of "Pulse" input

Function setting	External Input and Output PCB		External input	Input signal	Command
	Rotary switch	SW302			
46-00	1	Pulse	External Input and Output PCB	CN313	Operation
				CN314	Stop

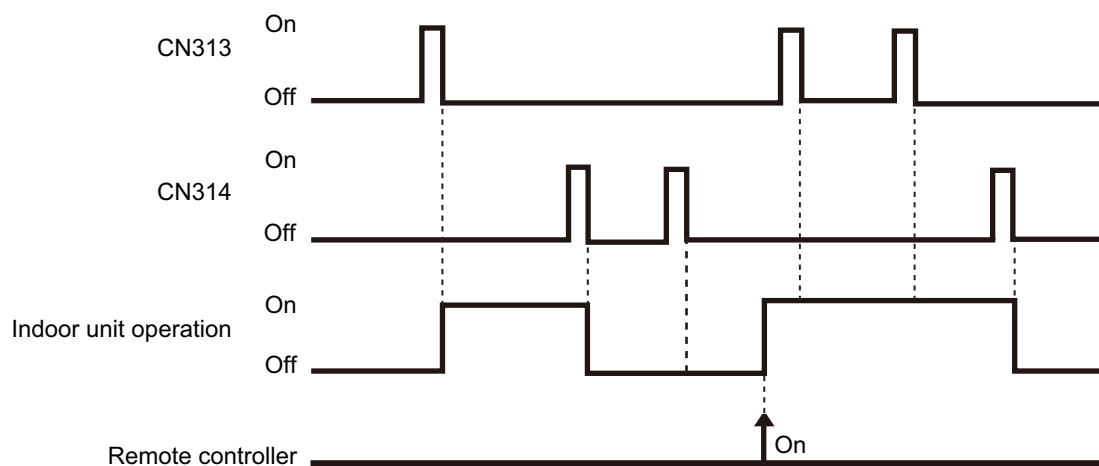


#### NOTES:

- The last command has priority.
- The indoor units within the same remote controller group operates in the same mode.

## ■ Forced stop


- In the case of "Edge" input

Function setting	External Input and Output PCB		External input		Input signal	Command
	Rotary switch	SW302				
46-02	—		Input of indoor unit	CN46	Off → On	Forced stop (R.C. disabled)
					On → Off	Normal (R.C. enabled)
	1	Edge	External Input and Output PCB	CN313	Off → On	Forced stop (R.C. disabled)
					On → Off	Normal (R.C. enabled)

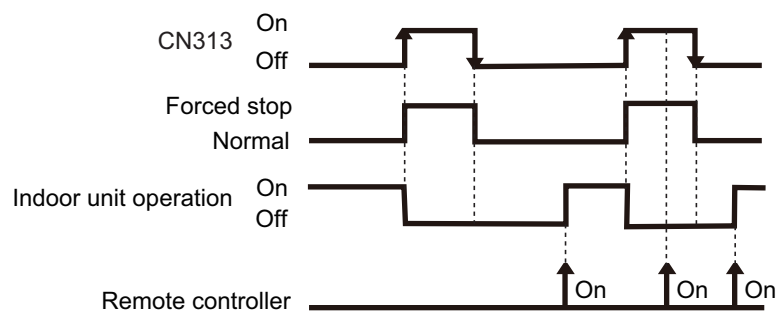

- In the case of "Pulse" input

Function setting	External Input and Output PCB		External input		Input signal	Command
	Rotary switch	SW302				
46-02	1	Pulse	External Input and Output PCB	CN313	Pulse	Forced stop (R.C. disabled)
				CN314		Normal (R.C. enabled)

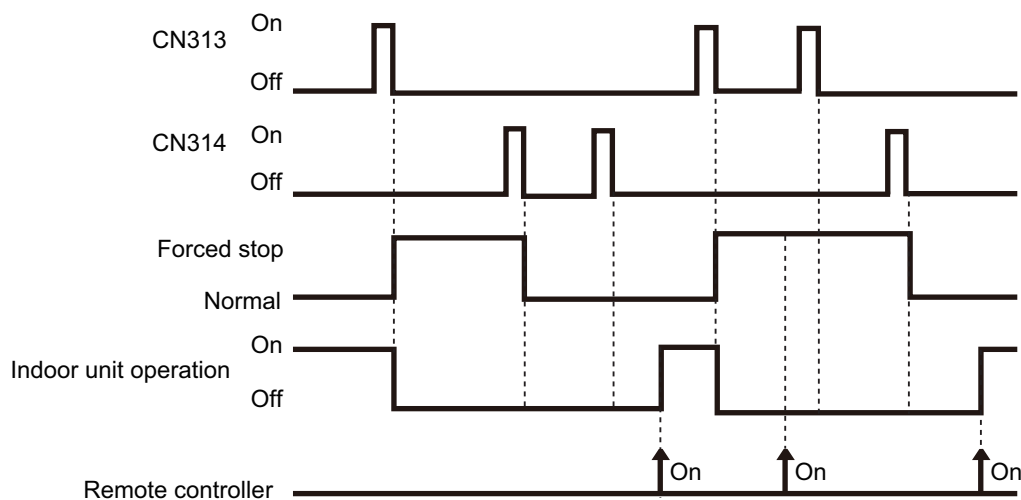


### NOTES:

- When the forced stop is triggered, indoor unit stops and Operation/Stop operation by the remote controller is restricted.
- When forced stop function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

## ■ Operation/Stop mode 2


- In the case of “Edge” input

Function setting	External Input and Output PCB		External input		Input signal	Command
	Rotary switch	SW302				
46-03	—		Input of indoor unit	CN46	Off → On	Operation (R.C. enabled)
	—				On → Off	Stop (R.C. disabled)
	1	Edge	External Input and Output PCB	CN313	Off → On	Operation (R.C. enabled)
					On → Off	Stop (R.C. disabled)

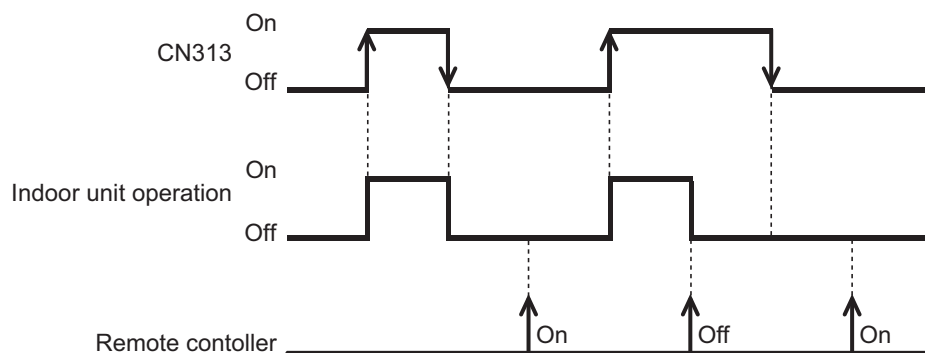

- In the case of “Pulse” input


Function setting	External Input and Output PCB		External input		Input signal	Command
	Rotary switch	SW302				
46-03	1	Pulse	External Input and Output PCB	CN313	Pulse	Operation (R.C. enabled)
				CN314		Stop (R.C. disabled)

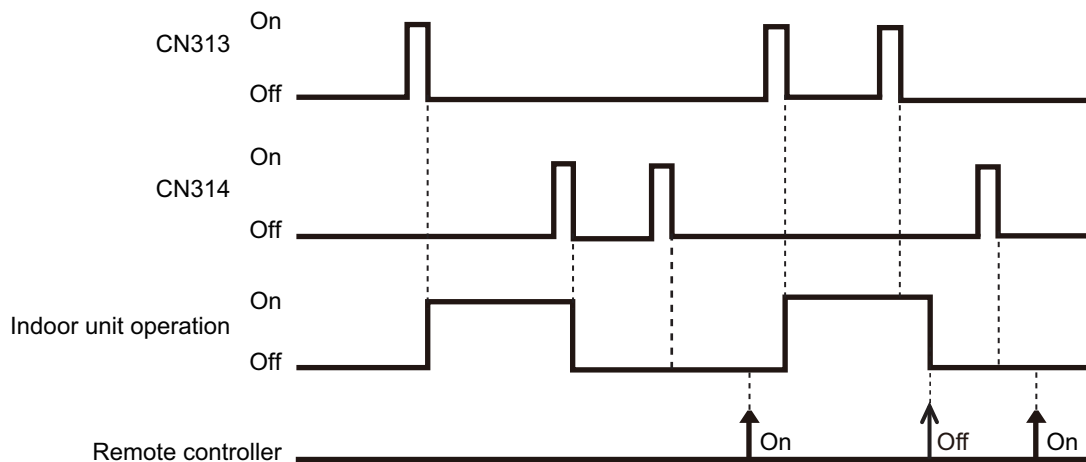

**NOTE:** When “Operation/Stop” mode 2 function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

## ■ Forced thermostat off

External Input and Output PCB	External input		Input signal	Command
Rotary switch				
2, B, C, D	External Input and Output PCB	CN313	Off → On	Thermostat off
			On → Off	Normal operation
4, 7, 8, A	External Input and Output PCB	CN313	Off → On	Thermostat off
			On → Off	Normal operation

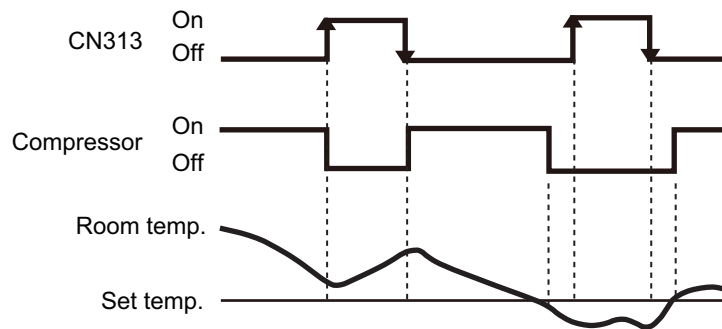


## 9-5. Details of control output function

### ■ Operation status

Function setting	External Input and Output PCB	External output		Output signal	Status
	Rotary switch				
60-00 60-06	1, 2, 8	Output of indoor unit	CN47	Off → On	Operation
				On → Off	Stop
—	1, B, C, D	External Input and Output PCB	CN310	Off → On	Operation
				On → Off	Stop


The output is low when the unit is stopped.

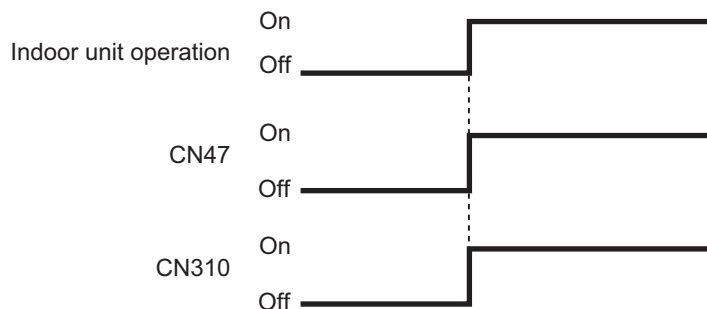

### ■ Error status

Function setting	External Input and Output PCB	External output		Output signal	Status
	Rotary switch				
60-09	—	Output of indoor unit	CN47	Off → On	Error
				On → Off	Normal
—	2, 3, 4, 6, 7, 8, 9	External Input and Output PCB	CN310	Off → On	Error
				On → Off	Normal
—	1, C	External Input and Output PCB	CN311	Off → On	Error
				On → Off	Normal
—	D	External Input and Output PCB	CN312	Off → On	Error
				On → Off	Normal


The output is on when an error is generated for the indoor unit.

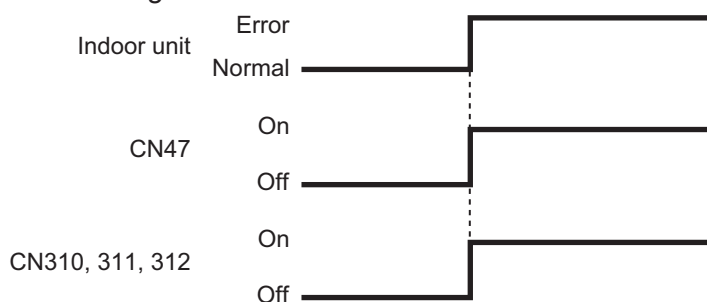

## Indoor unit fan operation status

Function setting	External Input and Output PCB	External output		Output signal	Status
	Rotary switch				
60-10	C	Output of indoor unit	CN47	Off → On	Fan run
				On → Off	Fan stop
—	2, 3, 7, 8, B, D	External Input and Output PCB	CN311	Off → On	Fan run
				On → Off	Fan stop
—	1	External Input and Output PCB	CN312	Off → On	Fan run
				On → Off	Fan stop

Output signal	Condition
On	The indoor unit fan is operating.
Off	The fan is stopped or during cold air prevention. During thermostat off when in dry mode operation.

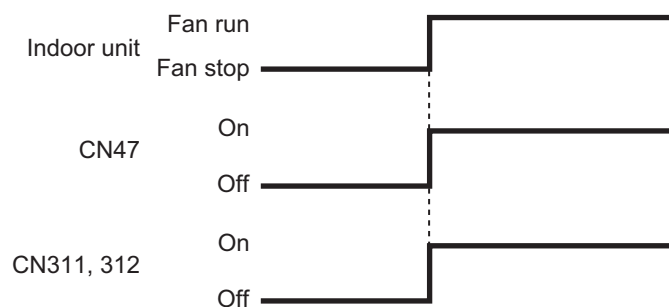

## ■ External heater output


Control	Primary heater	Auxiliary heater	Function setting
			Indoor unit
			Control switching external heaters No. 61
Auxiliary heater control 1	Heat pump	External device*	61-00
Auxiliary heater control 2	Heat pump	External device	61-01
Heat pump prohibition control	External device	None	61-02
Auxiliary heater control by outdoor temperature 1	Heat pump	External device	61-03
Auxiliary heater control by outdoor temperature 2	Heat Pump	External device	61-04
Auxiliary heater control by outdoor temperature 3	Heat Pump	External device	61-05
Auxiliary heat pump control	External device	Heat pump	61-06
Auxiliary heat pump control by outdoor temperature 1	External device	Heat pump	61-07
Auxiliary heat pump control by outdoor temperature 2	External device	Heat pump	61-08
Auxiliary heat pump control by outdoor temperature 3	External device	Heat pump	61-09

### NOTES:

- After turning off the heater, 3 minutes of standby time is required by next power-on of the heater.
- For items marked “—” in the table, any of validate or invalidate of the setting are acceptable.
- \*: External device means Hot water, Electrical heater, etc.

## ● Installation configuration of individual connection

External heating device is installed individually. (No use of indoor unit fan)

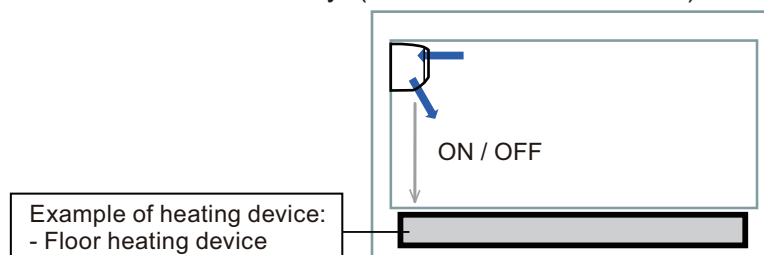


### ⚠ WARNING

- Design and install an external heater appropriately, with consideration for its protection and local codes.
- Inappropriate designing and installation of external heater may cause a fire by emitted heat from the external heater.
- Fujitsu General Ltd. is not responsible for inappropriate designing or installation of external heating device.

## ● Auxiliary equipment control by room temperature

Auxiliary equipment control is switchable by room temperature. Auxiliary equipment switching is performed for each room temperature divided to following 3 zones.

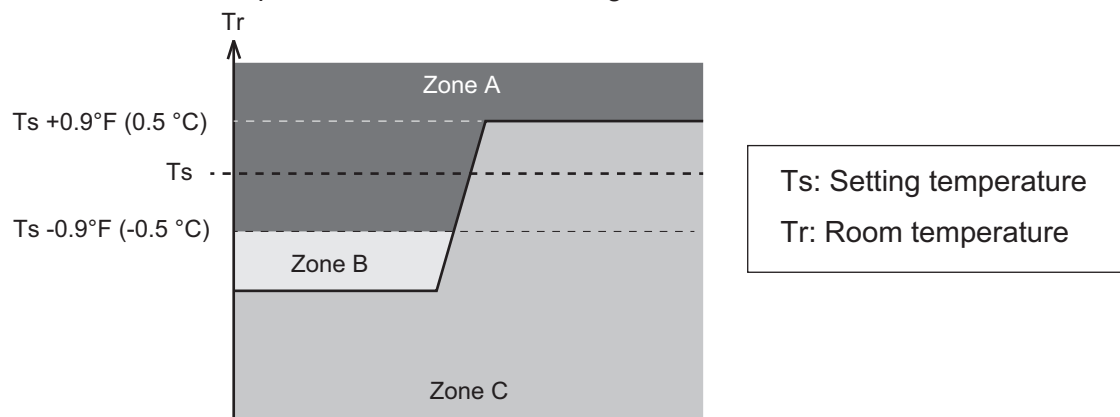

Zone	Application	When temperature dropping		When temperature rising	
		Primary	Auxiliary	Primary	Auxiliary
A	Both of primary and auxiliary equipment is unnecessary.	Off	Off	Off	Off
B	Primary heater only. When room temperature stays in zone B for a long time, auxiliary equipment also operates.	On	Off* <sup>1</sup>	—	—
C	Auxiliary equipment also operates.	On	On* <sup>2</sup>	On	On* <sup>2</sup>

\*1: For standby time for auxiliary equipment operation, refer to indoor unit function number 71 in "[Contents of function setting](#)" on page 61.


\*2: When indoor unit function number 61 is set to "00", auxiliary equipment operates according to the following conditions.

- $T_s - T_r > 21.6 \text{ }^\circ\text{F}$  ( $-12.0 \text{ }^\circ\text{C}$ ): Auxiliary equipment turn off.
- $T_s - T_r > 18.0 \text{ }^\circ\text{F}$  ( $-10.0 \text{ }^\circ\text{C}$ ): Auxiliary equipment turn on.

## ● Auxiliary heater control 1

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> <li>• Fan stop protection</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting “Thon”.

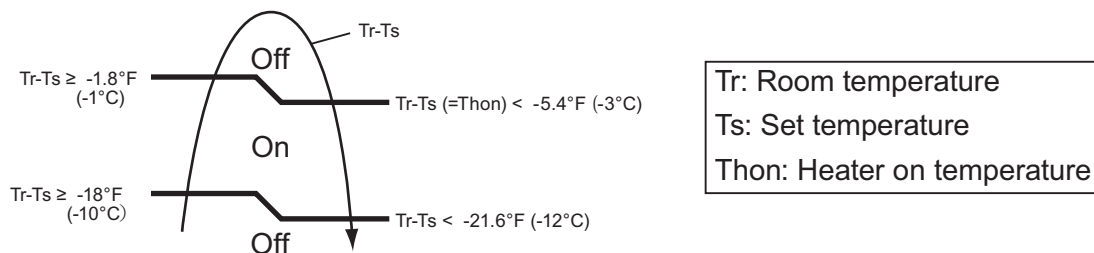


**Example:** When set temperature (Ts) is 72°F (22°C) (Factory setting),

- and room temperature (Tr) increases above 53.6°F (12°C), signal output is on.
- and room temperature (Tr) increases above 69.8°F (21°C), signal output is off.
- and room temperature (Tr) decreases below 66.2°F (19°C), signal output is on.
- and room temperature (Tr) decreases below 50°F (10°C), signal output is off.

## ● Auxiliary heater control 2

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> <li>• Fan stop protection</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting “Thon”.

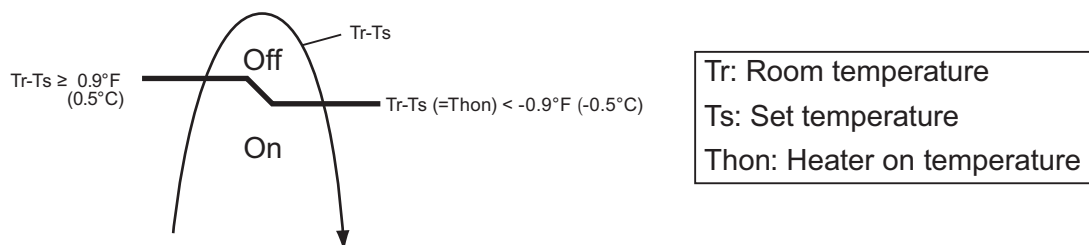


## ● Heat pump prohibition control


Perform heating by external heater only. Indoor unit is continuous thermostat off.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting “Thon”.

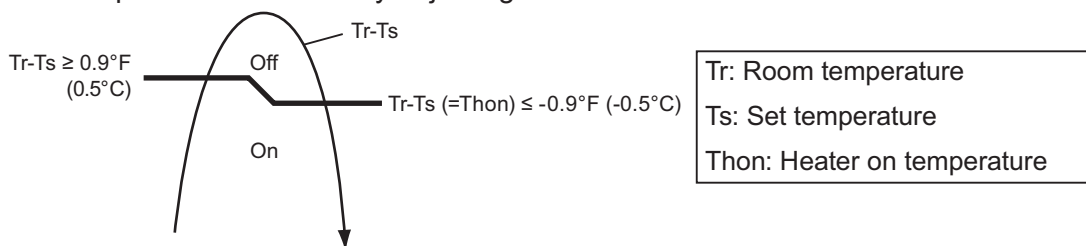

### • Operation status

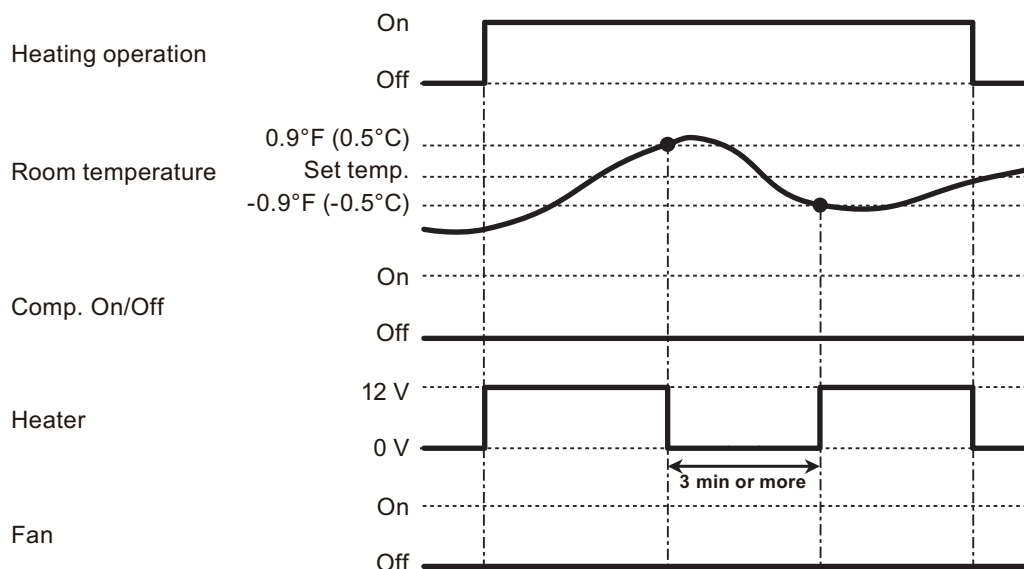

**NOTE:** In following operations, compressor will be on.

- Other than heating
- Test run


# ● Auxiliary heater control by outdoor temperature 1

This control selects heat pump or external heater according to the outdoor temperature. When outdoor temperature is high, the heating is performed by using heat pump only.


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Heat pump only zone</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary A and B: Adjustable individually by function setting number 66 and 67.

## • External heater output

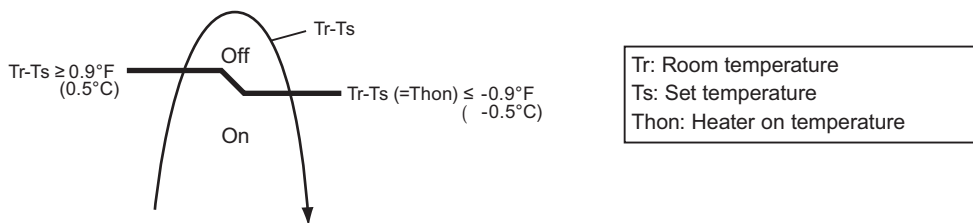


## • Outdoor temperature zone

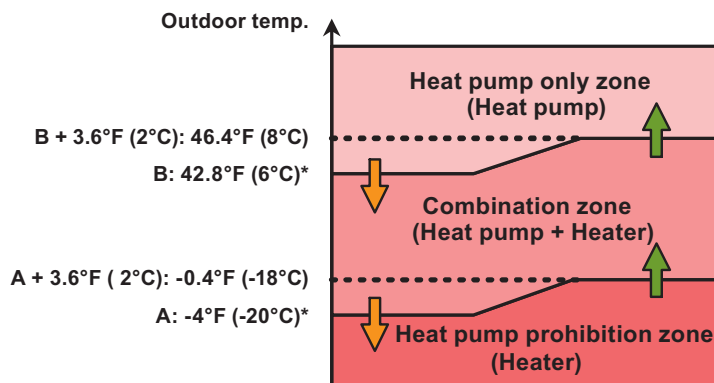

\*: Adjustable by function setting 66 and 67

• Operation status

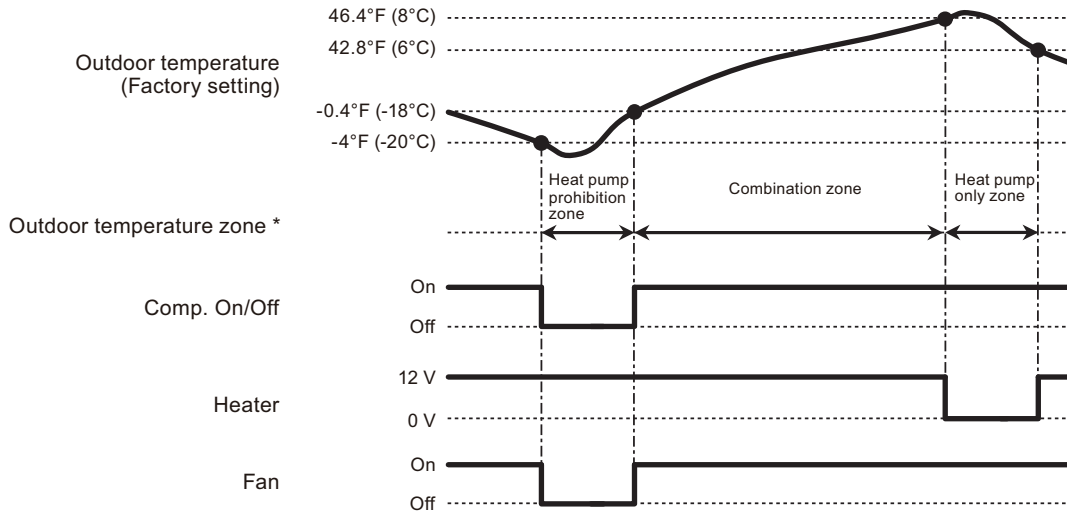

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


## ● Auxiliary heater control by outdoor temperature 2

This control selects heat pump or external heater according to the outdoor temperature. Even when outdoor temperature is high, the heating is performed by using both of heat pump and external heater.


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting “Thon”.
- Outdoor temperature zone boundary A: Adjustable by function setting number 66.

### • External heater output

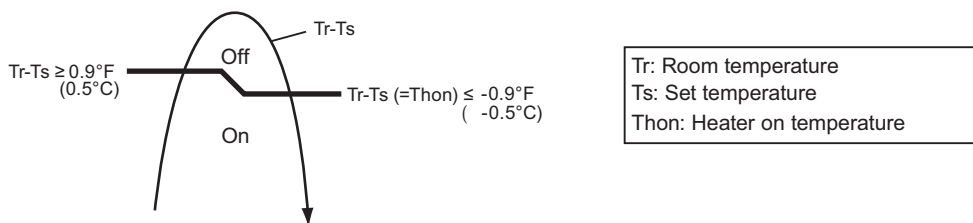


### • Outdoor temperature zone

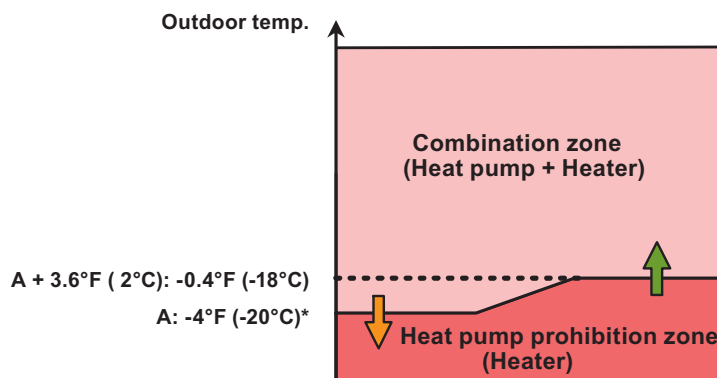

\*: Adjustable by function setting 66

• Operation status

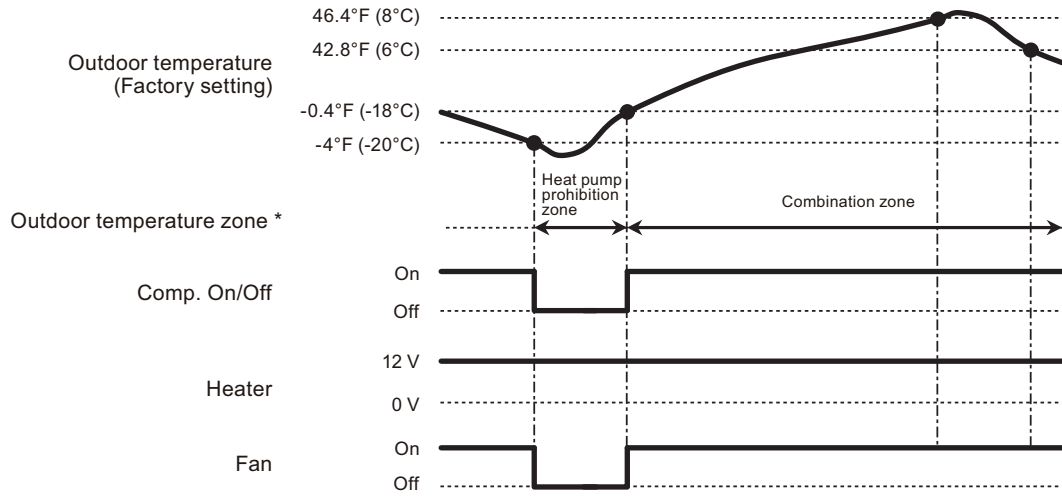

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


### ● Auxiliary heater control by outdoor temperature 3

This control selects heat pump or external heater according to the outdoor temperature. Even when outdoor temperature is high, the heating is performed by using both of heat pump and external heater.


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary B: Adjustable by function setting number 37.

#### • External heater output

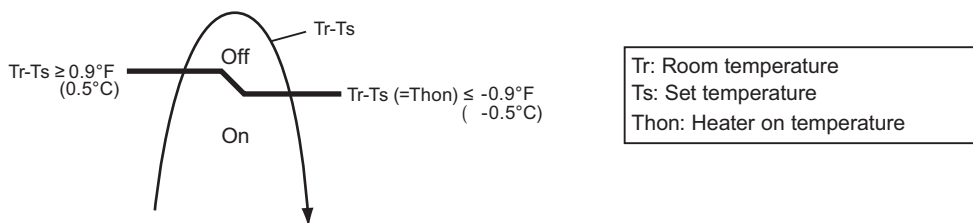


#### • Outdoor temperature zone

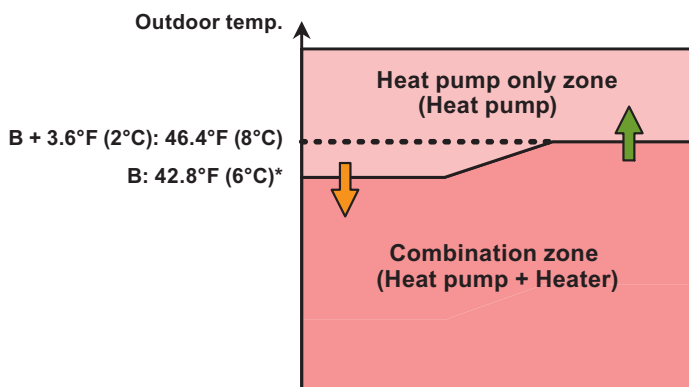

\*: Adjustable by function setting 67

#### • Operation status

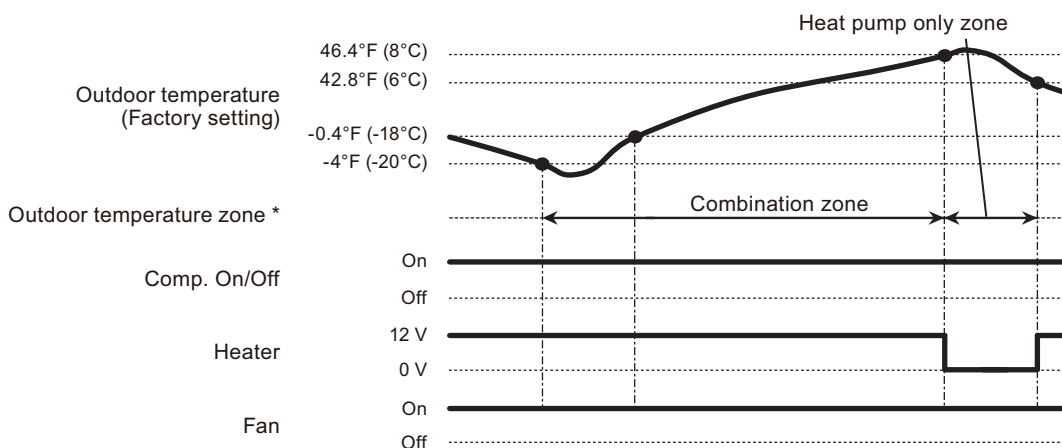

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

## ● Auxiliary heat pump control

### • External heater output


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Set temperature (Ts) -0.9°F (-0.5°C)
- Temperature of heater off: Set temperature (Ts) +0.9°F (+0.5°C)

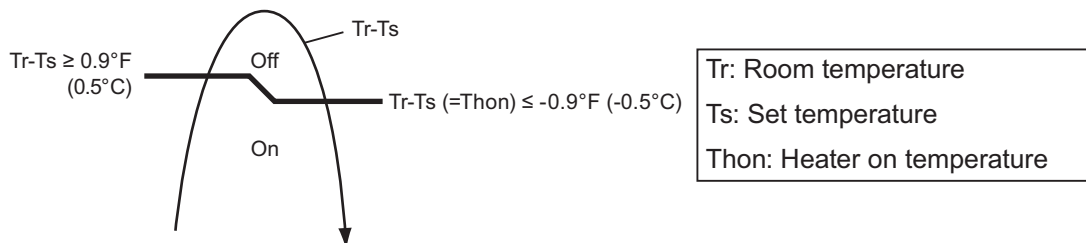

### • Auxiliary heat pump On/Off

- Temperature of heat pump on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

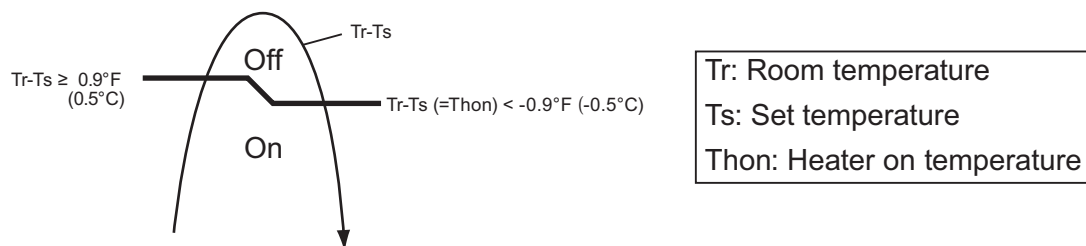


# ● Auxiliary heat pump control by outdoor temperature 1

## • External heater output


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Set temperature (Ts) -0.9°F (-0.5°C)
- Temperature of heater off: Set temperature (Ts) +0.9°F (+0.5°C)

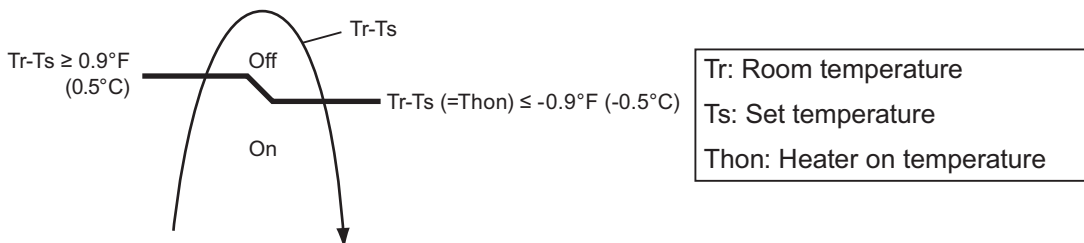


## • Auxiliary heat pump On/Off

- Temperature of heat pump on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

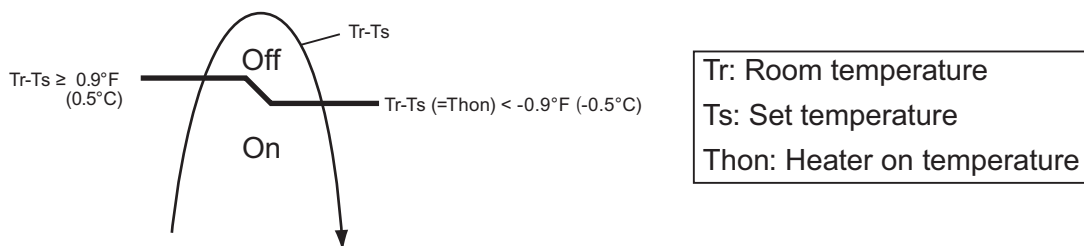


## • Outdoor temperature zone

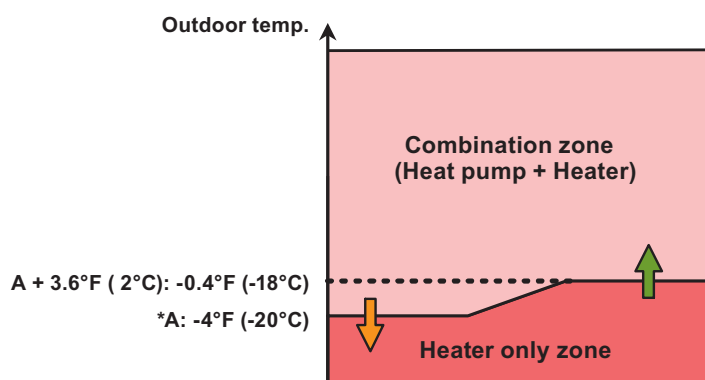

\*: Adjustable by function setting 66

• Operation status

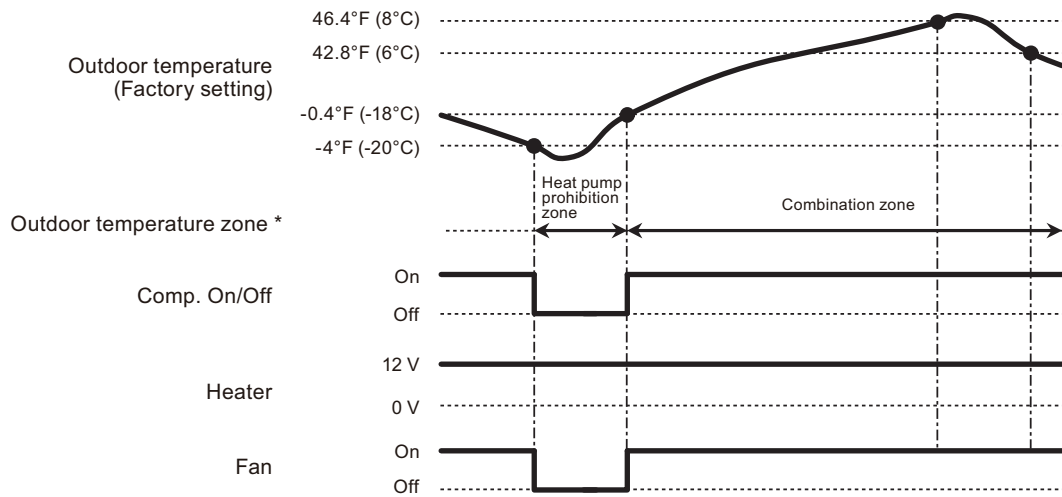

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

## ● Auxiliary heat pump control by outdoor temperature 2

### • External heater output


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Set temperature (Ts) -0.9°F (-0.5°C)
- Temperature of heater off: Set temperature (Ts) +0.9°F (+0.5°C)

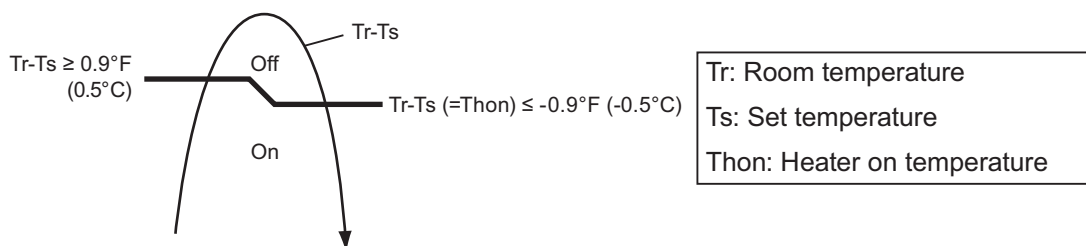


### • Auxiliary heat pump On/Off

- Temperature of heat pump on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

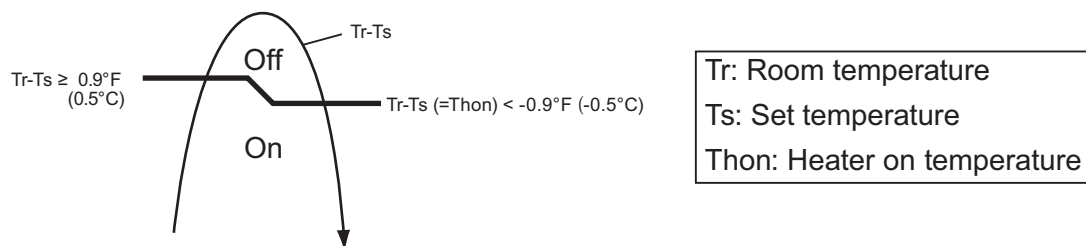


### • Outdoor temperature zone

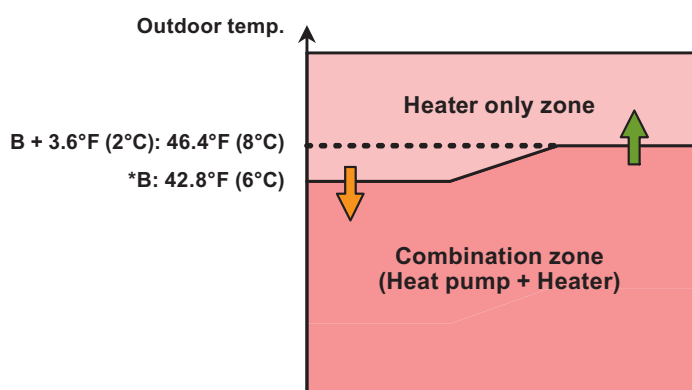

\*: Adjustable by function setting 67

• Operation status

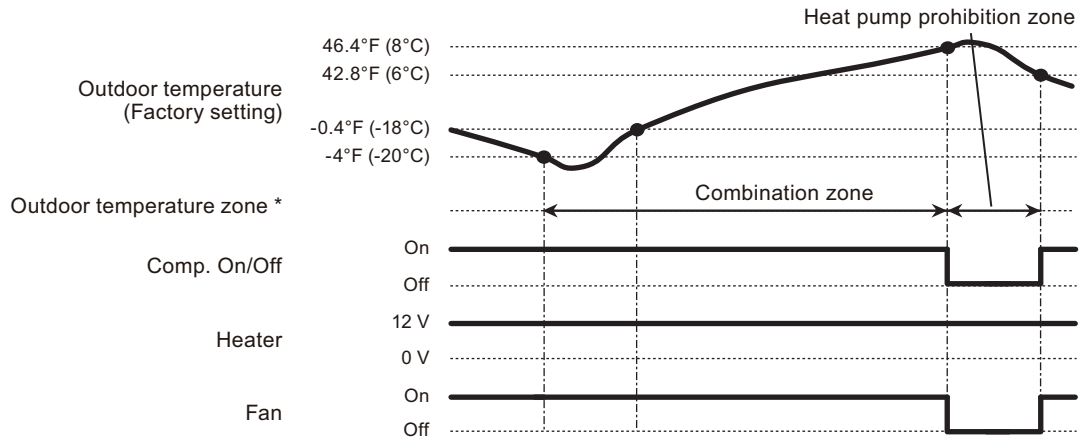

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

### ● Auxiliary heat pump control by outdoor temperature 3

• External heater output


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Set temperature (Ts) -0.9°F (-0.5°C)
- Temperature of heater off: Set temperature (Ts) +0.9°F (+0.5°C)

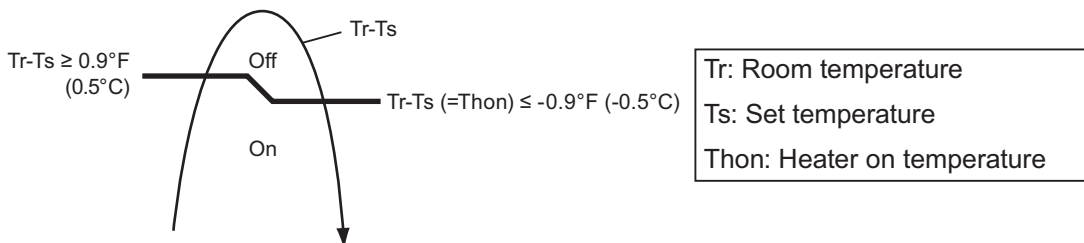


• Auxiliary heat pump On/Off

- Temperature of heat pump on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

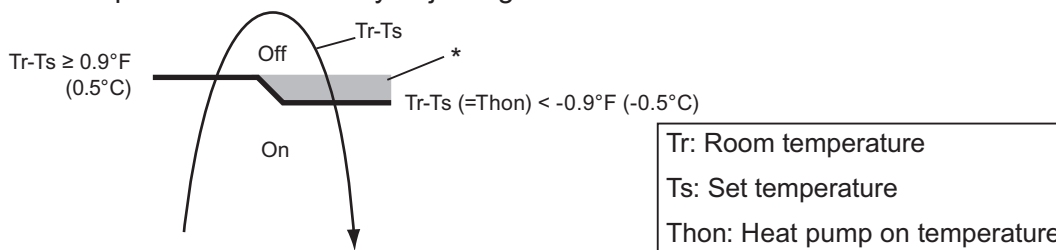


\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

• Outdoor temperature zone

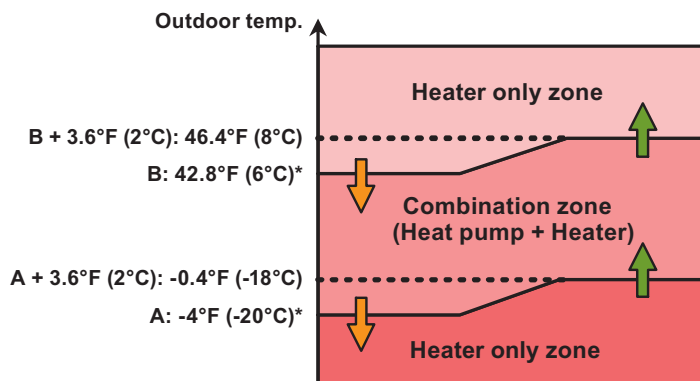

\*: Adjustable by function setting 66 and 67

• Operation status

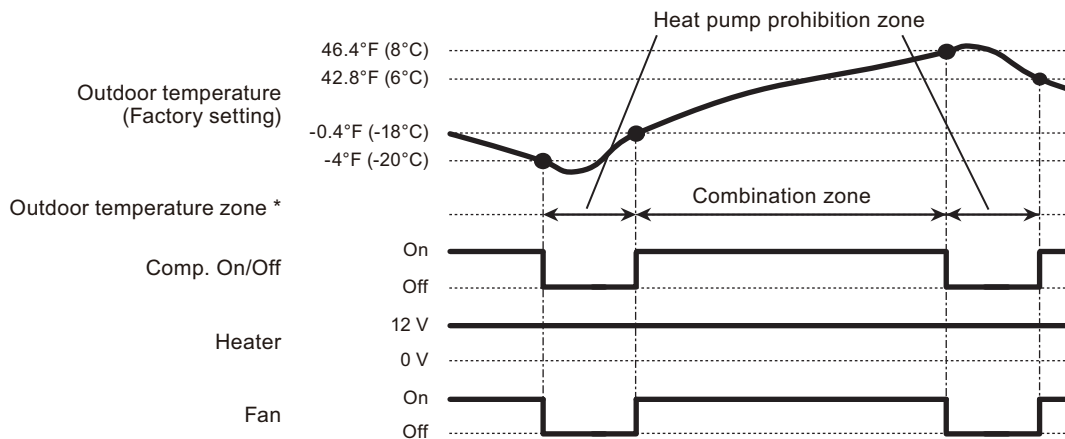

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.


**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run

## ■ Heating thermostat on for humidifier

Situation	Indoor unit				
	Mode	Function setting	Rotary SW	External output	
		Heating thermostat on no. 60		Heating thermostat on	Indoor unit fan operation status
Example of individual connection	5	60-05	7	CN47	Not used
	6	60-06	8	CN312	
	7	60-07	9	CN311	
	8	60-08	A	CN310	


- Example of individual connection

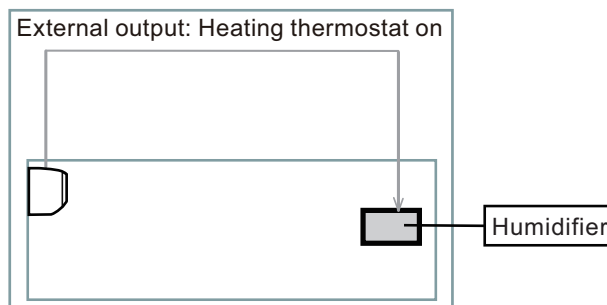

- Operation status

The heating thermostat output for CNB01 (1-2 or 1-3 or 1- or 1-5) will be on when comp on or external heater on.

The heating thermostat output will be off when comp off and external heater off.

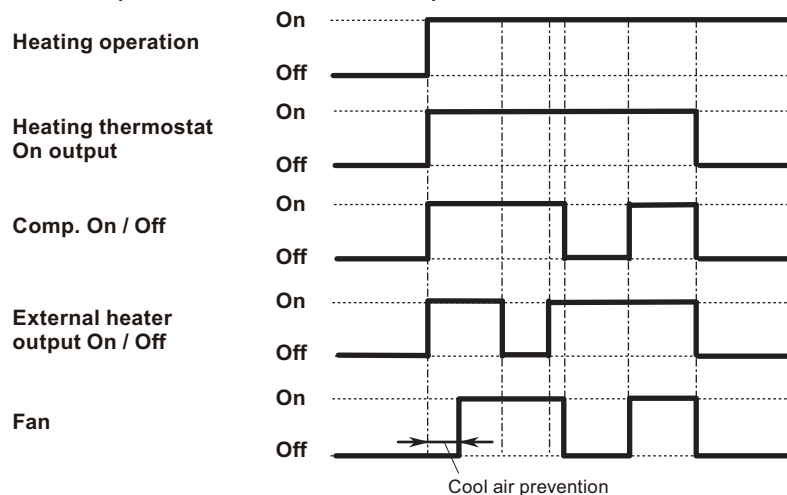

## 10. Group connection


**NOTE:** Group control cannot be used together with WLAN Adapter.

### Installation procedure for group control system:

A number of indoor units can be operated at the same time using a single remote controller.


**NOTE:** When different type of indoor units (such as wall-mounted type and cassette type, cassette type and duct type, or other combinations) are connected using group control system, some functions may no longer be available.

1. Connect up to 16 indoor units in a system.

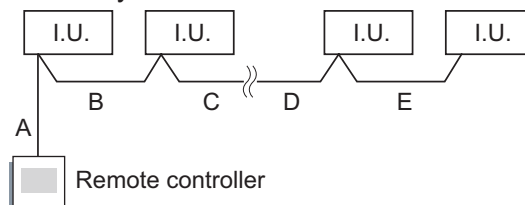

A, B, C, D, E: Remote controller cable		
Wiring length limitation	UTY-RVRU	$A + B + C + D + E \leq 76.5 \text{ yd (70 m)}$
	Other than UTY-RVRU	$A + B + C + D + E \leq 546.8 \text{ yd (500 m)}$

Example of wiring method

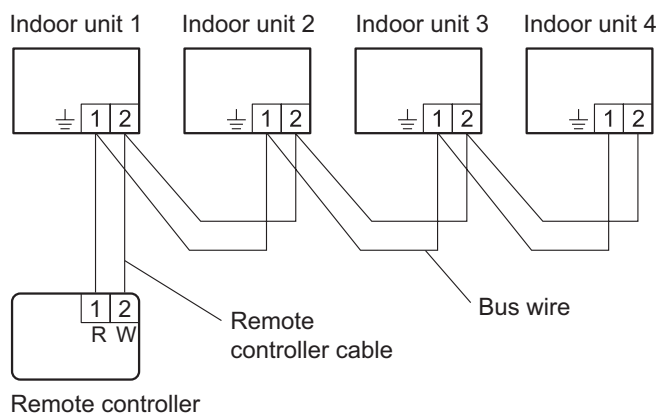


2. Automatic address setting

After the remote controller connection in the system, the automatic address setting runs in the initial starting up. Do not change the remote controller address for the indoor unit.

# 11. Remote controller

## 11-1. Wireless remote controller


### Overview

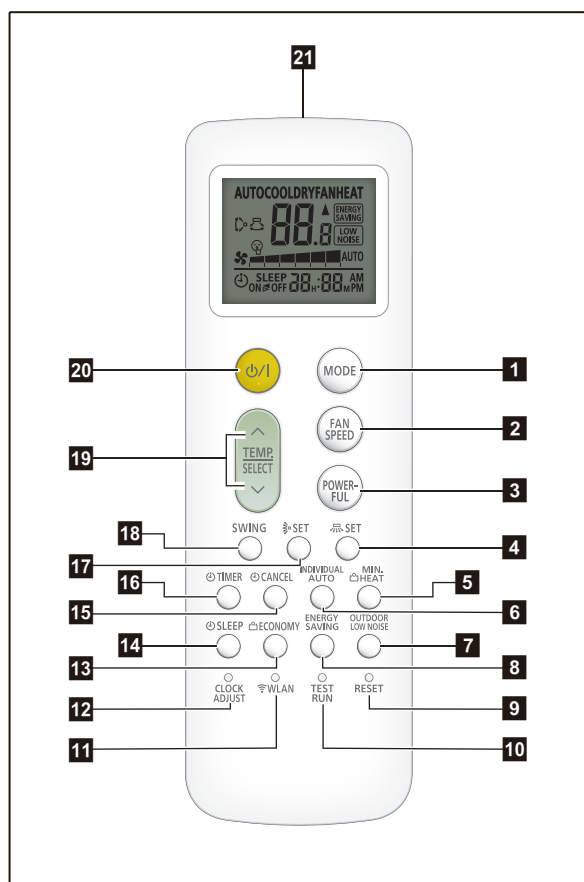

- 1 MODE button
- 2 FAN SPEED button
- 3 POWERFUL button
- 4 SET button (Left/right airflow)
- 5 MIN. HEAT button
- 6 INDIVIDUAL AUTO button
- 7 OUTDOOR LOW NOISE button
- 8 ENERGY SAVING button
- 9 RESET button
- 10 TEST RUN button
- 11 WLAN button
- 12 CLOCK ADJUST button
- 13 ECONOMY button
- 14 SLEEP timer button
- 15 CANCEL button
- 16 TIMER button
- 17 SET button (Up/down airflow)
- 18 SWING button
- 19 TEMP./SELECT button
- 20 START/STOP button
- 21 Signal transmitter

**NOTE:** Functions may differ by type of the indoor unit. For details, refer to the operation manual.

### Display panel

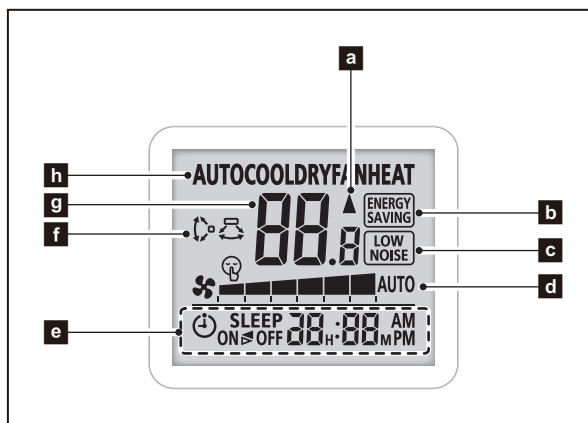


- a Signal transmit indicator
- b ENERGY SAVING mode indicator
- c OUTDOOR LOW NOISE mode indicator
- d Fan speed indicator
- e Clock and Timer indicator
- f Swing indicator
- g Temperature indicator
- h Operating mode indicator

To facilitate explanation, the accompanying illustration has been drawn to show all possible indicators; in actual operation, however, the display will only show those indicators appropriate to the current operation.

# Specifications

## ● Controller


Unit: in (mm)

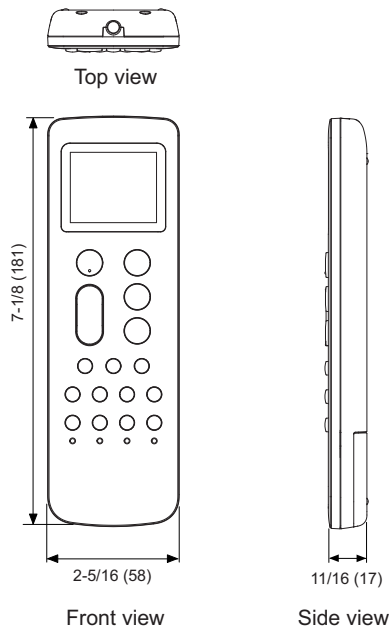

Size (H × W × D)	in (mm)	$7\frac{1}{8} \times 2\frac{5}{16} \times \frac{11}{16}$ (181 × 58 × 17)
Weight	oz (g)	4 (116) (without batteries)

## ● Holder

Unit: in (mm)

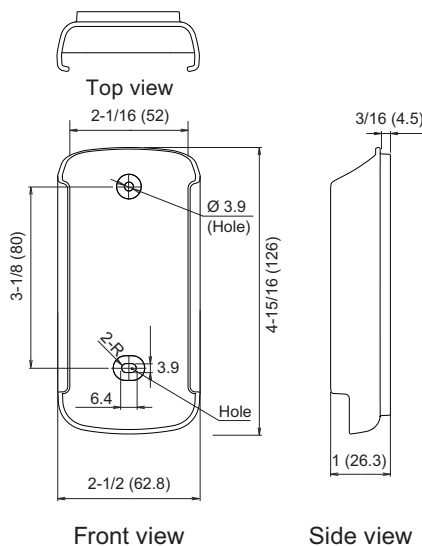

Size (H × W × D)	in (mm)	$4\frac{15}{16} \times 2\frac{1}{2} \times 1$ (126 × 62.8 × 26.3)
Weight	oz (g)	1 (28)

## 12. Function settings

To adjust the functions of this product according to the installation environment, various types of function settings are available.

**NOTE:** Incorrect settings can cause a product malfunction.

### 12-1. Function settings by using remote controller

Some function settings can be changed on the remote controller. After confirming the setting procedure and the content of each function setting, select appropriate functions for your installation environment.

#### ■ Setting procedure by using wireless remote controller

The function number and the associated setting value are displayed on the LCD of the remote controller. Follow the instructions written in the local setup procedure supplied with the remote controller, and select appropriate setting according to the installation environment.

**Before connecting the power supply of the indoor unit, reconfirm following items:**

- Cover for the electrical enclosure on the outdoor unit is in place.
- There is no wiring mistake.
- Piping air tightness test and vacuuming have been performed firmly.
- All the necessary wiring work for outdoor unit has been finished.

After reconfirming the items listed above, connect the power supply of the indoor unit.

**NOTES:**


- Settings will not be changed if invalid numbers or setting values are selected.
- When optional wired remote controller is used, refer to the installation manual enclosed with the remote controller.

#### Entering function setting mode:

While pressing the FAN SPEED button and TEMP./SELECT (^) button simultaneously, press the RESET button to enter the function setting mode.

#### Selecting the function number and setting value:

1. Press MODE button.
2. Press the TEMP./SELECT (^) (v) buttons to select the function number. (Press MODE button to switch between the left and right digits.)
3. Press the FAN SPEED button to proceed to value setting. (Press FAN SPEED button again to return to the function number selection.)
4. Press the TEMP./SELECT (^) (v) buttons to select the setting value. (Press MODE button to switch between the left and right digits.)
5. Press the POWERFUL button once. Please confirm the beeping sound.
6. Press the START/STOP button once to fix the Function setting. Please confirm the beeping sound.
7. Press the RESET button to cancel the function setting mode.
8. After completing the function setting, be sure to disconnect the power supply and then reconnect it.

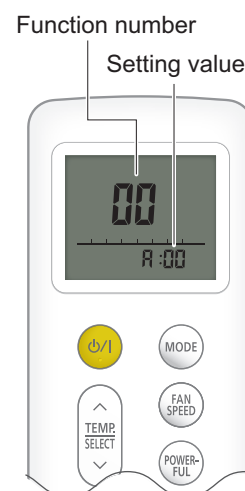

#### **⚠ CAUTION**

After disconnecting the power supply, wait 30 seconds or more before reconnecting it. The function setting will not become active unless the power supply is disconnected and then reconnected.

## ■ Contents of function setting

Each function setting listed in this section is adjustable in accordance with the installation environment.

**NOTE:** Setting will not be changed if invalid numbers or setting values are selected.

### ● Function setting list

	Function no.	Functions
1)	11	Filter sign
2)	30/31	Room temperature control for indoor unit sensor
3)	35/36	Room temperature control for wired remote controller sensor
4)	40	Auto restart
5)	42	Room temperature sensor switching
6)	44	Remote controller custom code
7)	46	External input control
8)	48	Room temperature sensor switching (Aux.)
9)	49	Indoor unit fan control for energy saving for cooling
10)	60	Switching functions for external output terminal
11)	61	Control switching of external heaters
12)	62	Operating temperature switching of external heaters
13)	66	Outdoor temperature zone boundary temperature A
14)	67	Outdoor temperature zone boundary temperature B
15)	71	Standby time for auxiliary equipment operation
16)	72	Heat pump backup setting
17)	73	Emergency heat for external output terminal
18)	94	Fixed operation mode switching
19)	95	Heat insulation condition (building insulation)

#### 1) Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

Function number	Setting value	Setting description	Factory setting
11	00	Standard (400 hours)	
	01	Long interval (1,000 hours)	
	02	Short interval (200 hours)	
	03	No indication	◆

## 2) Room temperature control for indoor unit sensor

Before performing this setting, refer to Function 95.

Depending on the installed environment, correction of the room temperature sensor may be required. Select the appropriate control setting according to the installed environment.

The temperature of the room temperature sensor is corrected as follows:

$$\text{Corrected temp.} = \text{Temp. of the room temp. sensor} - \text{Correction temp. value}$$

Example of correction:

When the temperature of the room temp. sensor is 78°F and the setting value is "03" (-2°F), the corrected temp. will be 80°F (78°F - [-2°F]).

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

\*When Function 95-01 (High insulation) is set, the Standard setting "00" will be the same as "No correction 0.0°F (0.0°C)" (01).

Function number		Setting value	Setting description	Factory setting	
30 (For cooling)	31 (For heating)	00	Standard setting*	◆	
		01	No correction 0.0°F (0.0°C)		
		02	-1°F (-0.5°C)	More cooling Less heating	
		03	-2°F (-1.0°C)		
		04	-3°F (-1.5°C)		
		05	-4°F (-2.0°C)		
		06	-5°F (-2.5°C)		
		07	-6°F (-3.0°C)		
		08	-7°F (-3.5°C)		
		09	-8°F (-4.0°C)		
		10	+1°F (+0.5°C)	Less cooling More heating	
		11	+2°F (+1.0°C)		
		12	+3°F (+1.5°C)		
		13	+4°F (+2.0°C)		
		14	+5°F (+2.5°C)		
		15	+6°F (+3.0°C)		
		16	+7°F (+3.5°C)		
17	+8°F (+4.0°C)				

### 3) Room temperature control for wired remote controller sensor

Before performing this setting, refer to Function 95.

Depending on the installed environment, correction of the wire remote temperature sensor may be required. Select the appropriate control setting according to the installed environment.

To change this setting, set Function 42 to "Both" (01).

Ensure that the Thermo Sensor icon is displayed on the remote controller screen.

\*When Function 95-01 (High insulation) is set, the Standard setting "00" will be the same as "No correction 0.0°C" (01).

Function number		Setting value	Setting description	Factory setting	
35 (For cooling)	36 (For heating)	00	Standard setting*	◆	
		01	No correction 0.0°F (0.0°C)		
		02	-1°F (-0.5°C)	More cooling Less heating	
		03	-2°F (-1.0°C)		
		04	-3°F (-1.5°C)		
		05	-4°F (-2.0°C)		
		06	-5°F (-2.5°C)		
		07	-6°F (-3.0°C)		
		08	-7°F (-3.5°C)		
		09	-8°F (-4.0°C)		
		10	+1°F (+0.5°C)	Less cooling More heating	
		11	+2°F (+1.0°C)		
		12	+3°F (+1.5°C)		
		13	+4°F (+2.0°C)		
		14	+5°F (+2.5°C)		
		15	+6°F (+3.0°C)		
		16	+7°F (+3.5°C)		
17	+8°F (+4.0°C)				

### 4) Auto restart

Enables or disables automatic restart after a power interruption.

Function number	Setting value	Setting description	Factory setting
40	00	Enable	◆
	01	Disable	

**NOTE:** Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

### 5) Room temperature sensor switching

(Only for wired remote controller)

When using the wired remote controller temperature sensor, change the setting to "Both" (01).

Function number	Setting value	Setting description	Factory setting
42	00	Indoor unit	◆
	01	Both	

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

**NOTE:** Remote controller sensor must be turned on by using the remote controller.

**6) Remote controller custom code**

(Only for wireless remote controller)

The indoor unit custom code can be changed. Select the appropriate custom code.

Function number	Setting value	Setting description	Factory setting
44	00	A	◆
	01	B	
	02	C	
	03	D	

**7) External input control**

“Operation/Stop” mode or “Forced stop” mode can be selected.

Function number	Setting value	Setting description	Factory setting
46	00	Operation/Stop mode 1 (Remote controller enabled)	◆
	01	(Setting prohibited)	
	02	Forced stop mode	
	03	Operation/Stop mode 2 (Remote controller disabled)	

**8) Room temperature sensor switching (Aux.)**

To use the temperature sensor on the wired remote controller only, change the setting to “Wired remote controller” (01).

This function will only work if the function setting 42 is set at “Both” (01).

When the setting value is set to “Both” (00), more suitable control of the room temperature is possible by setting function setting 30 and 31 too.

Function number	Setting value	Setting description	Factory setting
48	00	Both	◆
	01	Wired remote controller	

**9) Indoor unit fan control for energy saving for cooling**

Enables or disables the power-saving function by controlling the indoor unit fan rotation when the outdoor unit is stopped during cooling operation.

Function number	Setting value	Setting description	Factory setting
49	00	Disable	
	01	Enable	
	02	Remote controller	◆

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed.

02: Enable or disable this function by remote controller setting.

**NOTE:** Set to “00” or “01” when connecting a remote controller that cannot set the Fan control for energy saving function or connecting a network converter. To confirm if the remote controller has this setting, refer to the operating manual of each remote controller.

## 10) Switching functions for external output terminal

Functions of the external output terminal can be switched. For details, refer to “External input and output”.

Function number	Setting value	Setting description	Factory setting
60	00	Operation status	◆
	01—04	Cooling thermostat On	
	05	Heating operation	
	06	Operation/Stop	
	07—08	Cooling thermostat On	
	09	Error status	
	10	Indoor unit fan operation status	
	11	External heater	

## 11) Control switching of external heaters

Sets the control method for external heater to be used.

For details, refer to “External heater output” in ["Details of control output function"](#) on page 36.

Function number	Setting value	Setting description	Factory setting
61	00	Auxiliary heater control 1	◆
	01	Auxiliary heater control 2	
	02	Heat pump prohibition control	
	03	Auxiliary heater control by outdoor temperature 1	
	04	Auxiliary heater control by outdoor temperature 2	
	05	Auxiliary heater control by outdoor temperature 3	
	06	Auxiliary heat pump control	
	07	Auxiliary heat pump control by outdoor temperature 1	
	08	Auxiliary heat pump control by outdoor temperature 2	
	09	Auxiliary heat pump control by outdoor temperature 3	

## 12) Operating temperature switching of external heaters

Sets the temperature conditions when the external heater is ON.

For details, refer to “External heater output” in ["Details of control output function"](#) on page 36.

Function number	Setting value	Setting description		Factory setting
		Heater: On	Heater: Off	
62	00	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	◆
	01	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	
	02	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	
	03	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	
	04	-7.2 °F (-4 °C)	-1.8 °F (-1 °C)	
	05	-9.0 °F (-5 °C)	-1.8 °F (-1 °C)	

**13) Outdoor temperature zone boundary temperature A**

Setting required if changing of the outdoor temperature setting for heat pump prohibition zone is required when auxiliary heater control by outdoor temperature 1 and 2 are performed on the indoor unit.

For details, refer to "External heater output" in ["Details of control output function"](#) on page 36.

Function number	Setting value	Setting description	Factory setting
66	00	-4.0°F (-20°C)	◆
	01	-0.4°F (-18°C)	
	02	3.2°F (-16°C)	
	03	6.8°F (-14°C)	
	04	10.4°F (-12°C)	
	05	14.0°F (-10°C)	
	06	17.6°F (-8°C)	
	07	21.2°F (-6°C)	
	08	24.8°F (-4°C)	

**14) Outdoor temperature zone boundary temperature B**

Setting required if changing of the outdoor temperature setting for heat pump only zone is required when auxiliary heater control by outdoor temperature 1 and 3 is performed on the indoor unit.

For details, refer to "External heater output" in ["Details of control output function"](#) on page 36.

Function number	Setting value	Setting description	Factory setting
67	00	42.8°F (6°C)	◆
	01	14.0°F (-10°C)	
	02	17.6°F (-8°C)	
	03	21.2°F (-6°C)	
	04	24.8°F (-4°C)	
	05	28.4°F (-2°C)	
	06	32.0°F (0°C)	
	07	35.6°F (2°C)	
	08	39.2°F (4°C)	
	09	42.8°F (6°C)	
	10	46.4°F (8°C)	
	11	50.0°F (10°C)	
	12	53.6°F (12°C)	
	13	57.2°F (14°C)	
	14	60.8°F (16°C)	
	15	64.4°F (18°C)	

**15) Standby time for auxiliary equipment operation**

Sets the standby time until the auxiliary equipment operation starts during primary equipment operation.

For details, refer to ["Details of control output function"](#) on page 36.

Function number	Setting value	Setting description	Factory setting
71	00	Disable	◆
	01	1 minute	
	02	2 minutes	
	•	•	
	•	•	
	•	•	
	98	98 minutes	
	99	99 minutes	

**16) Heat pump backup setting**

Enables or disables the heat pump backup operation.

Function number	Setting value	Setting description	Factory setting
72	00	Disable	◆
	01	Enable	

**17) Emergency heat for external output terminal**

Enables or disables emergency heat input.

Function number	Setting value	Setting description	Factory setting
73	00	Disable	◆
	01	Enable	

**NOTE:** When this function is used, IR Receiver Unit or Wired Remote Controller is necessary.

**18) Fixed operation mode switching**

Sets the operation mode to heat pump, heating only, or cooling only.

Function number	Setting value	Setting description	Factory setting
94	00	Heat pump	◆
	01	Heating only	
	02	Cooling only	

**19) Heat insulation condition (building insulation)**

Heat insulation conditions differ according to the installed environment.

“Standard insulation” (00) allows system to rapidly respond to the cooling or heating load changes.

“High insulation” (01) is when the heat insulation structure of the building is high and does not require system to rapidly respond to cooling or heating load changes.

When “High insulation” (01) is selected:

- Overheating (overcooling) is prevented at the start-up.
- All room-temperature control settings (Function 30, 31, 35, and 36) will reset to “No correction 0.0°F (0.0°C)”.

Function number	Setting value	Setting description	Factory setting
95	00	Standard insulation	◆
	01	High insulation	

**NOTE:** When changing Function 95, perform this setting before other room-temperature control settings (Function 30, 31, 35, and 36). If Function 95 is not set first, room-temperature control settings (Function 30, 31, 35, and 36) will be reset and you must re-do them again.

## 12-2. Custom code setting for wireless remote controller


To interconnect the air conditioner and the wireless remote controller, assignment of the custom code for the wireless remote controller is required.

**NOTE:** Air conditioner cannot receive a signal if the air conditioner has not been set for the custom code.

When 2 or more air conditioners are installed in a room, and the remote controller is operating an air conditioner other than the one you wish to set, change the custom code of the remote controller to operate only the air conditioner you wish to set. (4 selections possible.)

Confirm the setting of the remote controller custom code and the function setting. If these do not match, the remote controller cannot be used to operate for the air conditioner.

1. Press the START/STOP button until only the clock is displayed on the remote controller display.
2. Press the MODE button for at least 5 seconds to display the current custom code. (Initially set to  $\overline{A}$ .)
3. Press the TEMP./SELECT ( $\wedge$ ) ( $\vee$ ) buttons to change the custom code between  $\overline{A} \rightarrow \overline{B} \rightarrow \overline{C} \rightarrow \overline{D}$ . Match the code on the display to the air conditioner custom code.
4. Press the MODE button again to return to the clock display. The custom code will be changed.

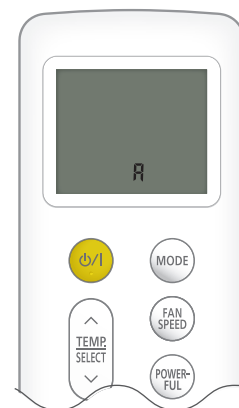
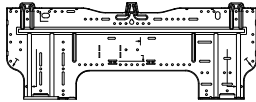








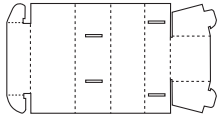
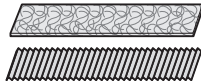


### NOTES:

- If no button is pressed within 30 seconds after the custom code is displayed, the system returns to the original clock indicator. In this case, start again from step 1.
- The air conditioner custom code is set to  $\overline{A}$  prior to shipment. To change the custom code, contact your retailer.
- If you do not know the assigned code for the air conditioner, try each of the custom code ( $\overline{A} \rightarrow \overline{B} \rightarrow \overline{C} \rightarrow \overline{D}$ ) until you find the code which operates the air conditioner.

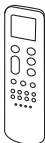
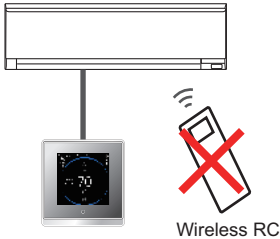

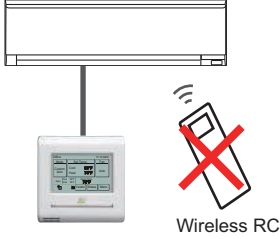

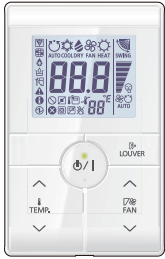
## 13. Accessories

### 13-1. Models: ASUH09KTAS, ASUH12KTAS, ASUH15KTAS, ASUH09KTAB, ASUH12KTAB, and ASUH15KTAB

Part name	Exterior	Qty	Part name	Exterior	Qty
Operation manual		1	Wall hook bracket		1
Installation manual		1	Self-tapping screw (large)		5
Remote controller		1	Self-tapping screw (small)		2
Remote controller holder		1	Cloth tape		1
Battery		2	Filter holder		2
Installation spacer		1	Air cleaning filters		1

# 14. Optional parts






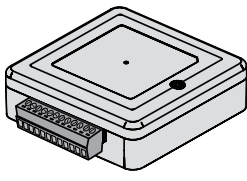


## 14-1. Controllers

Exterior	Part name	Model name	Summary
	Wired Remote Controller (Touch Panel)	UTY-RVRU	<p>Remote controller that provides the functions you need in a sleek design that uniquely transforms itself to blend with any interior.</p> <p>Optional Communication Kit is necessary for installation.</p> <p><b>NOTE:</b> When this remote controller is connected, wireless remote controller cannot be used.</p> 
	Wired Remote Controller (Touch Panel)	UTY-RNRUZ*	<p>Easy finger touch operation with LCD panel. Backlit LCD enables easy operation in a dark room.</p> <p>Optional Communication Kit is necessary for installation.</p> <p><b>NOTE:</b> When this remote controller is connected, wireless remote controller cannot be used.</p> 
	Simple Remote Controller	UTY-RSRY	<p>Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, temperature setting, and operation mode.</p> <p>Optional Communication Kit is necessary for installation.</p>
	Simple Remote Controller	UTY-RHRY	<p>Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, and temperature setting.</p> <p>Optional Communication Kit is necessary for installation.</p>

**NOTES:**

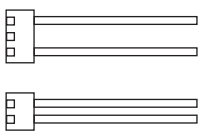- Available functions may differ by the remote controller. For details, refer to the operation manual.
- When using the group controlling system of the Wired Remote Controller, using WLAN Adapter is prohibited.
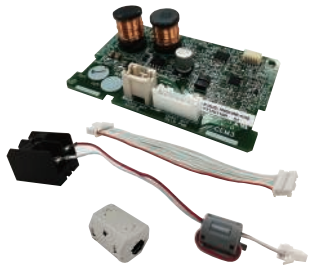
## 14-2. Others

Exterior	Part name	Model name	Summary
	External Connect Kit	UTY-XWZX	Use to connect with various peripheral devices and air conditioner PCB. Connecting point: CN46 and CN47 on Main PCB
	External Connect Kit	UTY-XWZXZ5	Required when external device is connected. Connecting point: CN46 and CN47 on Main PCB
	External Input and Output PCB	UTY-XCSXZ3	Use to connect with external devices and air conditioner PCB. Optional External Connect Kit might be required to connect locally purchased devices via this PCB. Connecting point: CN65 on Main PCB
	Communication Kit	UTY-TWRXZ4	Use to connect Non-polar 2-core wired remote controller. Connecting point: CN13 on Main PCB
	Modbus Converter	UTY-VMSX	For connection between indoor unit with UART interface and a Modbus open network. Connecting point: CN65 on Main PCB
	Thermostat Converter	UTY-TTRXZ*	This converter can control Fujitsu General products using a third-party thermostat controller. Optional Communication Kit is necessary for installation. Simultaneous use with Wireless Remote Controller is prohibited.
	Network Converter	UTY-VTGX	This converter is required when connecting single split system to VRF network system. Optional Communication Kit is necessary for installation.
	External Switch Controller	UTY-TERX	Air conditioner switching can be controlled by connecting other external sensor switches. Optional Communication Kit is necessary for installation.

# **Part 2. OUTDOOR UNIT**

---

**SINGLE TYPE:**

**AOUH09KTAP1**

**AOUH12KTAP1**

**AOUH15KTAP1**

# 1. Specifications

Type			Inverter, Heat pump		
Model name			AOUH09KTAP1	AOUH12KTAP1	AOUH15KTAP1
Power supply			208/230 V~ 60 Hz		
Power supply intake			Outdoor unit		
Available voltage range			187—253 V		
Starting current			A		
Fan	Airflow rate	Cooling	3.0	4.2	4.9
		Heating	1,136 (1,930)	1,377 (2,340)	1,472 (2,500)
	Type × Qty		1,042 (1,770)	1,107 (1,880)	1,201 (2,040)
	Motor output		Propeller fan × 1		
Sound pressure level*	Cooling	dB (A)	44	48	51
			Heating	44	49
Heat exchanger type	Dimensions (H × W × D)	in (mm)	Main 1: 23-1/8 × 34-11/16 × 11/16 (588 × 881 × 18.19) Main 2: 23-1/8 × 33-1/2 × 11/16 (588 × 851 × 18.19)	Main 1: 26-7/16 × 34-11/16 × 11/16 (672 × 881 × 18.19) Main 2: 26-7/16 × 33-1/2 × 11/16 (672 × 851 × 18.19)	Main 1: 26-7/16 × 34-3/8 × 11/16 (672 × 873 × 18.19) Main 2: 26-7/16 × 33-1/4 × 11/16 (672 × 845 × 18.19) Main 3: 26-7/16 × 30-7/8 × 11/16 (672 × 784 × 18.19)
			Fin pitch	FPI	Main 1: 20 Main 2: 20
	Rows × Stages		Main 1: 1 × 28 Main 2: 1 × 28	Main 1: 1 × 32 Main 2: 1 × 32	Main 1: 1 × 32 Main 2: 1 × 32 Main 3: 1 × 32
	Pipe type		Copper tube		
	Fin type	Type (Material) Surface treatment	Aluminum PC fin		
Compressor	Type		DC rotary		
	Motor output	W	925		1,060
Refrigerant	Type		R32		
	Charge	lb oz	2 lb 11 oz	2 lb 15 oz	3 lb 1 oz
		g	1,220	1,320	1,390
Refrigerant oil	Type		RmM68AF		
	Amount	in <sup>3</sup> (cm <sup>3</sup> )	24.4 (400)		
Enclosure	Material		Steel sheet		
	Color		Beige Approximate color of Munsell 10YR 7.5/1.0		
Dimensions (H × W × D)	Net	in (mm)	24-7/8 × 31-7/16 × 11-7/16 (632 × 799 × 290)	28-3/16 × 32-5/16 × 12-3/8 (716 × 820 × 315)	
	Gross		27-1/4 × 37 × 14-3/4 (692 × 940 × 375)	30-9/16 × 37-13/16 × 17-11/16 (776 × 961 × 450)	
Weight	Net	lb (kg)	86 (39)	93 (42)	97 (44)
	Gross		95 (43)	104 (47)	108 (49)
Connection pipe	Size	Liquid	Ø1/4 (Ø6.35)		
		Gas	Ø3/8 (Ø9.52)		
	Method		Flare		
	Pre-charge length		49 (15)		
	Min. length	ft (m)	10 (3)		
	Max. length		66 (20)		
Max. height difference	49 (15)				
Operation range	Cooling	°F (°C)	14 to 122 (-10 to 50)		
	Heating		-22 to 75 (-30 to 24)		

## NOTES:

- Specifications are based on the following conditions:
  - Cooling: Indoor temperature of 80°FDB (26.67°CDB)/67°FWB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB)/75°FWB (23.9°CWB).
  - Heating: Indoor temperature of 70°FDB (21.11°CDB)/59°FWB (15°CWB), and outdoor temperature of 47°FDB (8.33°CDB)/43°FWB (6.11°CWB).
  - Pipe length: 25 ft (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)
- Protective function might work when using it outside the operation range.
- \*: Sound pressure level
  - Measured values in manufacturer's semi-anechoic chamber.
  - Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.


## 2. Dimensions

### 2-1. Model: AOUH09KTAP1


Unit: in (mm)

OUTDOOR UNIT  
AOUH09-15KTAP1

OUTDOOR UNIT  
AOUH09-15KTAP1

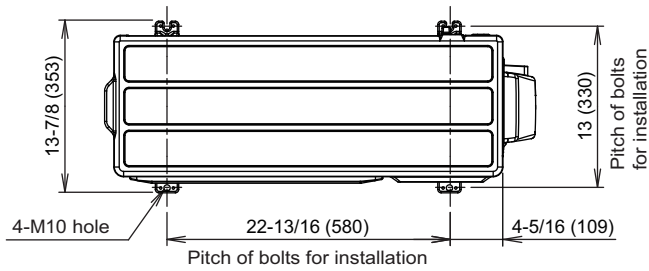


Top view

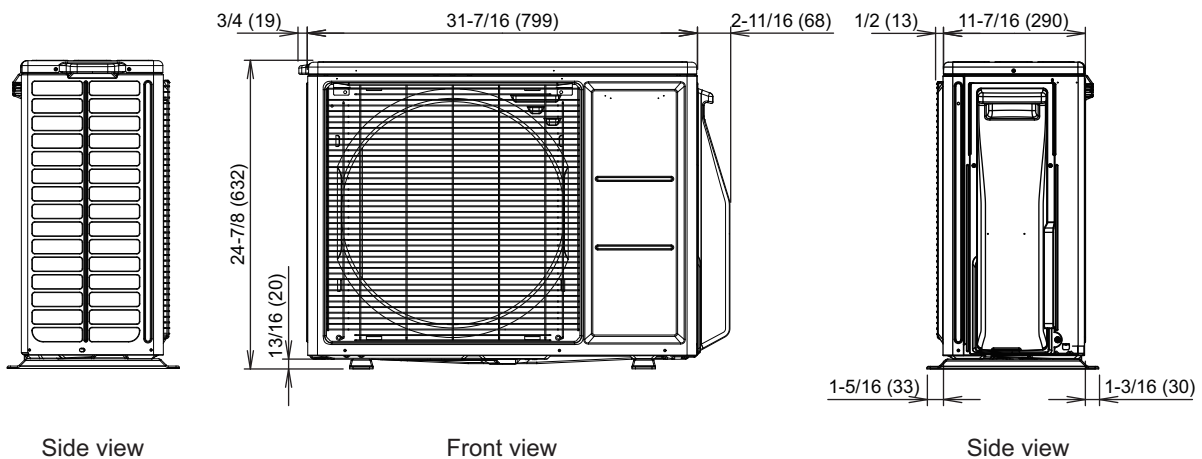


Side view

Front view

Side view

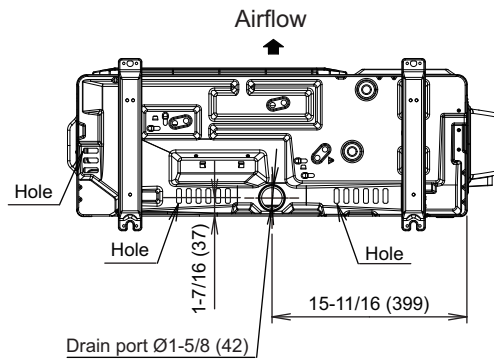

Bottom view

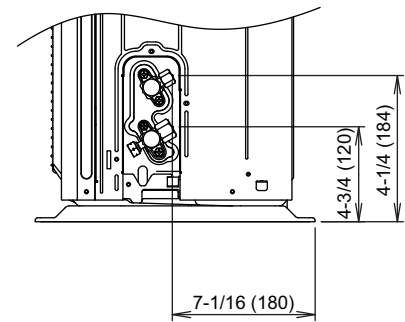



Side view (Valve part)

## 2-2. Models: AOUH12KTAP1 and AOUH15KTAP1

Unit: in (mm)

OUTDOOR UNIT  
AOUH09-15KTAP1


OUTDOOR UNIT  
AOUH09-15KTAP1

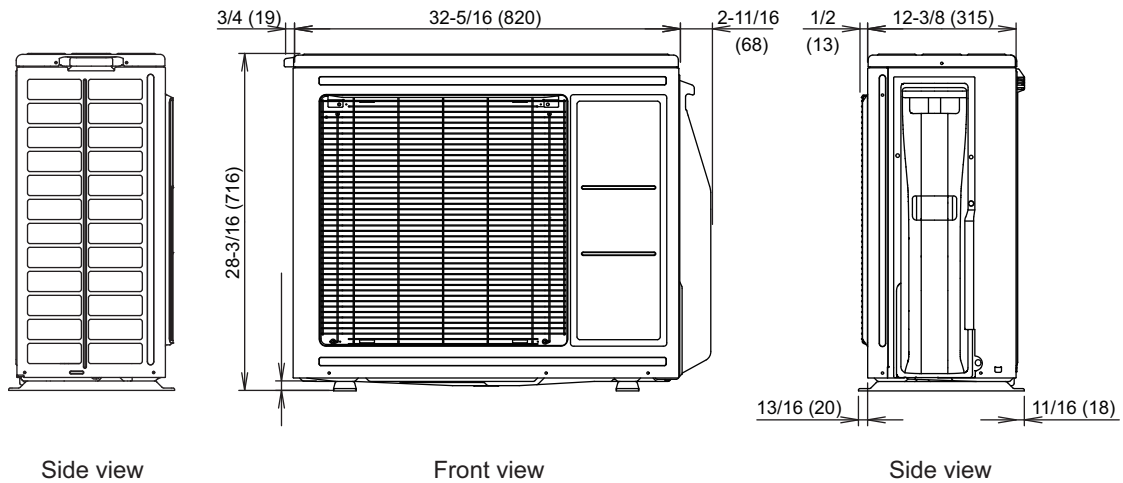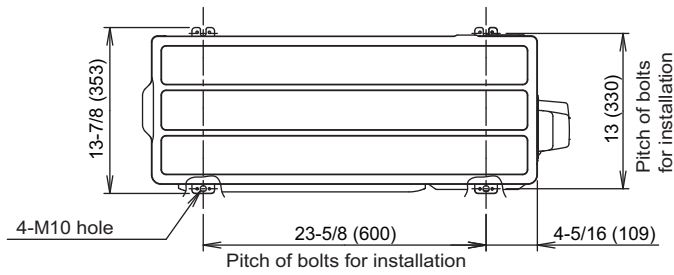

Side view

Front view

Side view

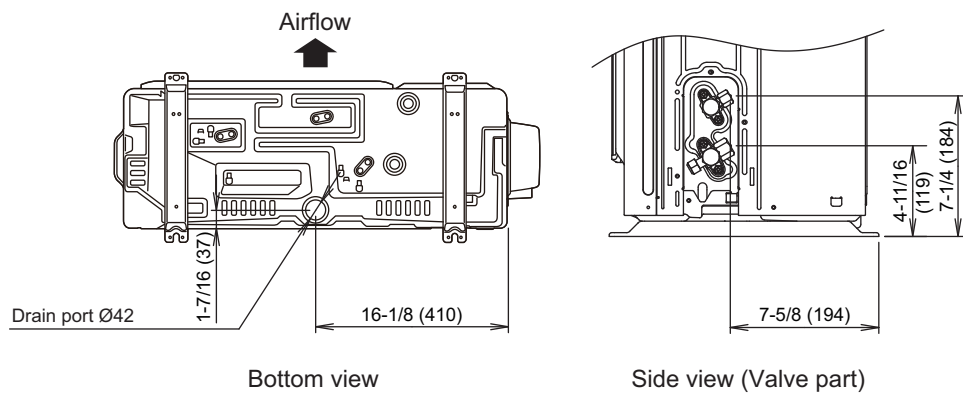

Bottom view

Side view (Valve part)

## 3. Installation space

### 3-1. Models: AOUH09KTAP1, AOUH12KTAP1, and AOUH15KTAP1

#### ■ Space requirement

Provide sufficient installation space for product safety.

#### ⚠ CAUTION

Keep the space shown in the installation examples.


If the installation is not performed accordingly, it could cause a short circuit and result in a lack of operating performance.

#### ● Single outdoor unit installation


- When the upper space is open:

Unit: in (mm)


Obstacles at rear only

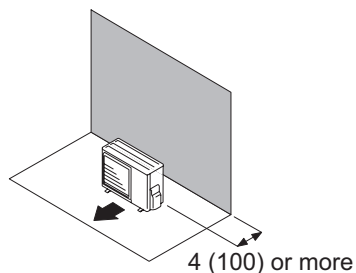


Obstacles at rear and sides

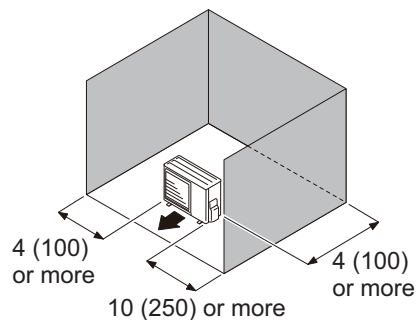

Obstacles at front

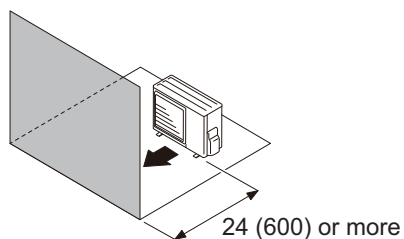


Obstacles at front and rear

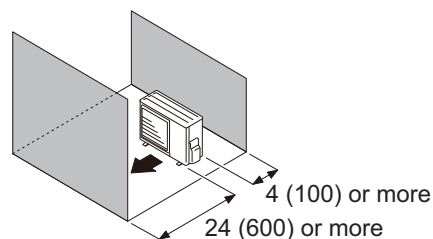


- When an obstruction in the upper space:

Unit: in (mm)

Obstacles at rear and above

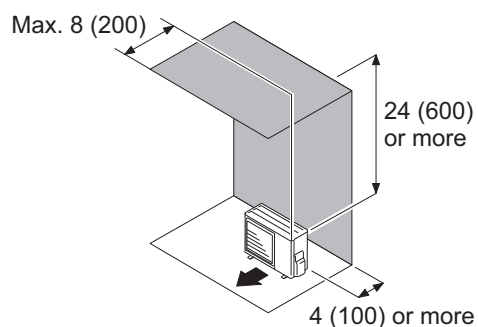

Obstacles at rear, sides, and above

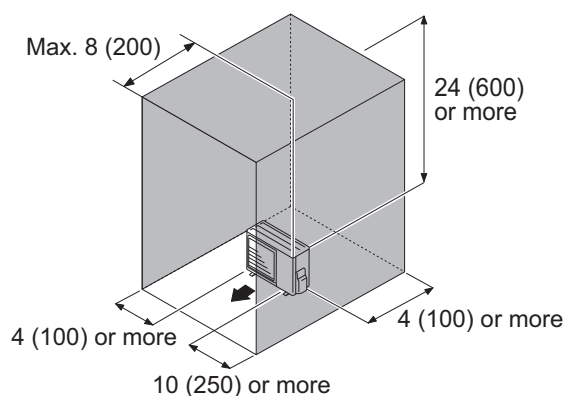


## ● Multiple outdoor unit installation


- Provide at least 10 in (250 mm) of space between the outdoor units if multiple units are installed.
- When routing the piping from the side of an outdoor unit, provide space for piping.
- No more than 3 units must be installed side by side.  
When 4 units or more are arranged in a line, provide the space as shown in the following example “When an obstruction in the upper space:”.
- **When the upper space is open:**

Unit: in (mm)


Obstacles at rear only

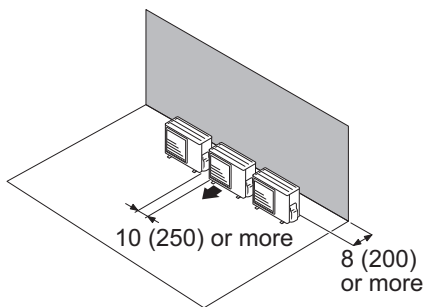

Obstacles at front only

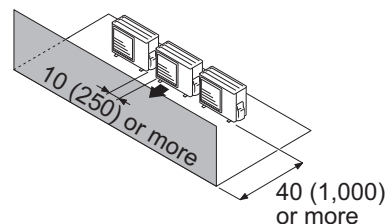


Obstacles at front and rear

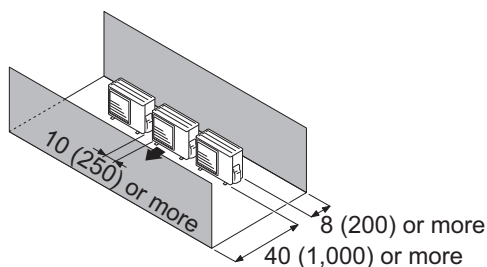

- **When an obstruction in the upper space:**

Unit: in (mm)


Obstacles at rear and above.

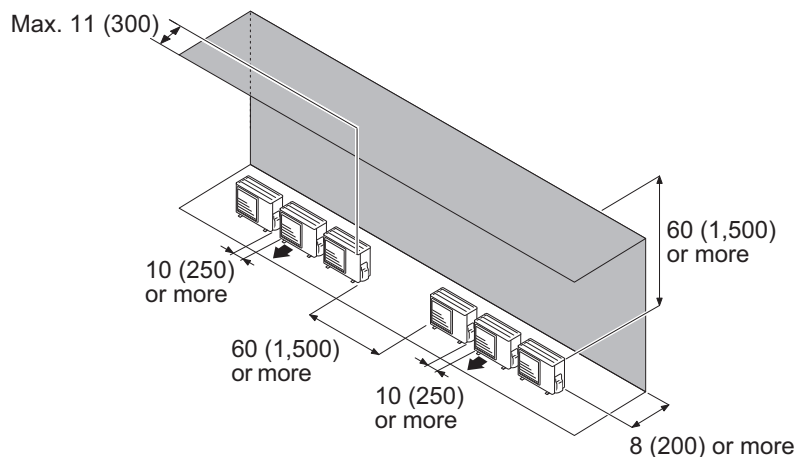



## ● Outdoor units installation in multi-row

Unit: in (mm)

Single parallel unit arrangement

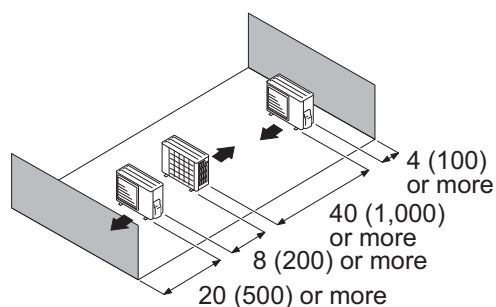

Multiple parallel unit arrangement

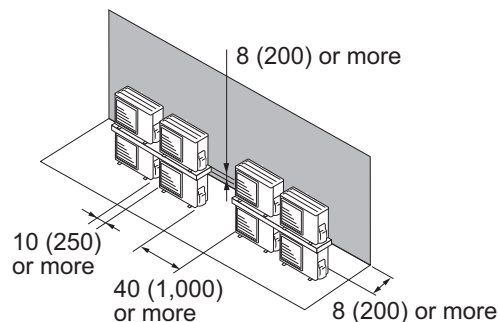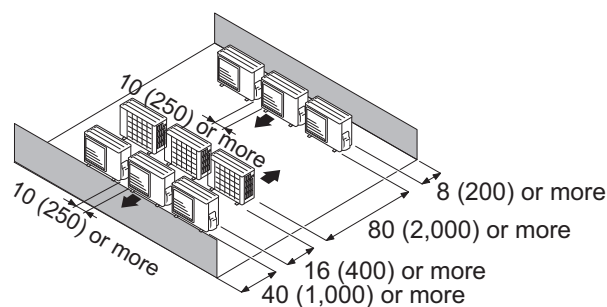


### NOTES:

- If the space is larger than stated above, the condition will be the same as when there is no obstacle.
- When installing the outdoor unit, be sure to open the front and left side to obtain better operation efficiency.

### ⚠ CAUTION

- Do not install the outdoor unit in two-stage where the drain water could freeze. Otherwise the drainage from the upper unit may form ice and cause a malfunction of the lower unit.
- When the outdoor temperature is 32 °F (0 °C) or less, do not use the accessory drain pipe and drain cap. If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold climate. (For reverse cycle model only.)
- In area with heavy snowfall, if the inlet and outlet of the outdoor unit is blocked with snow, it might become difficult to get warm, and it is likely to cause product malfunction. Construct a canopy and a pedestal, or place the unit on a high stand that is locally installed.

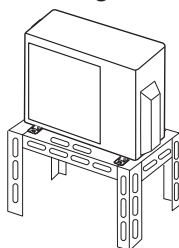


## 4. Refrigerant circuit

### 4-1. Models: AOUH09KTAP1 and AOUH12KTAP1

OUTDOOR UNIT  
AOUH09-15KTAP1

OUTDOOR UNIT  
AOUH09-15KTAP1

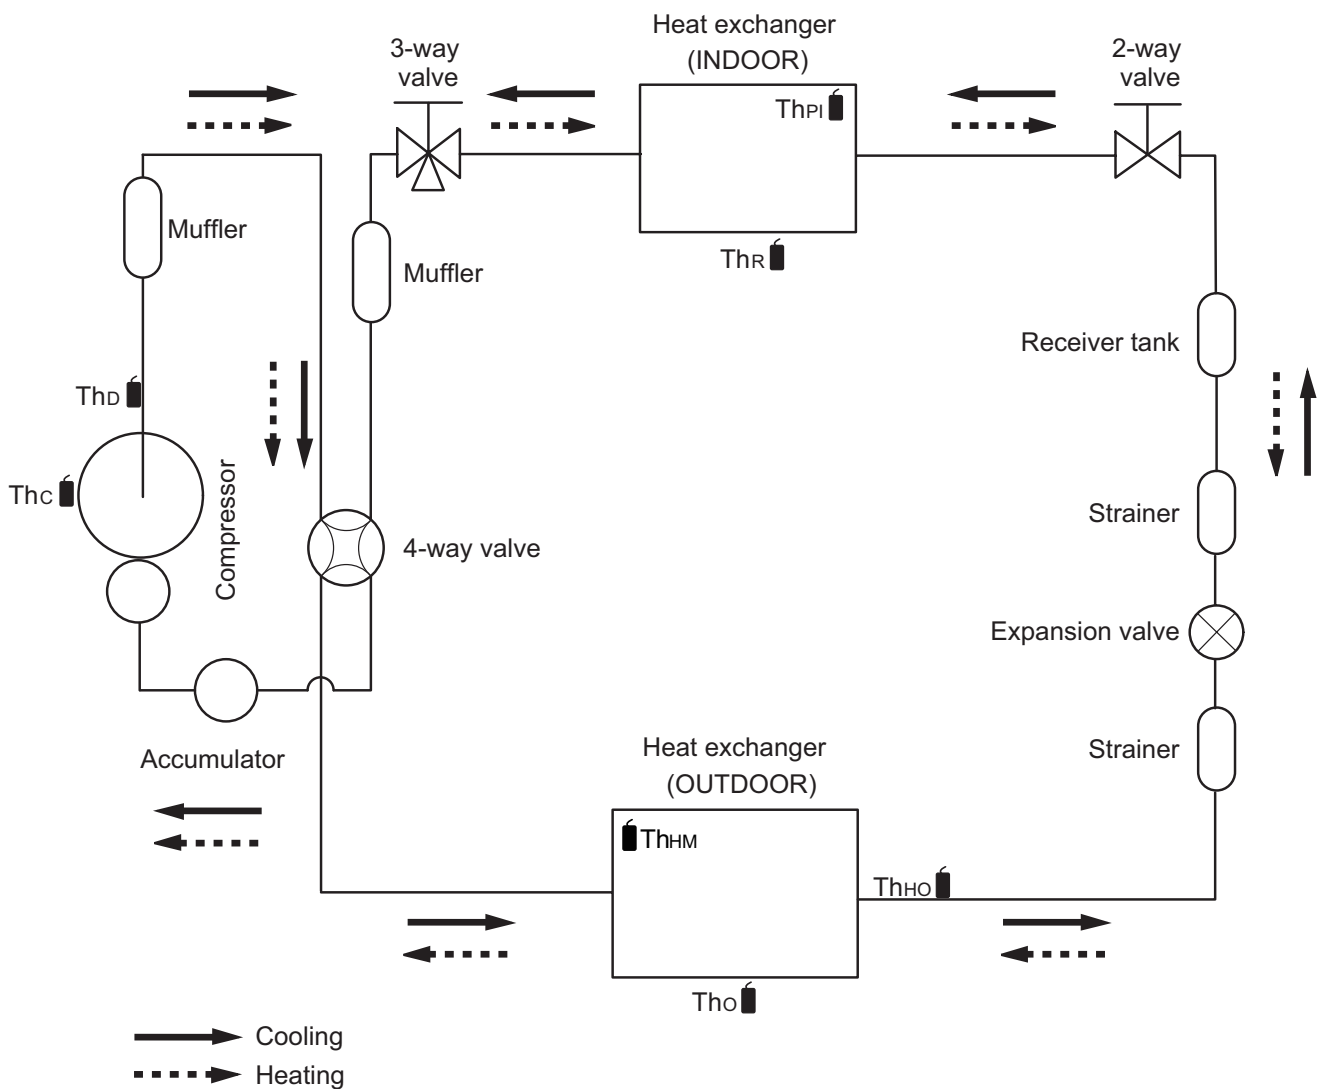


- Th<sub>c</sub> : Thermistor (Compressor temperature)
- Th<sub>d</sub> : Thermistor (Discharge temperature)
- Th<sub>HM</sub> : Thermistor (Heat exchanger middle temperature)
- Th<sub>o</sub> : Thermistor (Outdoor temperature)
- Th<sub>HO</sub> : Thermistor (Heat exchanger out temperature)
- Th<sub>PI</sub> : Thermistor (Pipe temperature)
- Th<sub>R</sub> : Thermistor (Room temperature)

## 4-2. Model: AOUH15KTAP1

OUTDOOR UNIT  
AOUH09-15KTAP1

OUTDOOR UNIT  
AOUH09-15KTAP1

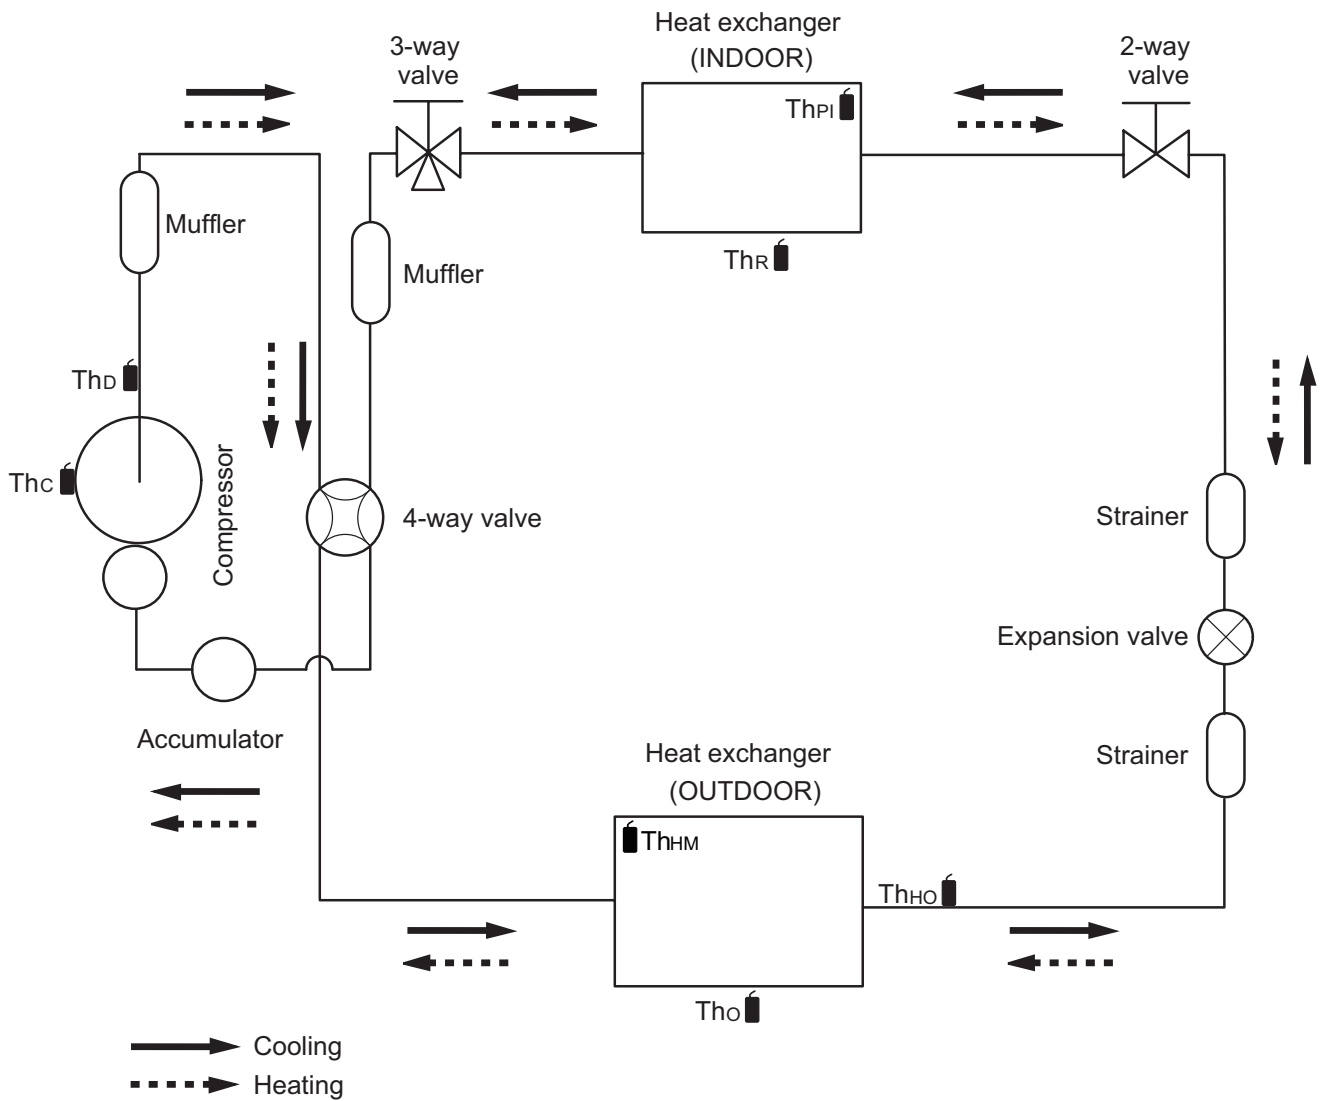

- Thc : Thermistor (Compressor temperature)
- Thd : Thermistor (Discharge temperature)
- Thm : Thermistor (Heat exchanger middle temperature)
- Tho : Thermistor (Outdoor temperature)
- Tho : Thermistor (Heat exchanger out temperature)
- Thpi : Thermistor (Pipe temperature)
- Thr : Thermistor (Room temperature)


# 5. Wiring diagrams

## 5-1. Models: AOUH09KTAP1, AOUH12KTAP1, and AOUH15KTAP1


OUTDOOR UNIT  
AOUH09-15KTAP1

OUTDOOR UNIT  
AOUH09-15KTAP1

COLOR	English/French
BK	BLACK/NOIR
WT	WHITE/BLANC
RD	RED/ROUGE
OR	ORANGE/ORANGE
YL	YELLOW/JAUNE
BN	BROWN/MARRON
GN	GREEN/VERT
BL	BLUE/BLEU

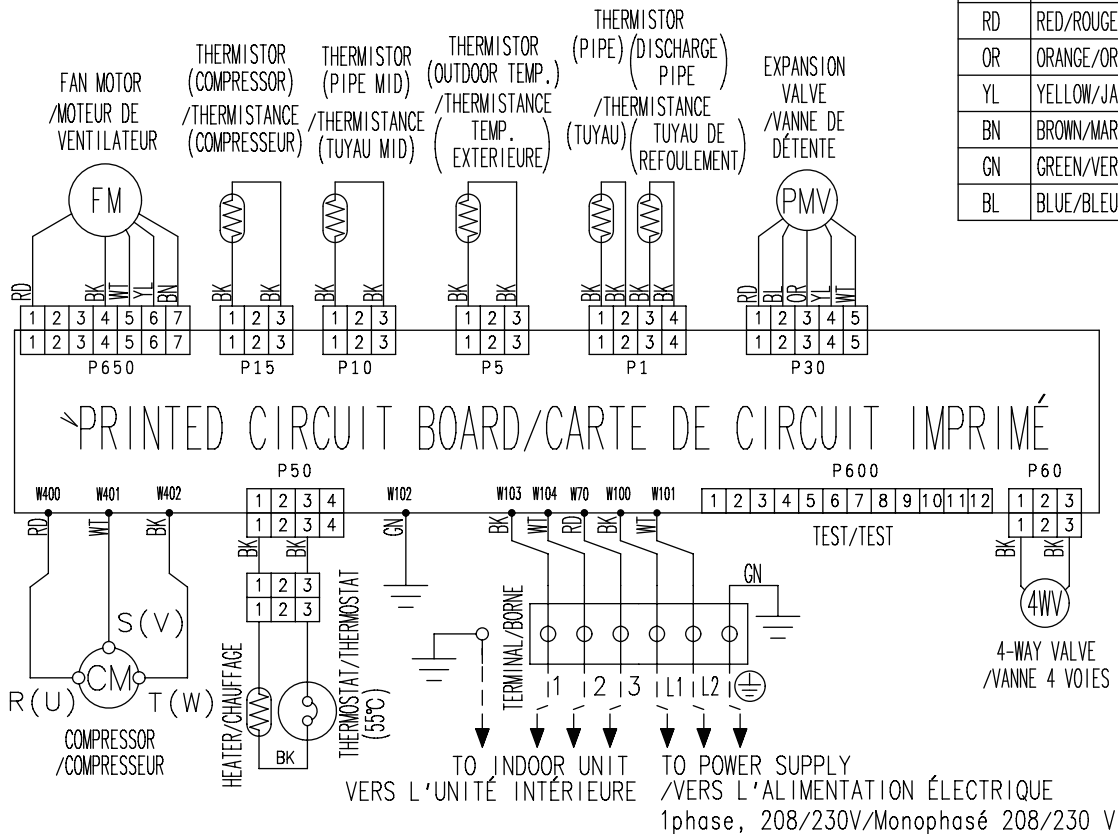

## 6. Capacity compensation rate for pipe length and height difference

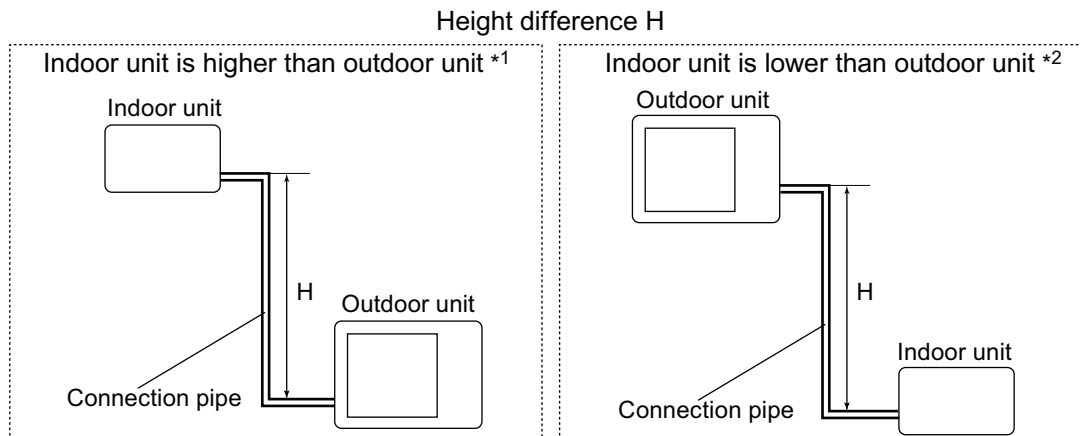

OUTDOOR UNIT  
AOUH09-15KTAP1

OUTDOOR UNIT  
AOUH09-15KTAP1

### 6-1. Models: AOUH09KTAP1, AOUH12KTAP1, and AOUH15KTAP1

**NOTE:** Values mentioned in the table are calculated based on the maximum capacity.

COOLING		Pipe length							
		m	3	5	7.5	10	15	20	
		ft	10	16	24	32	49	66	
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	—	0.942	0.925
		10	32	—	—	—	0.967	0.949	0.932
		7.5	24	—	—	0.980	0.971	0.953	0.936
		5	16	—	0.994	0.984	0.974	0.956	0.939
		3	10	1.005	0.997	0.987	0.977	0.959	0.942
	Indoor unit is lower than outdoor unit *2	0	0	1.018	1.010	1.000	0.990	0.972	0.954
		-3	-10	1.018	1.010	1.000	0.990	0.972	0.954
		-5	-16	—	1.010	1.000	0.990	0.972	0.954
		-7.5	-24	—	—	1.000	0.990	0.972	0.954
		-10	-32	—	—	—	0.990	0.972	0.954
-15	-49	—	—	—	—	0.972	0.954		

HEATING		Pipe length							
		m	3	5	7.5	10	15	20	
		ft	10	16	24	32	49	66	
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	—	0.925	0.895
		10	32	—	—	—	0.972	0.925	0.895
		7.5	24	—	—	1.000	0.972	0.925	0.895
		5	16	—	1.035	1.000	0.972	0.925	0.895
		3	10	1.065	1.035	1.000	0.972	0.925	0.895
	Indoor unit is lower than outdoor unit *2	0	0	1.065	1.035	1.000	0.972	0.925	0.895
		-3	-10	1.053	1.023	0.989	0.961	0.915	0.885
		-5	-16	—	1.022	0.987	0.960	0.913	0.883
		-7.5	-24	—	—	0.985	0.957	0.911	0.881
		-10	-32	—	—	—	0.955	0.909	0.879
-15	-49	—	—	—	—	0.901	0.871		

## 7. Additional charge calculation

### 7-1. Model: AOUH09KTAP1

Refrigerant type		R32
Factory charge amount	lb oz	2 lb 11 oz
	g	1,220

#### ■ Refrigerant charge

Total pipe length	ft	49 or less	66 (Max.)	0.22 oz/ft (20 g/m)
	m	15 or less	20 (Max.)	
Additional charge amount	oz	0	3.5	
	g	0	100	

### 7-2. Model: AOUH12KTAP1

Refrigerant type		R32
Factory charge amount	lb oz	2 lb 15 oz
	g	1,320

#### ■ Refrigerant charge

Total pipe length	ft	49 or less	66 (Max.)	0.22 oz/ft (20 g/m)
	m	15 or less	20 (Max.)	
Additional charge amount	oz	0	3.5	
	g	0	100	

### 7-3. Model: AOUH15KTAP1

Refrigerant type		R32
Factory charge amount	lb oz	3 lb 1 oz
	g	1,390

#### ■ Refrigerant charge

Total pipe length	ft	49 or less	66 (Max.)	0.22 oz/ft (20 g/m)
	m	15 or less	20 (Max.)	
Additional charge amount	oz	0	3.5	
	g	0	100	

## 8. Airflow

### 8-1. Model: AOUH09KTAP1

#### ● Cooling

m <sup>3</sup> /h	1,930
l/s	536
CFM	1,136

#### ● Heating

m <sup>3</sup> /h	1,770
l/s	492
CFM	1,042

### 8-2. Model: AOUH12KTAP1

#### ● Cooling

m <sup>3</sup> /h	2,340
l/s	650
CFM	1,377

#### ● Heating

m <sup>3</sup> /h	1,880
l/s	522
CFM	1,107

### 8-3. Model: AOUH15KTAP1

#### ● Cooling

m <sup>3</sup> /h	2,500
l/s	695
CFM	1,472

#### ● Heating


m <sup>3</sup> /h	2,040
l/s	567
CFM	1,201

# 9. Operation noise (sound pressure)


## 9-1. Noise level curve

### Model: AOUH09KTAP1

#### Cooling

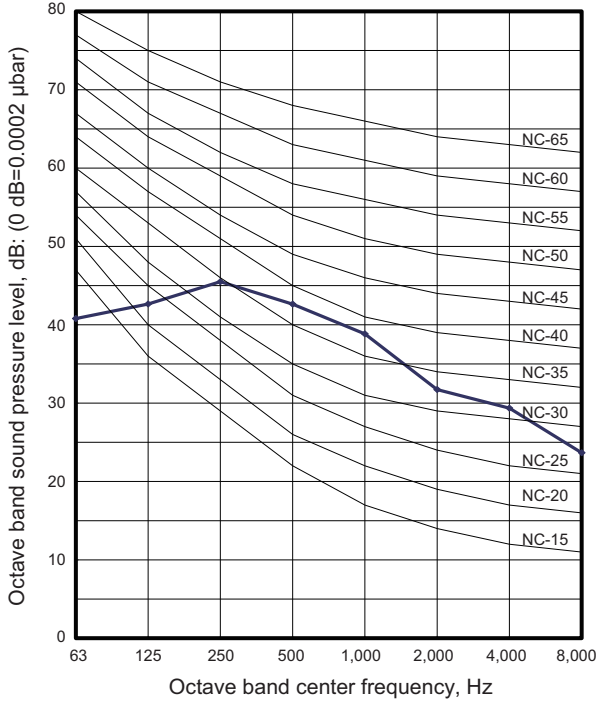


#### Heating

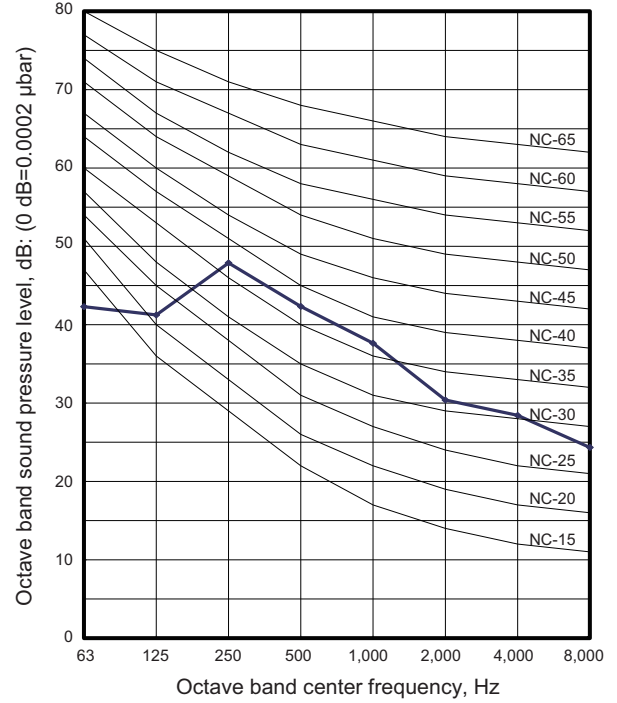


### Model: AOUH12KTAP1

#### Cooling

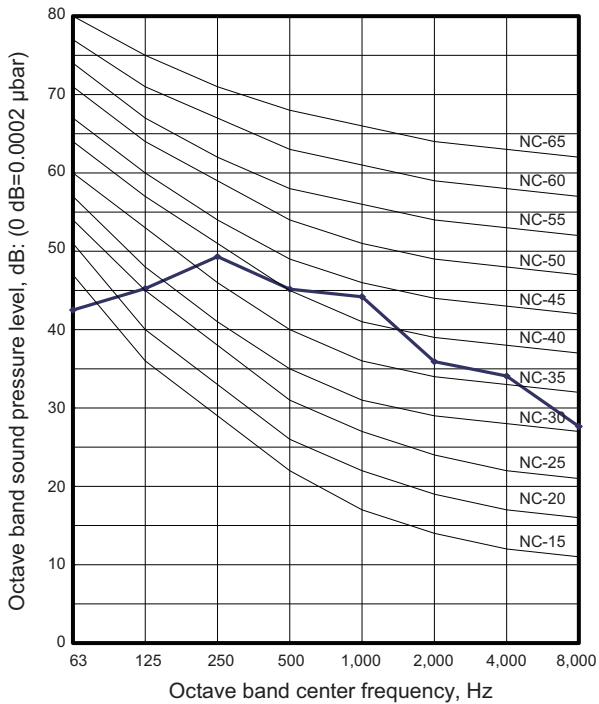

#### Heating

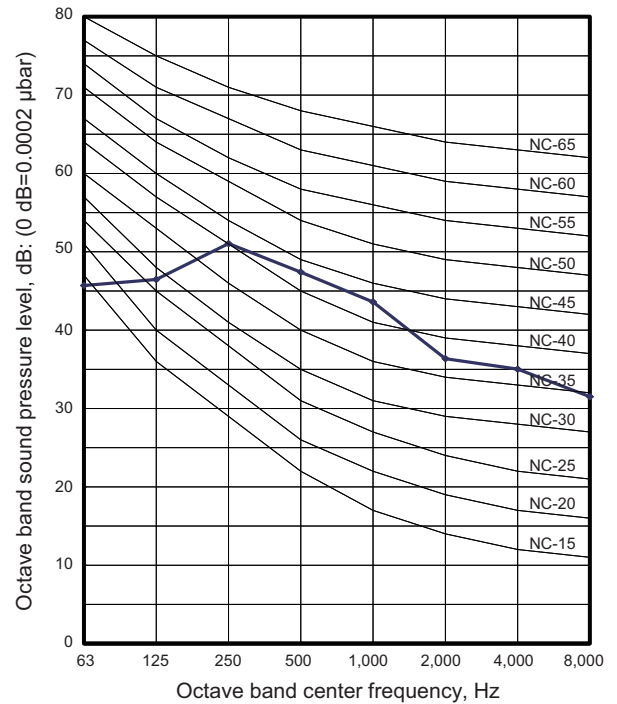


OUTDOOR UNIT  
AOUH09-15KTAP1


OUTDOOR UNIT  
AOUH09-15KTAP1

# Model: AOUH15KTAP1

## Cooling

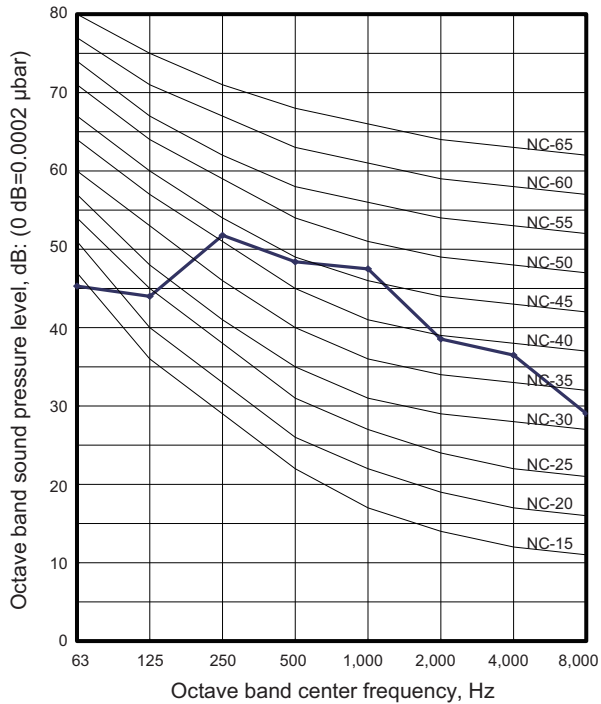


## Heating

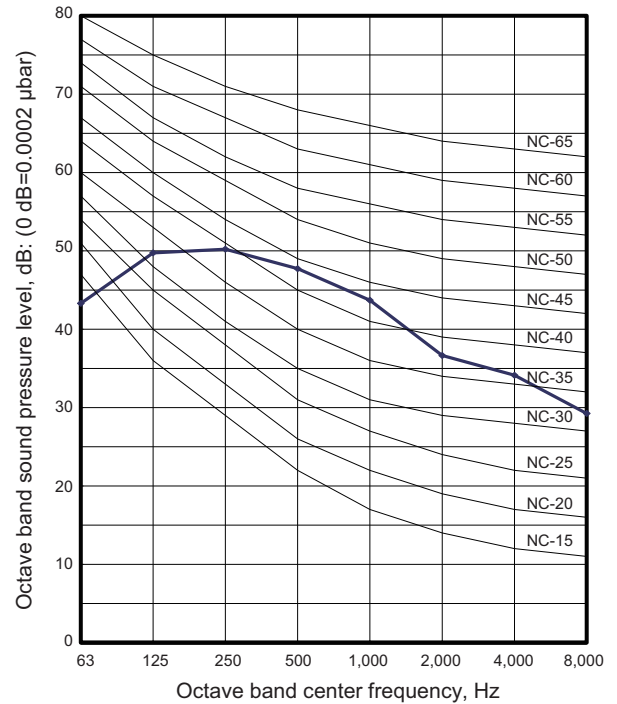

OUTDOOR UNIT  
AOUH09-15KTAP1

OUTDOOR UNIT  
AOUH09-15KTAP1

## 9-2. Sound level check point

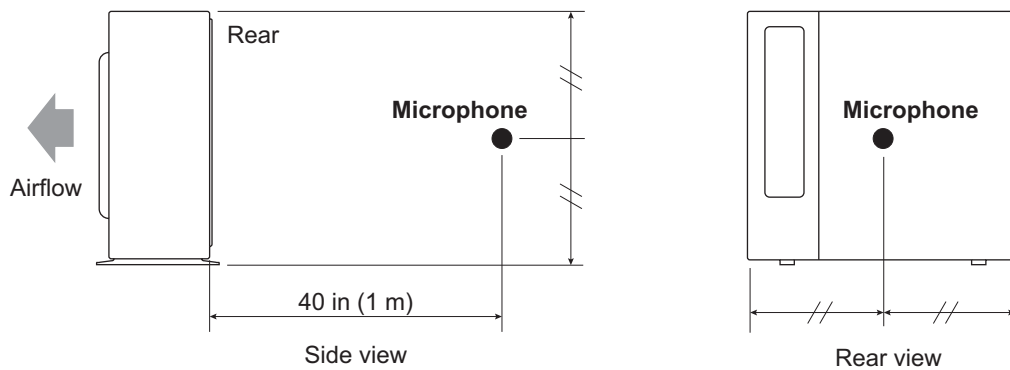

**NOTE:** Detailed shape of the actual outdoor unit might be slightly different from the one illustrated above.

## 10. Electrical characteristics

Model name			AOUH09KTAP1	AOUH12KTAP1	AOUH15KTAP1
Power supply	Voltage	V	208/230		
	Frequency	Hz	60		
MCA* <sup>1</sup>		A	13.2	15.7	19.4
Starting current		A	3.0	4.2	4.9
Wiring spec.* <sup>2</sup>	MAX. CKT. BKR* <sup>3</sup>		A	15	20
	Power cable		AWG	14	
	Connection cable* <sup>4</sup>	Size	AWG	14	
		Limited wiring length	ft (m)	69 (21)	

### NOTES:

- \*1: Minimum Circuit Ampacity (Calculation based on UL60335-2-40)
- \*2: Selected sample based on Japan Electrotechnical Standards and Codes Committee E0005. As the regulations of wire size and circuit breaker differ in each country or region, select appropriate devices complied to the regional standard.
- \*3: Maximum Circuit Breaker
- \*4: Limit voltage drop to less than 2%. If voltage drop is 2% or more, increase cable conductor size.




# 11. Safety devices

Type of protection	Protection form	Model		
		AOUH09KTAP1	AOUH12KTAP1	AOUH15KTAP1
Circuit protection	Current fuse (PCB*)	250 V, 25 A		
	Current fuse (Base pan heater)	250 V, 5 A		
Fan motor protection	Thermal protection program	Activate	257±18°F (125±10°C) Fan motor stop	
		Reset	248±18°F (120±10°C) Fan motor restart	
Compressor protection	Thermal protection program (Compressor temp.)	Activate	226°F (108°C) Compressor stop	
		Reset	After 3 minutes, and 80°C or less Compressor restart	
	Thermal protection program (Discharge temp.)	Activate	230°F (110°C) Compressor stop	
		Reset	After 7 minutes Compressor restart	
	Thermal protection program (Outdoor temp.) (Only in COOL and DRY mode)	Activate	5°F (-15°C) Compressor stop	
		Reset	14°F (-10°C) Compressor restart	

\*PCB: Printed Circuit Board

## 12. Accessories

### 12-1. Models: AOUH09KTAP1, AOUH12KTAP1, and AOUH15KTAP1

Part name	Exterior	Qty	Part name	Exterior	Qty
Installation manual		1	Protection label		1
Cable tie		2			